



MACCHINA DA CAFFÈ SUPER AUTOMATICA SUPER AUTOMATIC COFFEE MACHINE

DE'LONGHI ECAM 23.420 (INT/A/CH/IT/CN) - ECAM 23.426 (DE)

DATI TECNICI / TECHNICAL DATA / TECHNISCHE DATEN / DONNEES TECHNIQUES /
DATOS TECNICOS

Voltaggio / Voltage / Spannung / Voltage / Voltaje V / Hz 220 - 240 / 50-60

Max. potenza assorbita / Max. input power W 1450


SEZIONE CAFFÈ / COFFEE SECTION

Sonda termica / Temperature probe °C 98 (Caffè / Acqua calda)
(Coffee / Hot water)

Fusibile termico TCO / Thermal fuse TCO °C 192


Potenza resistenza riscaldamento / Heater power W 1400

Pompa / Pump Type / W ULKA EP5W / 48

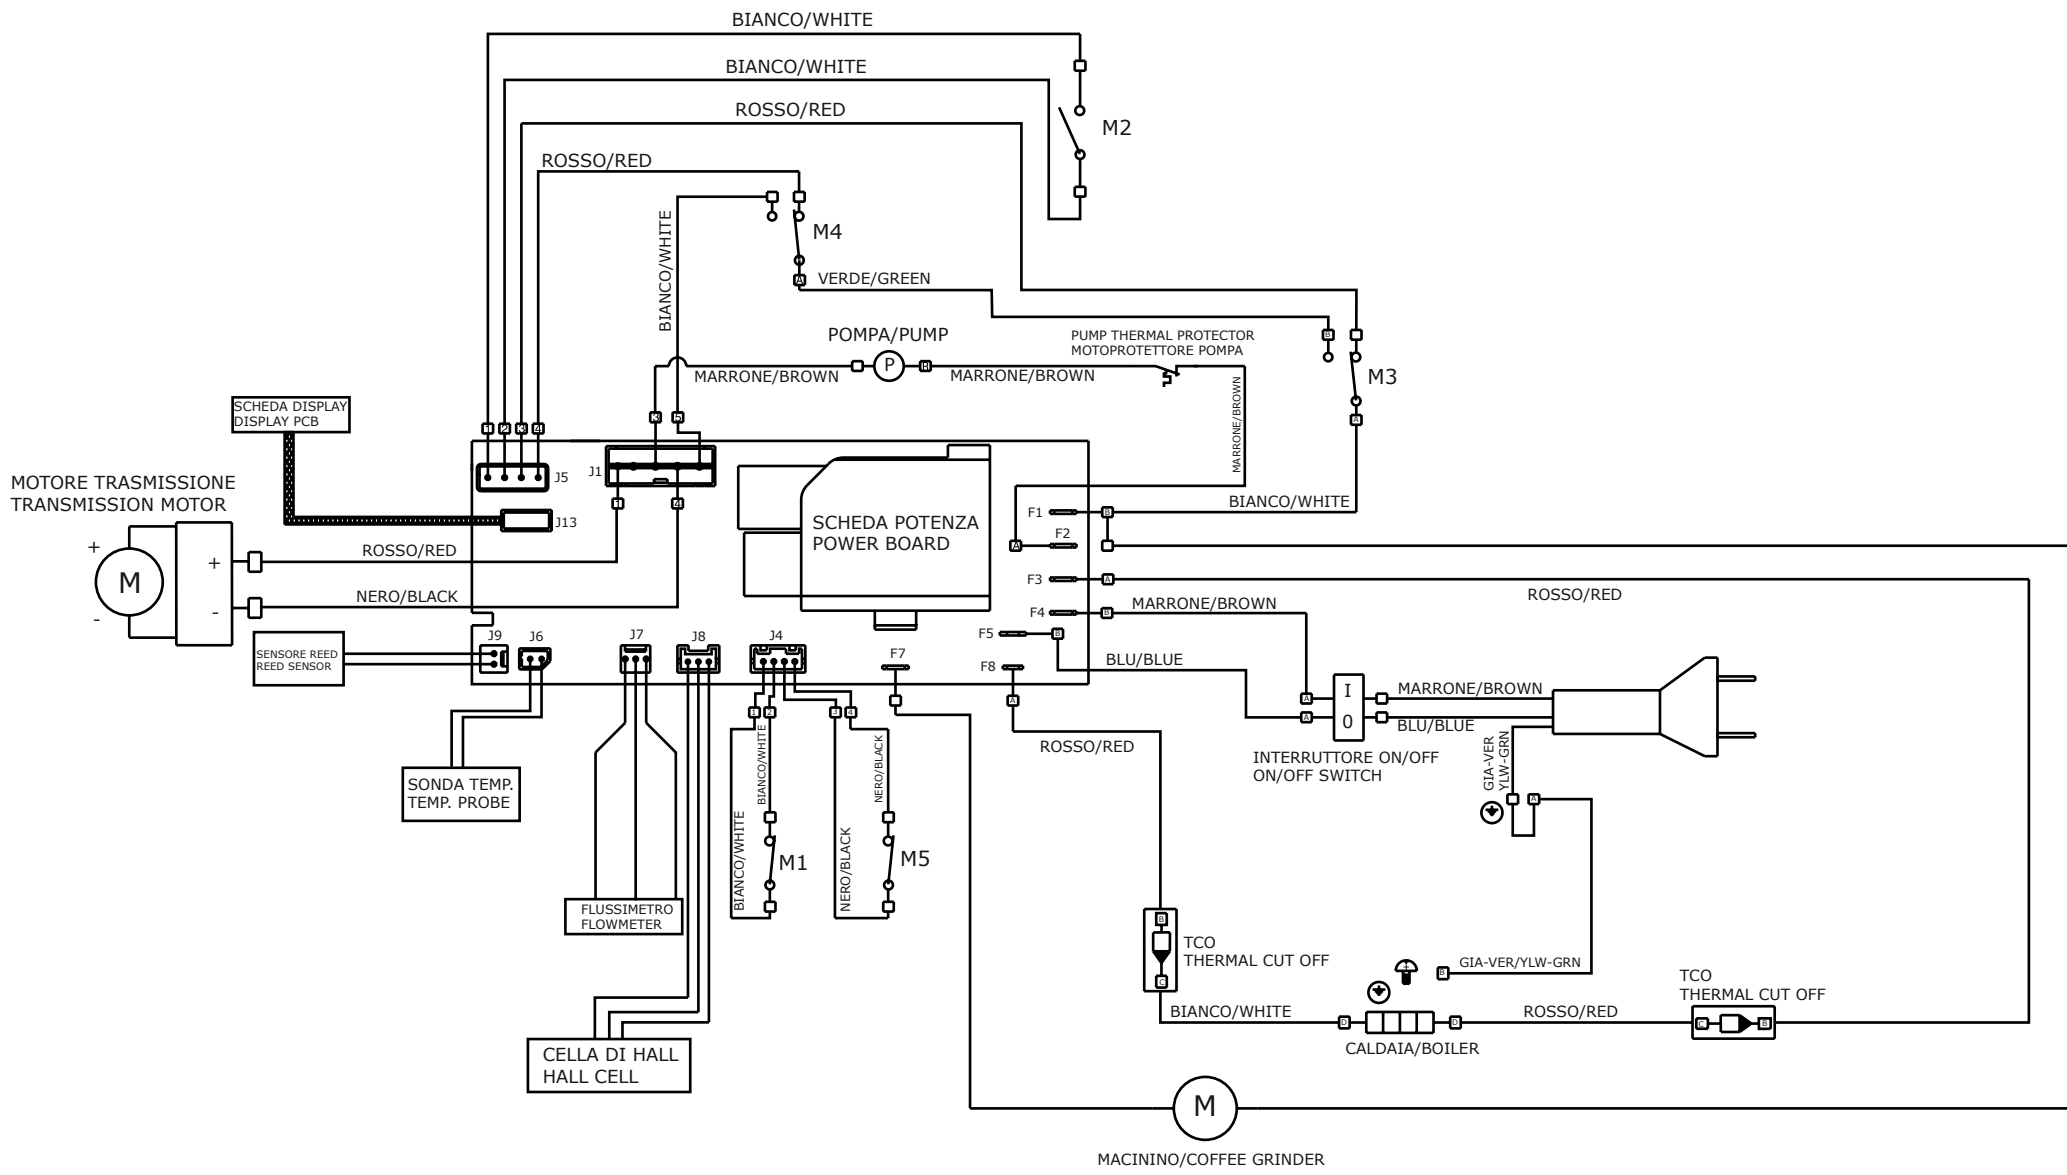


LEGENDA MICRO / MICROSCHITES	
M1	Infusore alto / Infuser top position
M2	Infusore basso / Infuser bottom position
M3	Cassetto fondi / Coffee grounds container
M4	Tanica / Tank
M5	Rubinetto / Tap


SCHEMA ELETTRICO / ELECTRICAL DIAGRAM

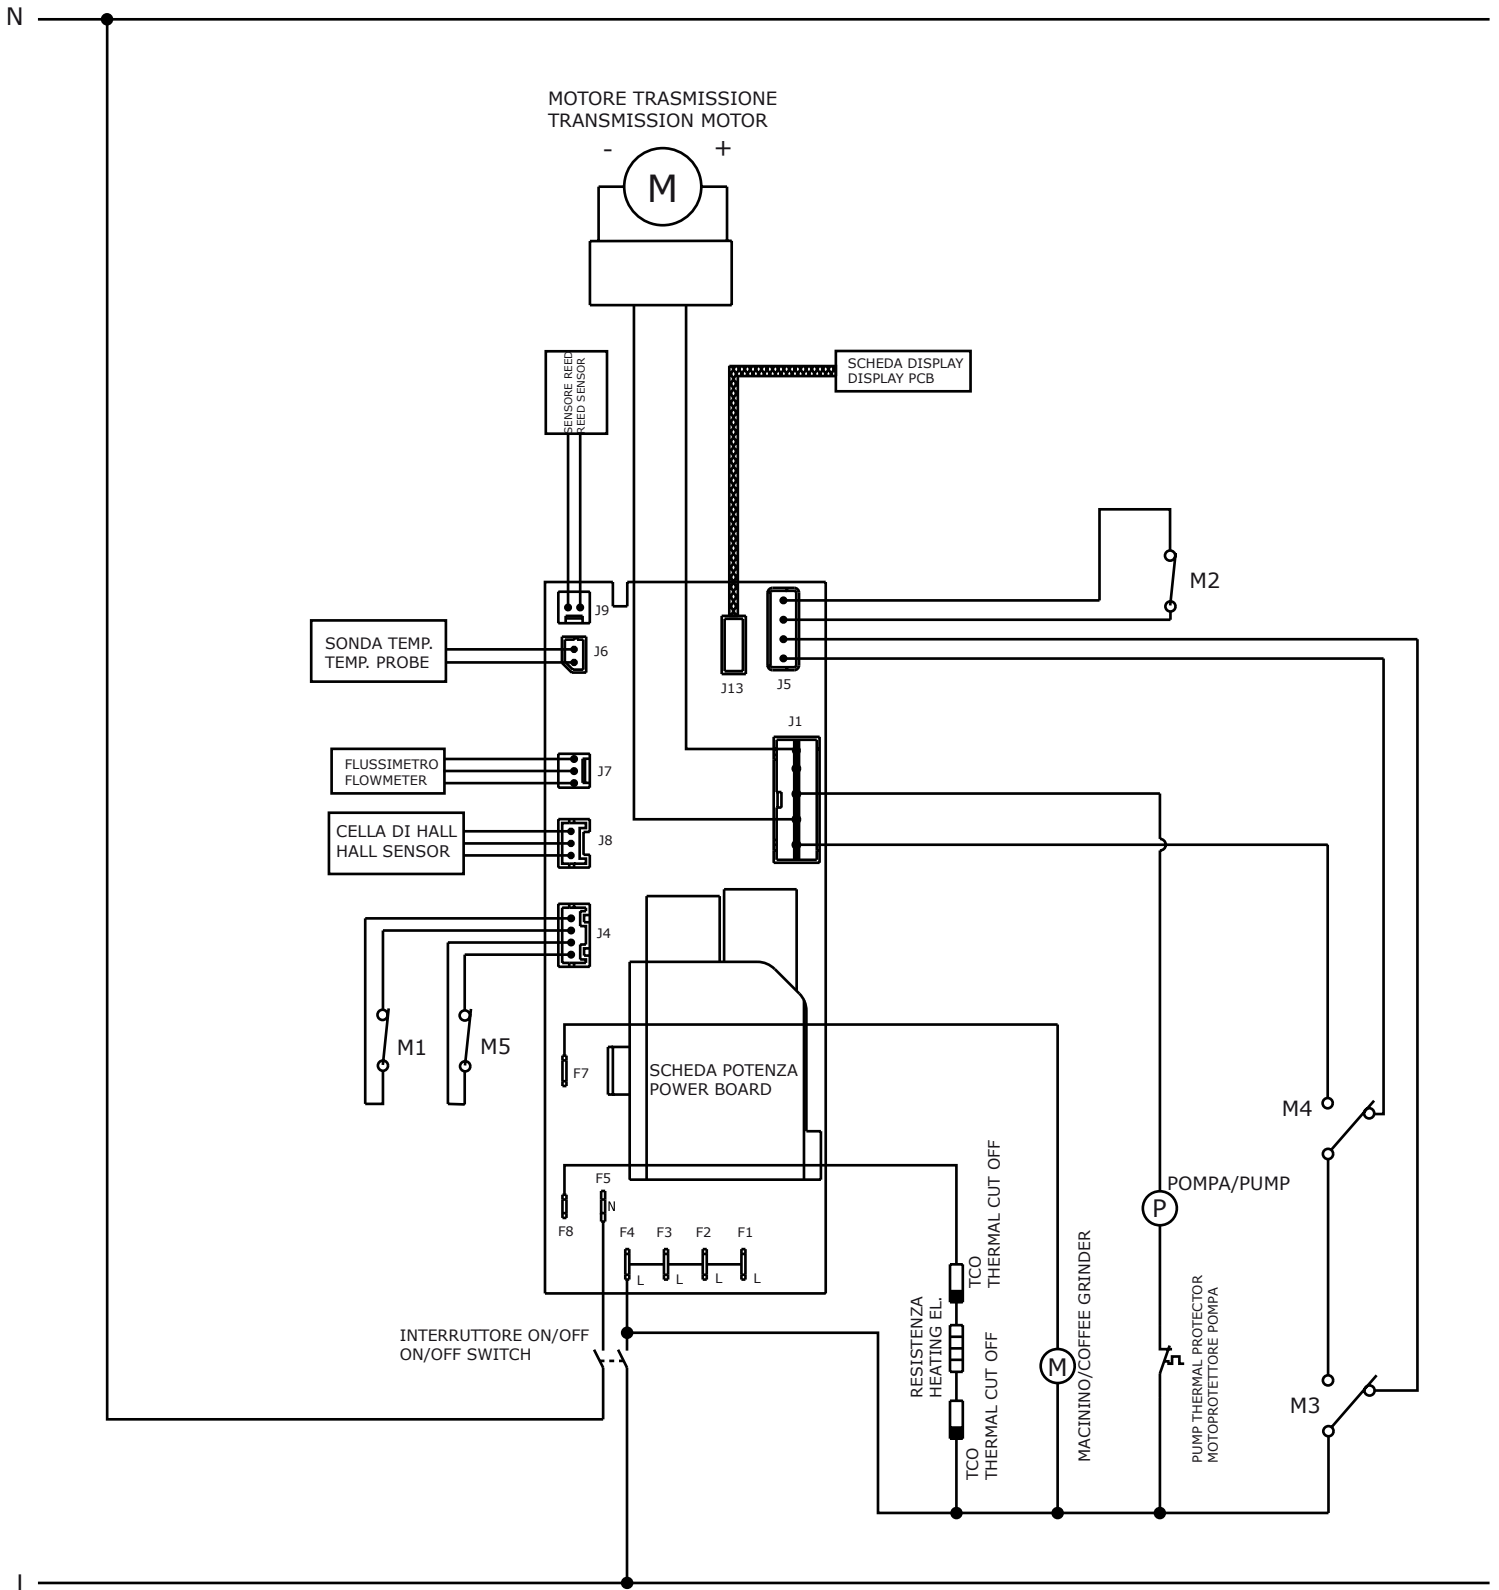


ACCESSIBILITY

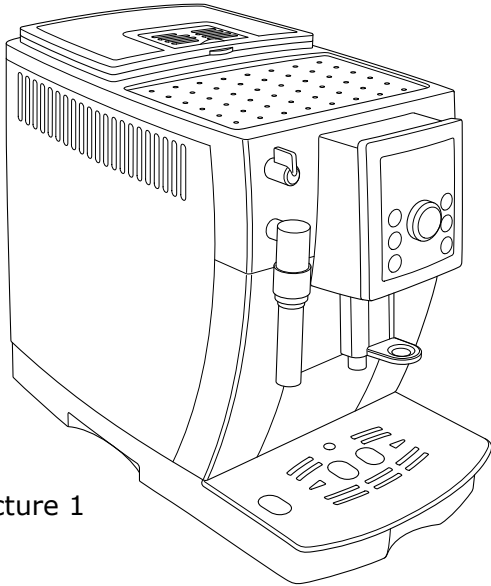


Picture 1

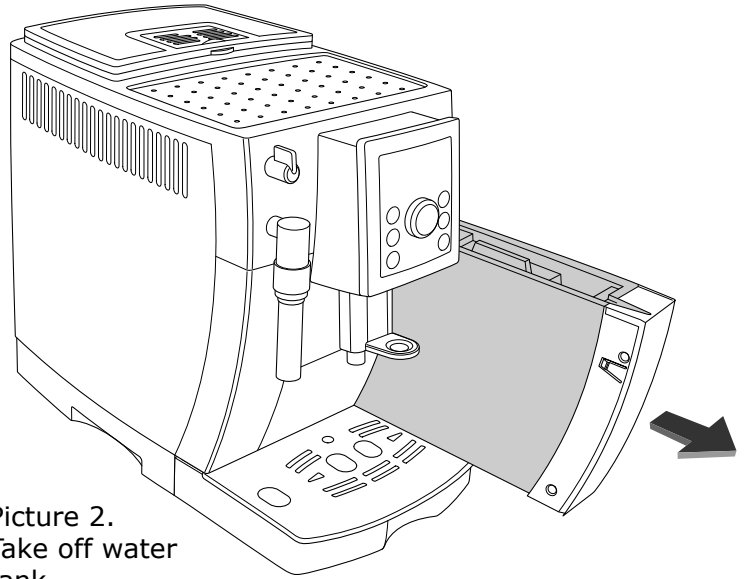


Picture 2.
Take off water tank

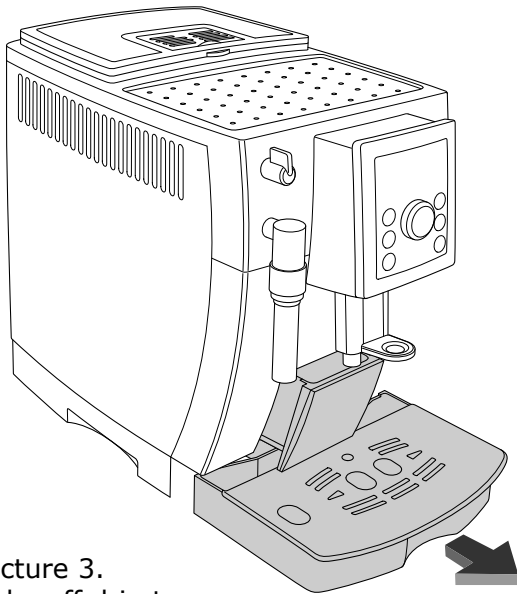


Picture 3.
Take off drip tray
and waste container

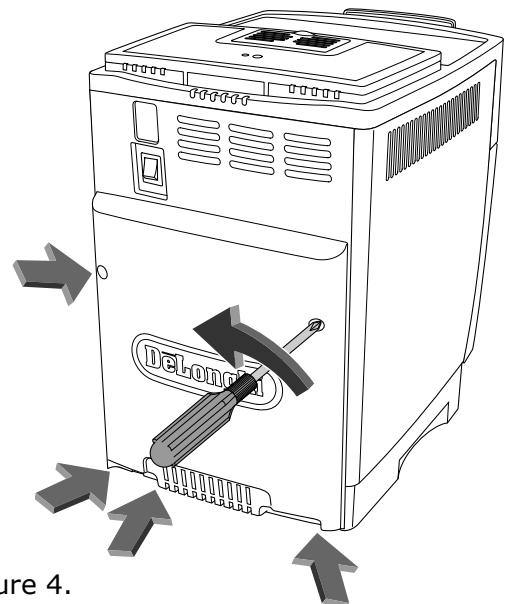

Picture 4.
Unscrew the 5 indicated screws
(Torx T20)

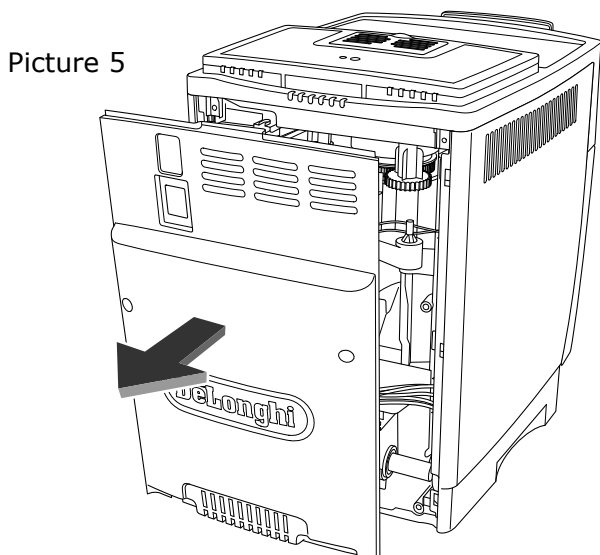


5.1 Remove back panel

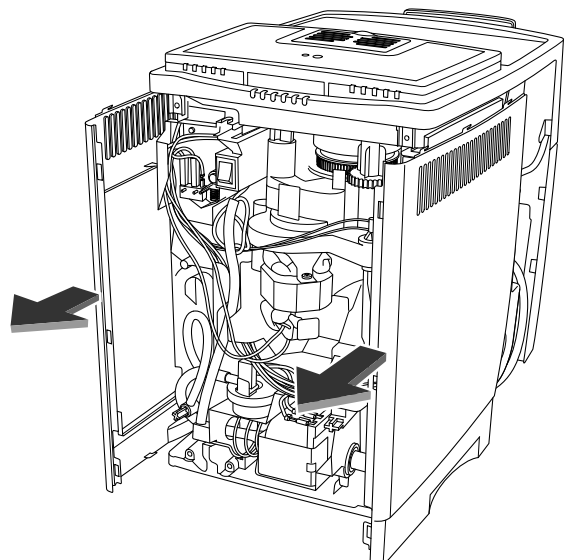


5.2 Unhook side panels


Picture 6 - **TO REMOVE CONTROL PANEL**

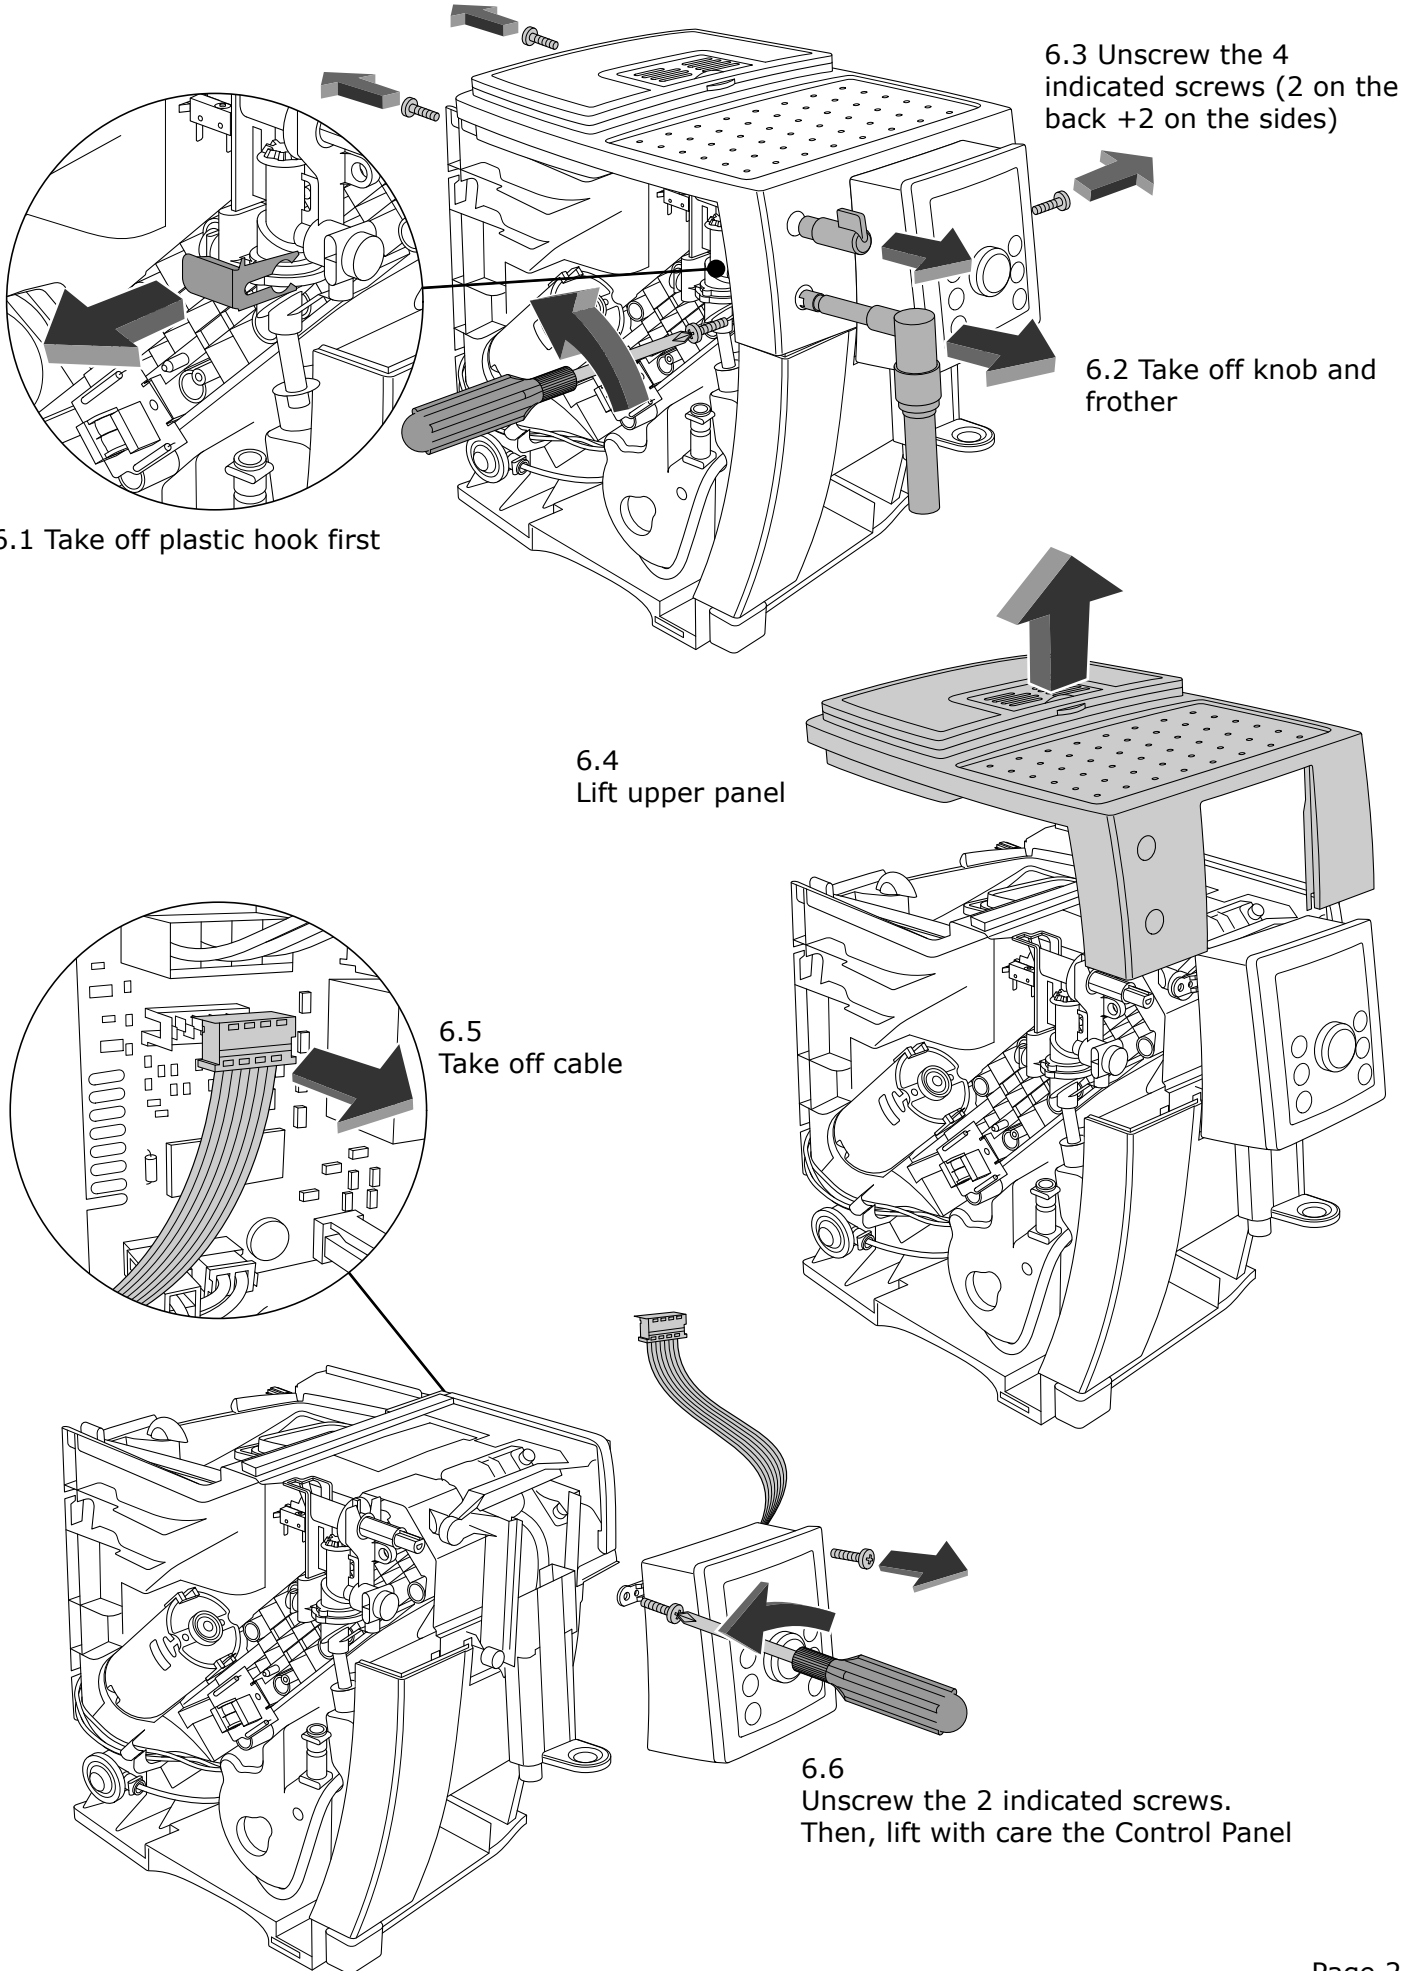

Picture 7 - TO REMOVE COFFEE GRINDER



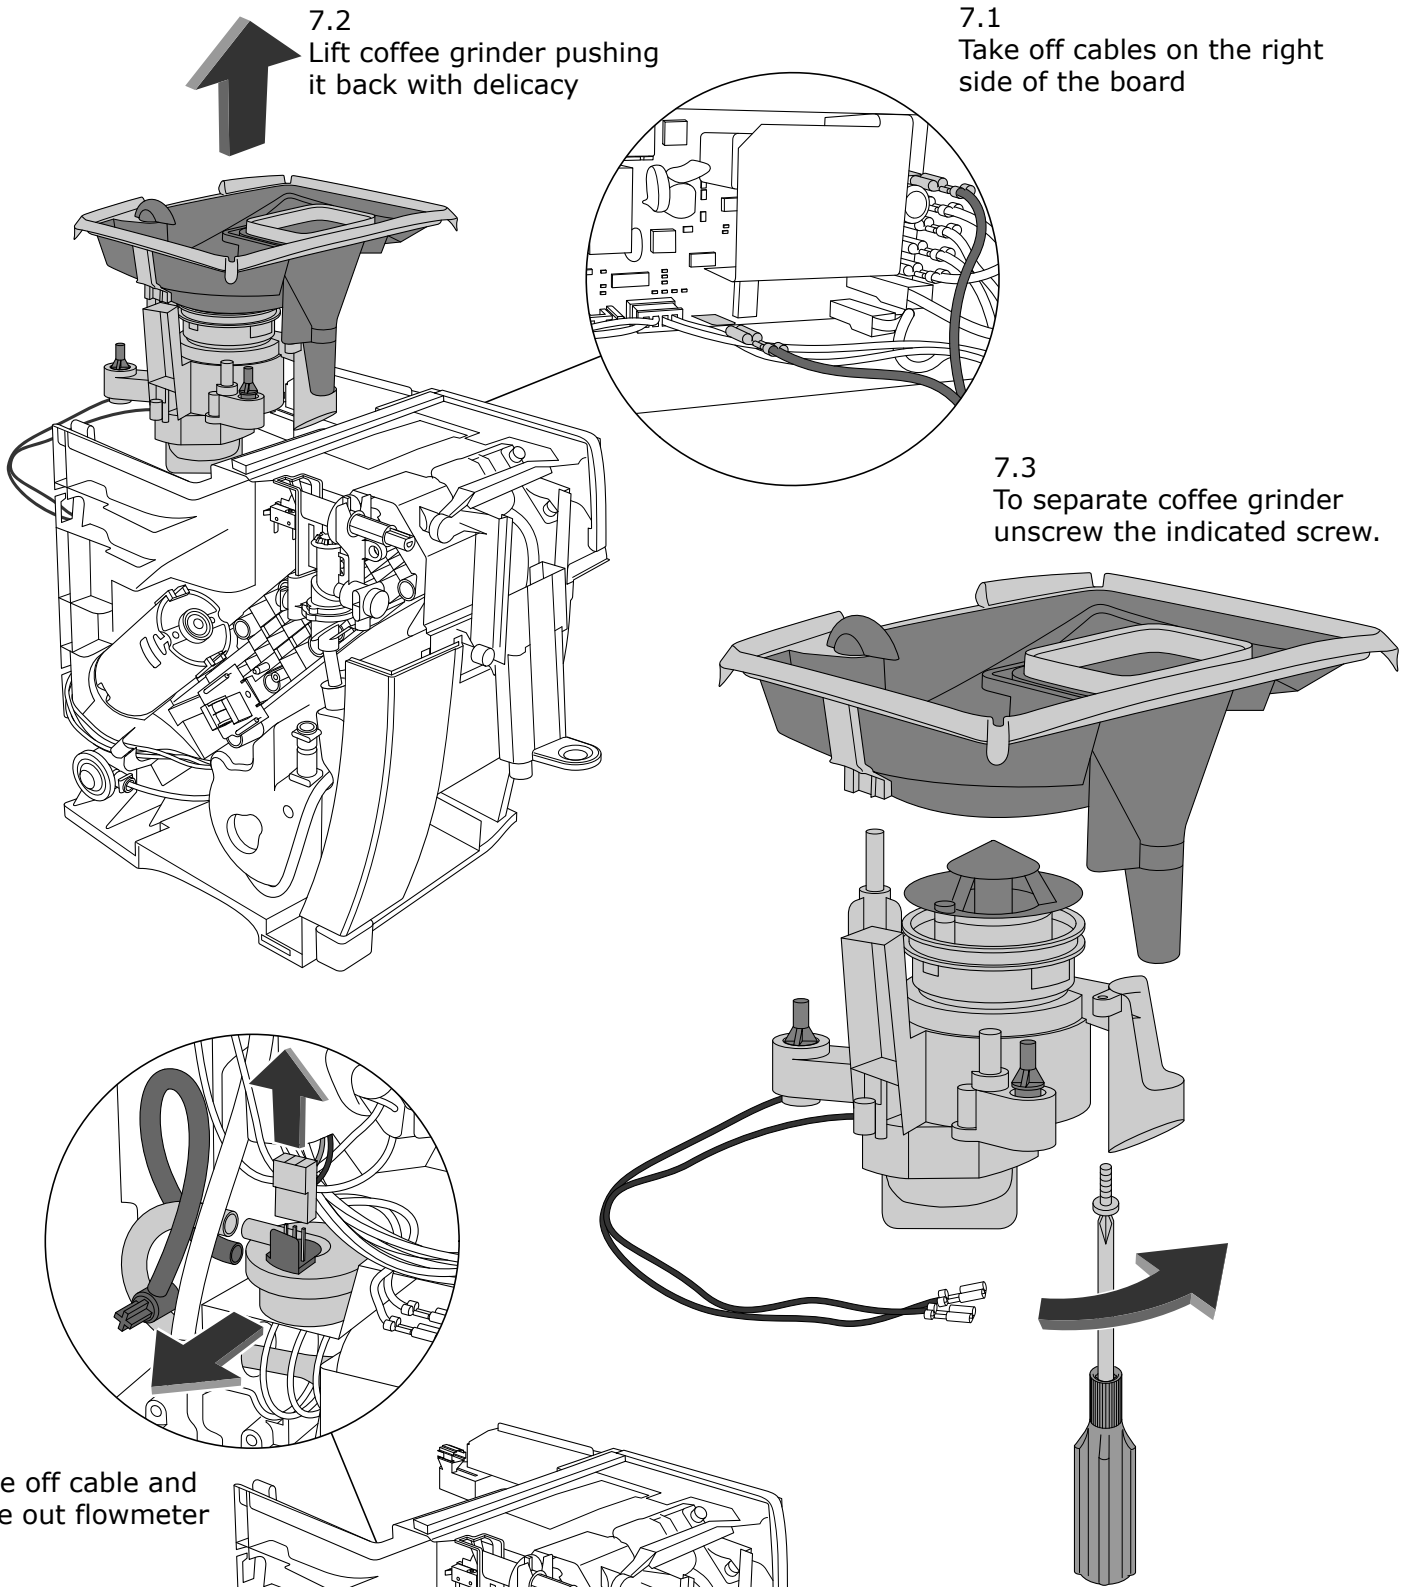


Picture 8 - TO REMOVE FLOWMETER

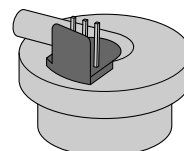


9.2
Take off pump

Picture 9 - **TO REMOVE PUMP**

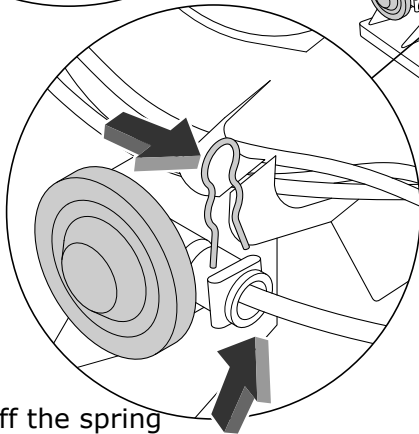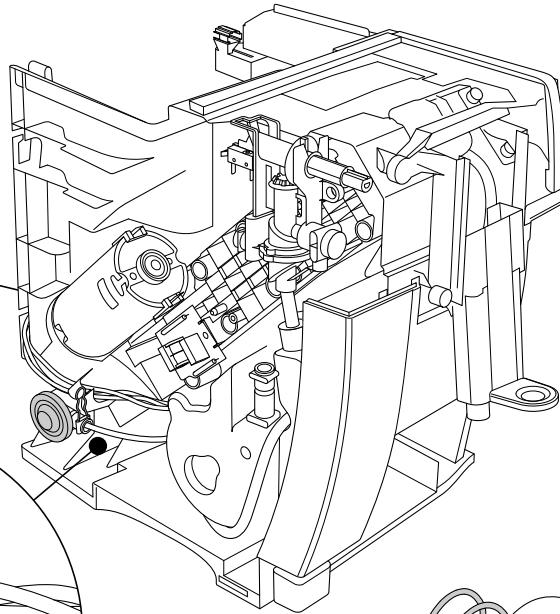
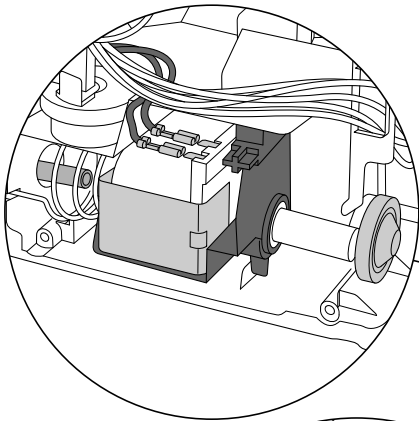


9.1
Take off the spring
and then the tube
Attention: Some water could come out
from the tube, since the water circuit is
emptying out

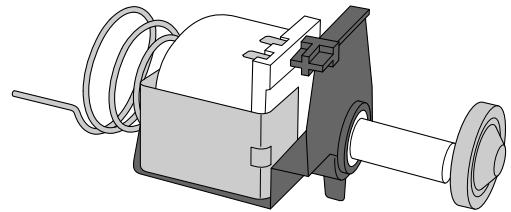

9.3
Attention: After you have taken off cables,
you will have to take off pump thermal protector.
Since it is glued, you will have to use a certain strength.
Remember to glue it again when you will reassemble it


Picture 10 - **TO REMOVE BOARD**

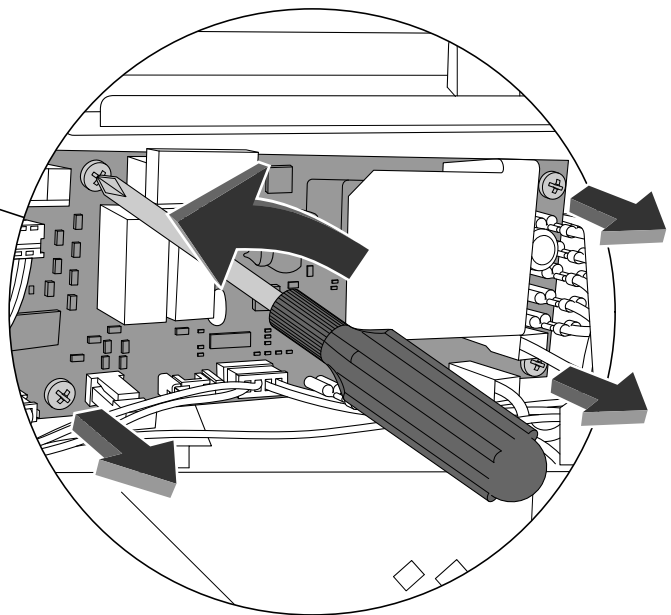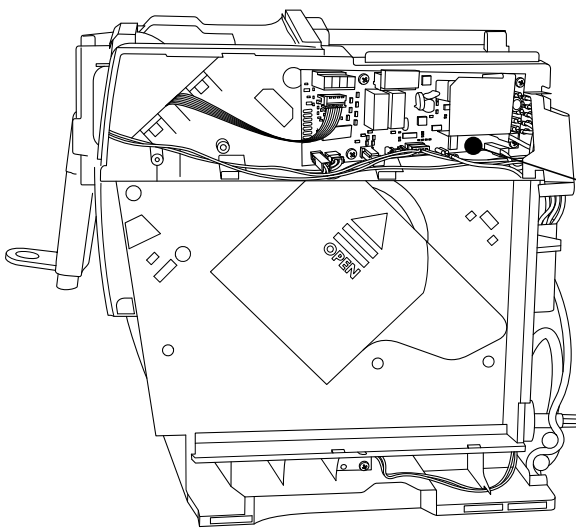

10.1
Take off the 4 indicated screws. After you have taken off cables, take out the board


11.1
Unscrew the 4 indicated screw
you find on the rear of the motor

Picture 11 - **TO REMOVE MOTOR**

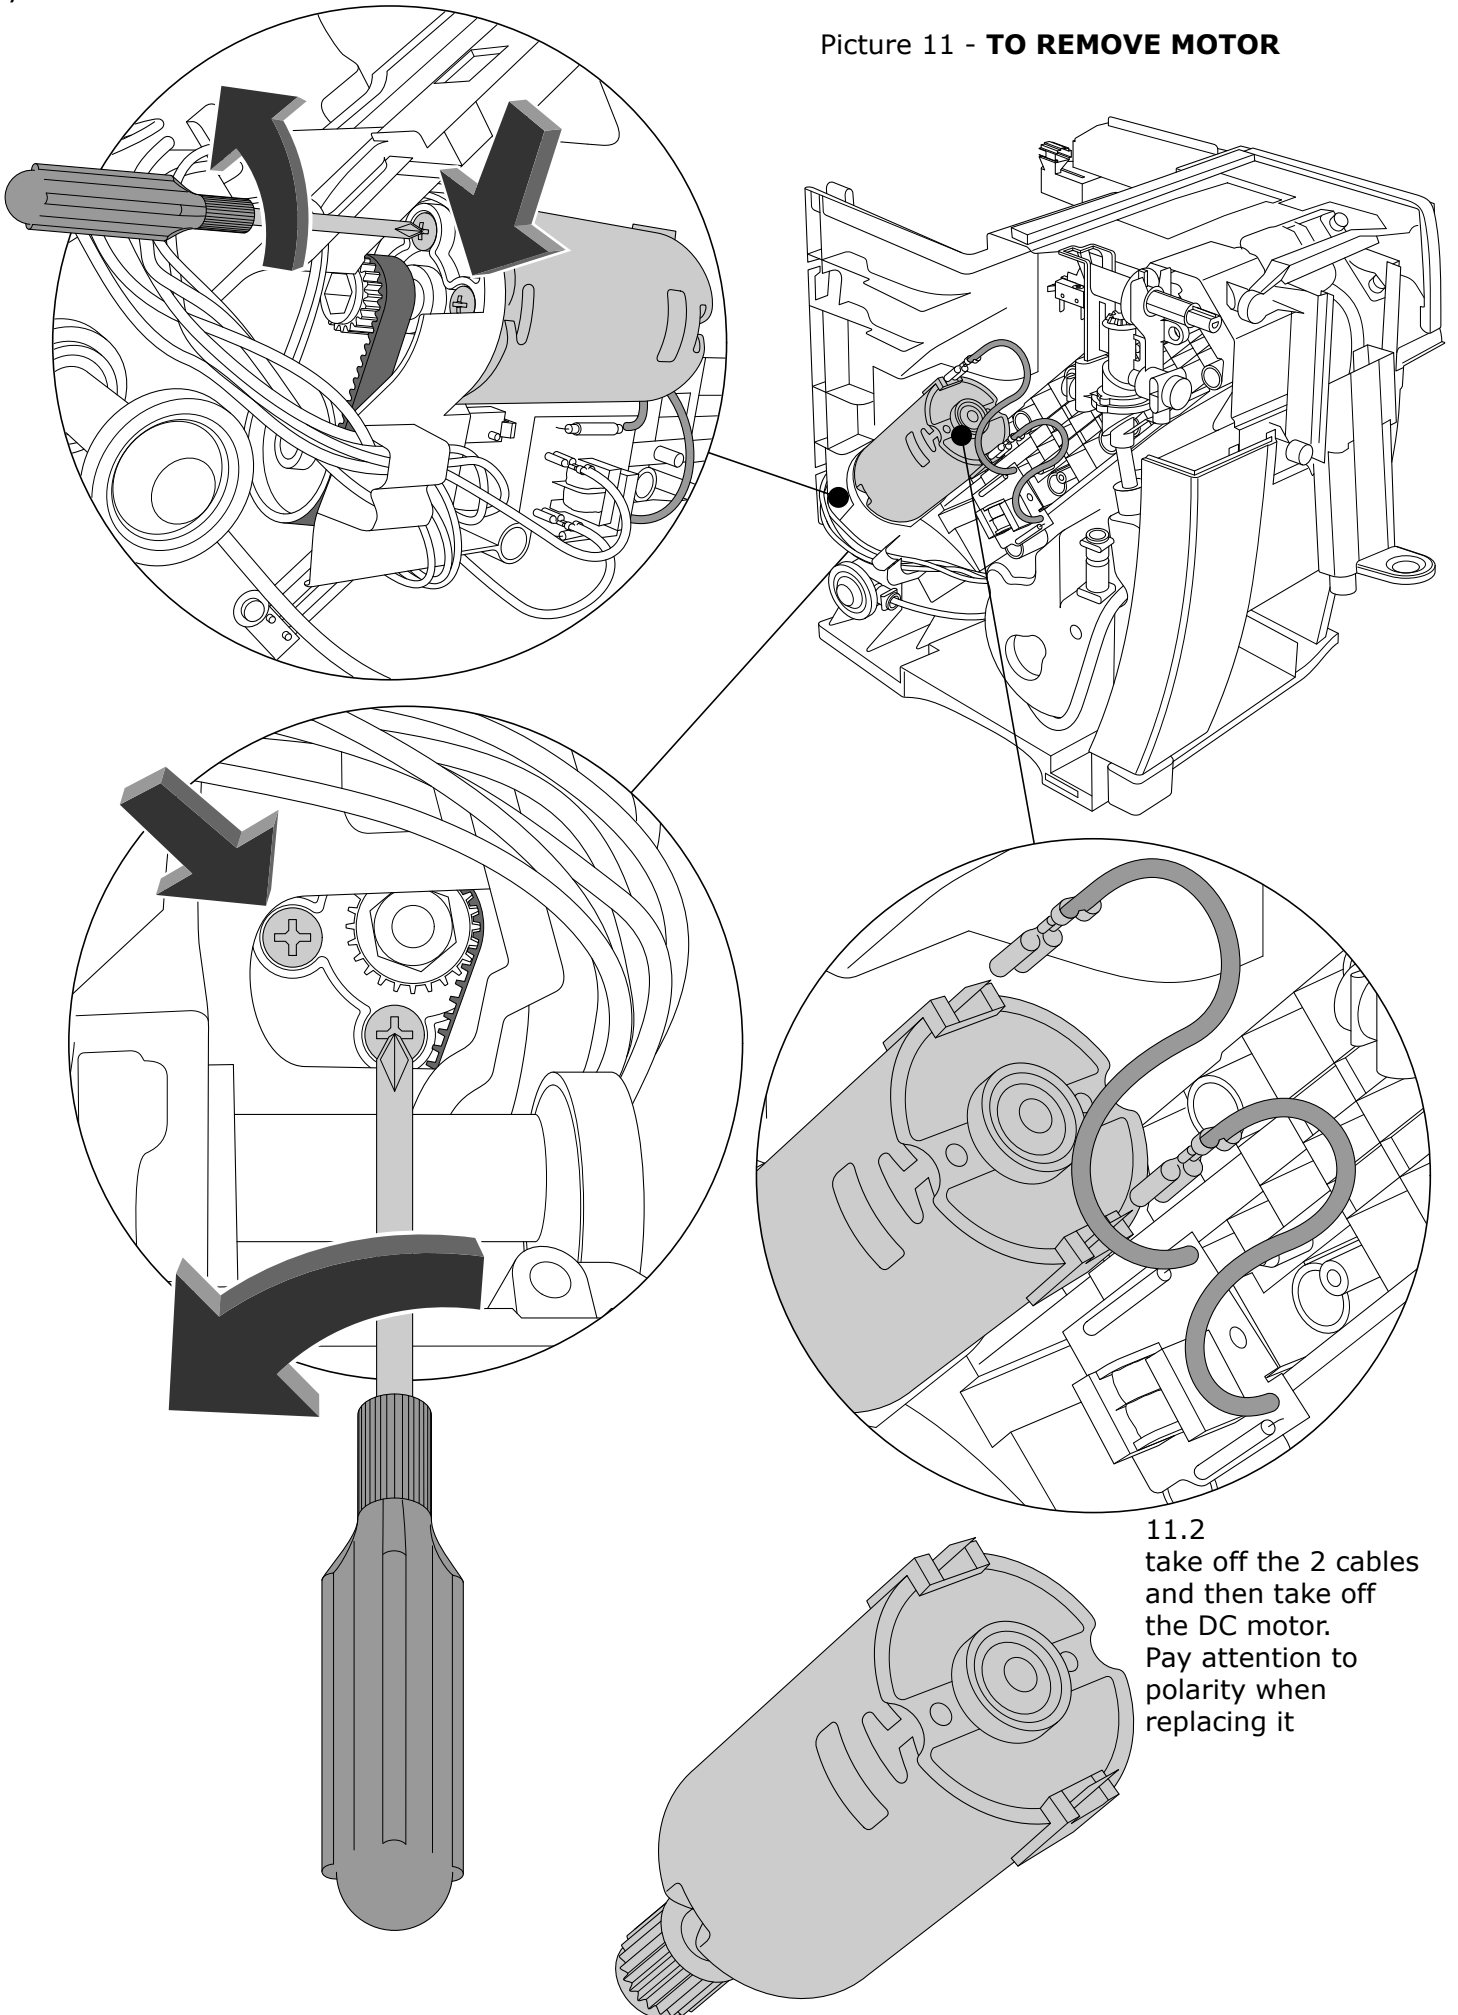


11.2
take off the 2 cables
and then take off
the DC motor.
Pay attention to
polarity when
replacing it



12.1
Take off cables

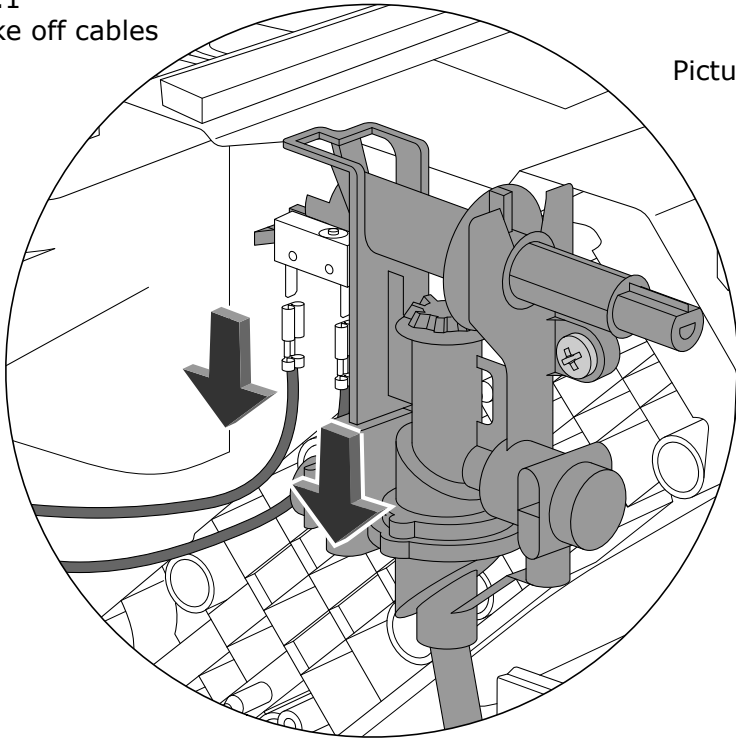


Picture 12 - **TO REMOVE TAP STEAM/HOT WATER**

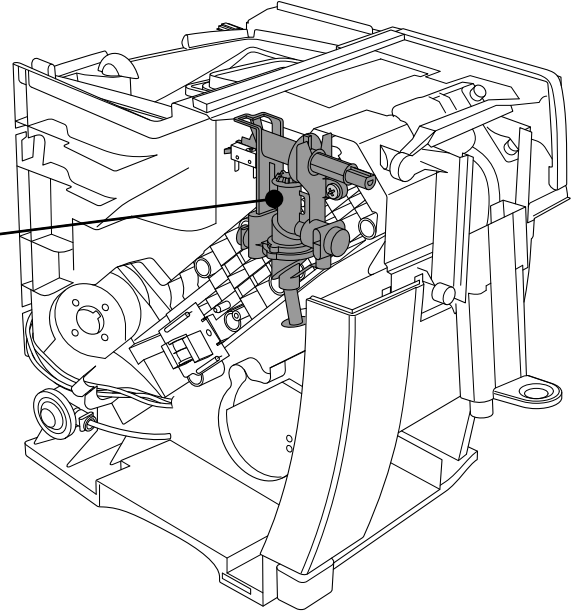


12.2
Unscrew the 2 indicated screws

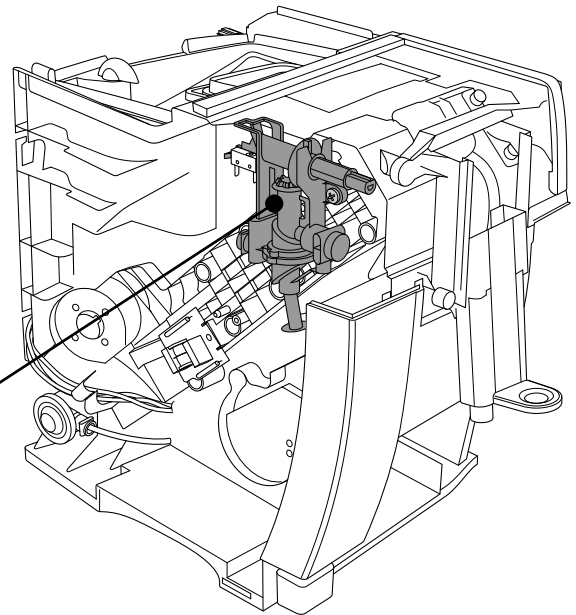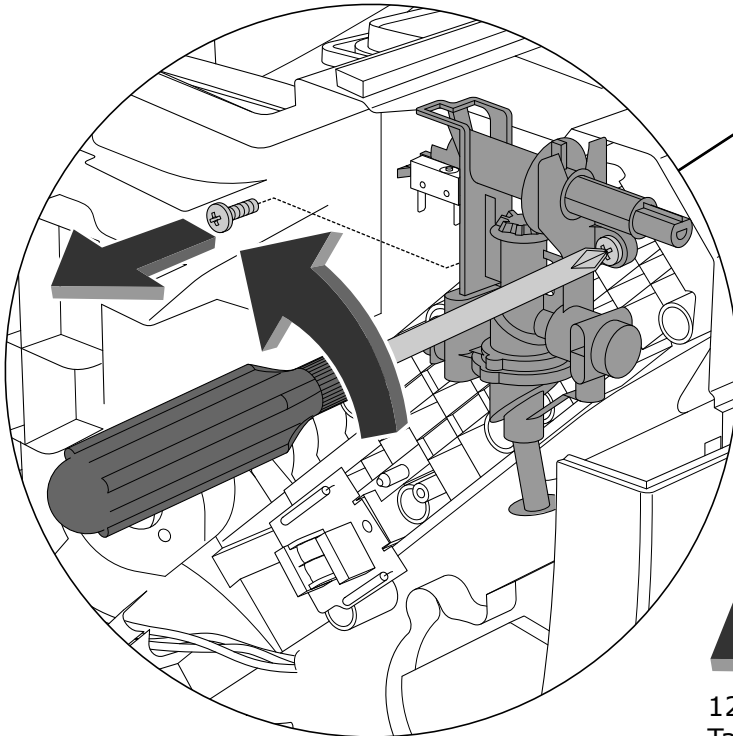

12.3
Take off microswitch

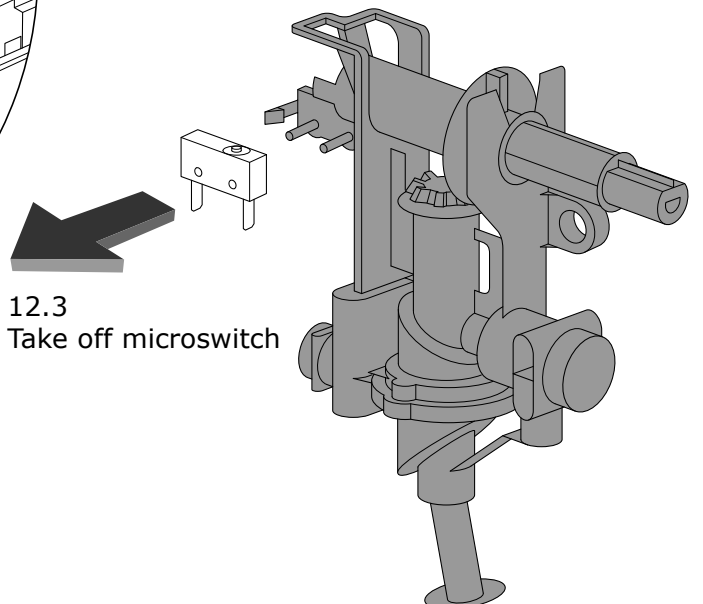


13.3
Take off the spring
indicated by the arrow and
then the tube

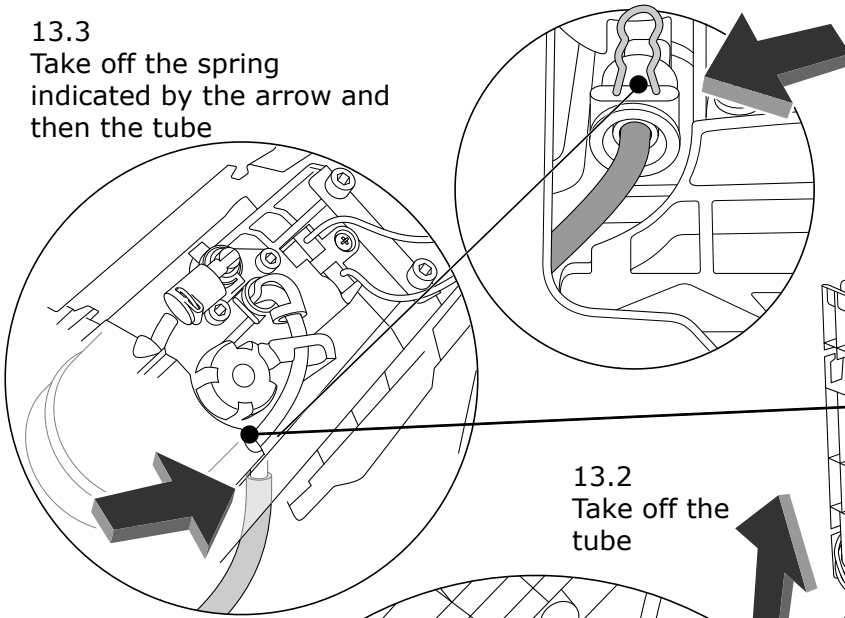


Picture 13 - **TO REMOVE BOILER**

13.2
Take off the
tube


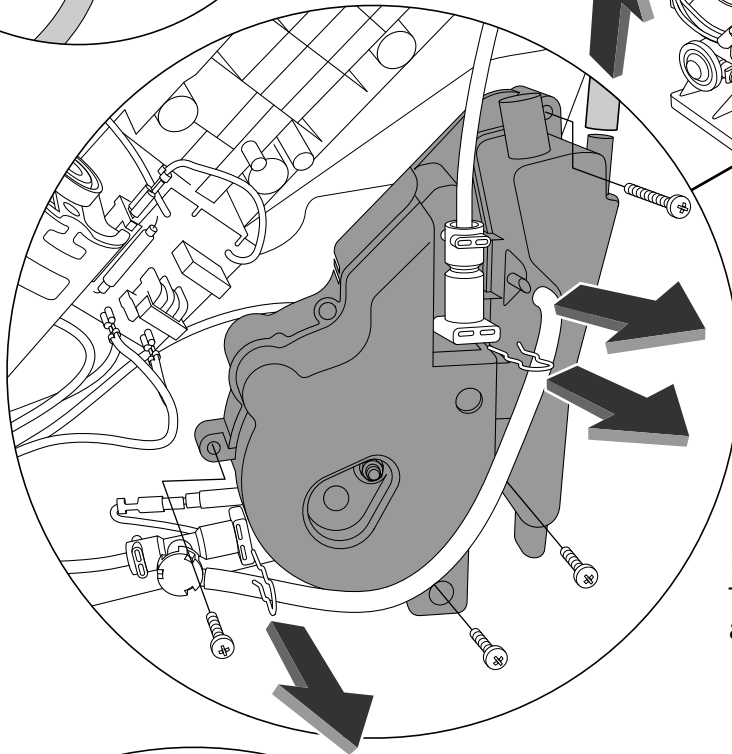


Attention: to take off the boiler,
push with delicacy the plastic panel

13.1
Take off the indicated 2 springs
and the 4 screws.

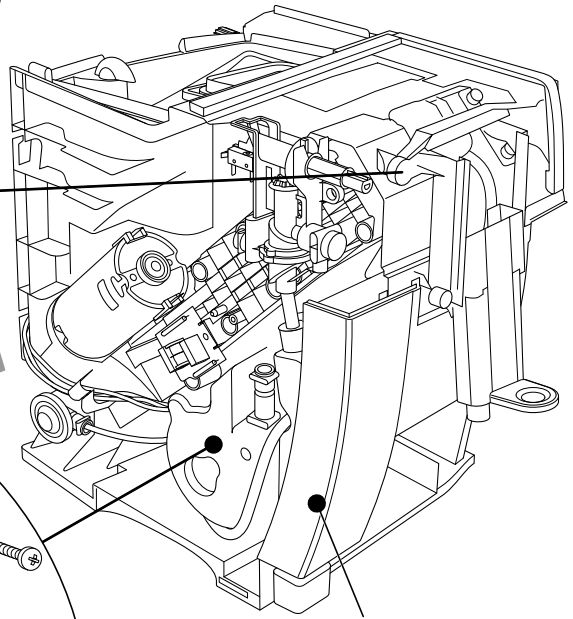

13.4
Take off the cover.
Then unscrew the 2 indicated
screws to disassemble
the boiler

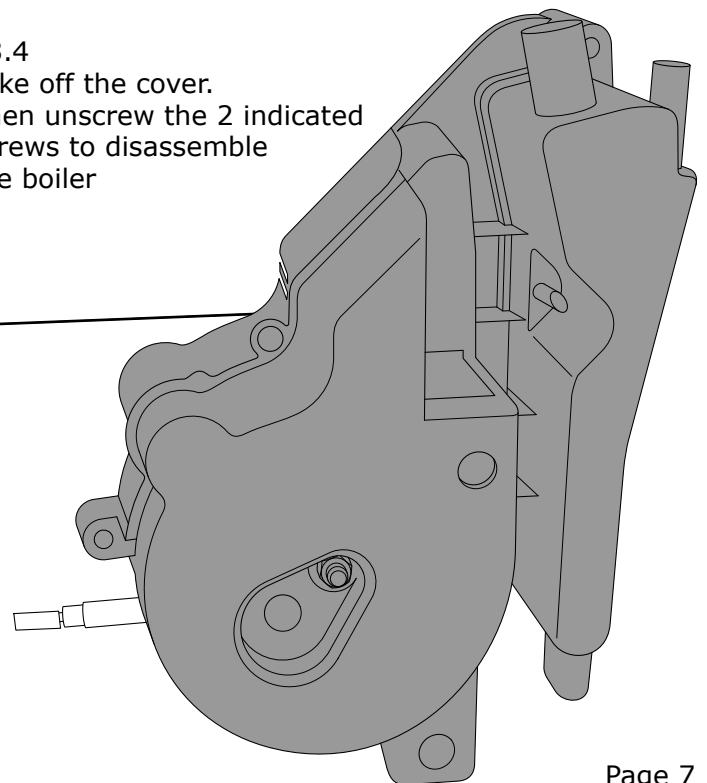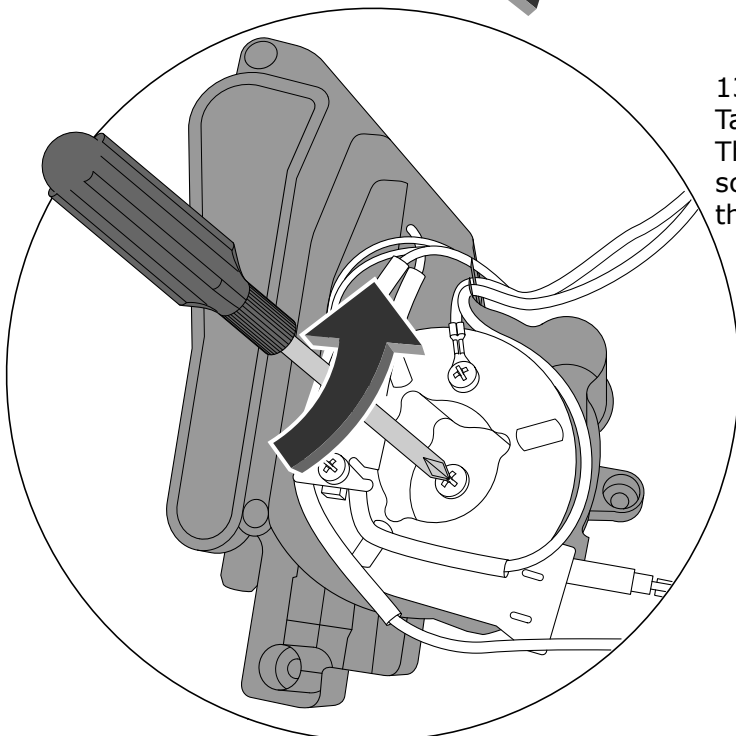

Picture14 - **TO REMOVE INFUSER KIT**




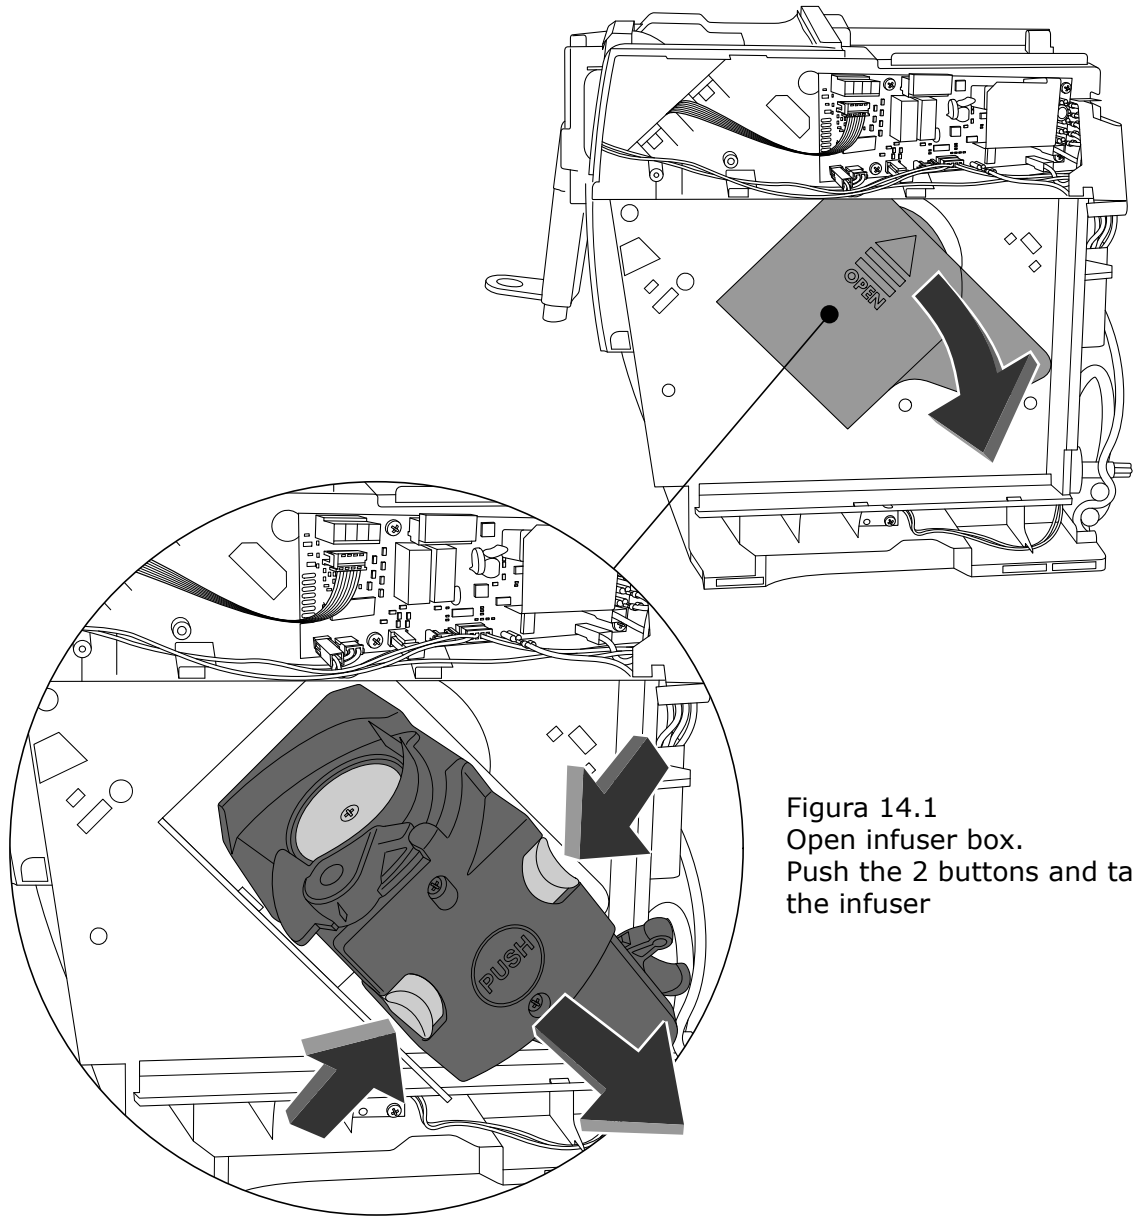


Figura 14.1
Open infuser box.
Push the 2 buttons and take out
the infuser

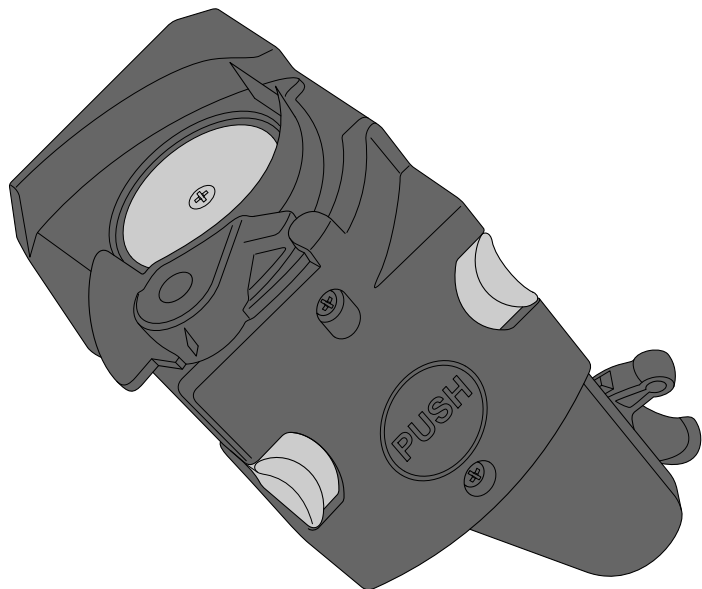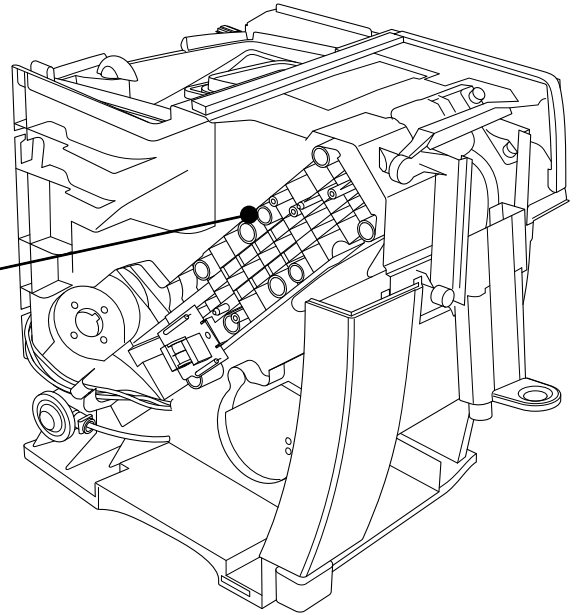


15.1
Unscrew the 10 indicated screws



Picture 15 - **TO REMOVE TRANSMISSION KIT**

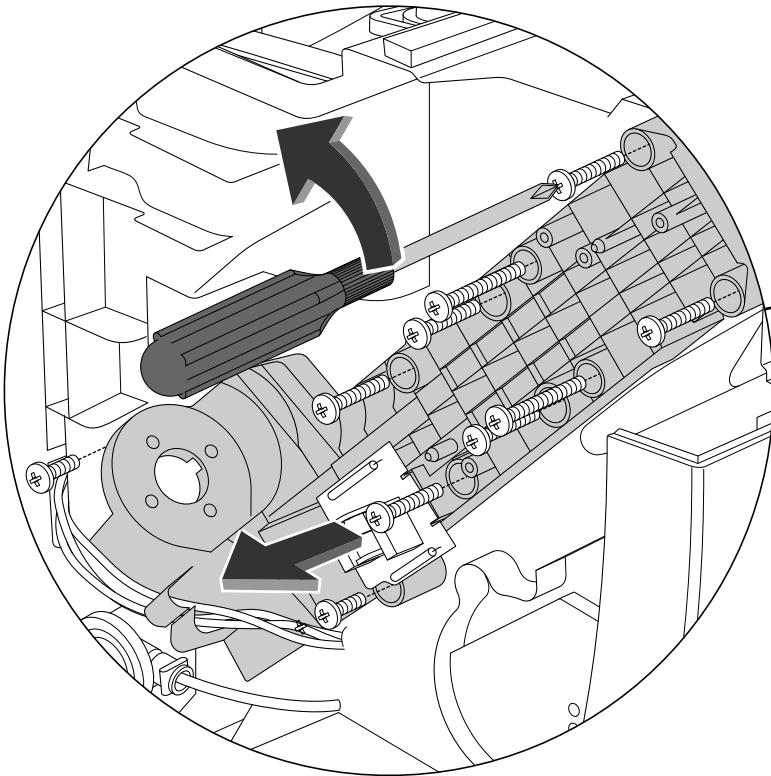

15.2
Open infuser box

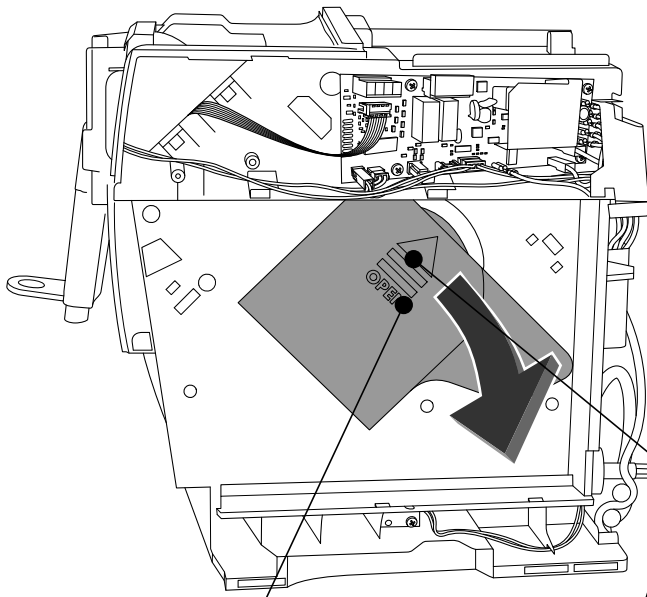


15.3
Unscrew the 2 indicated screws
(Torx T20) and remove the slider

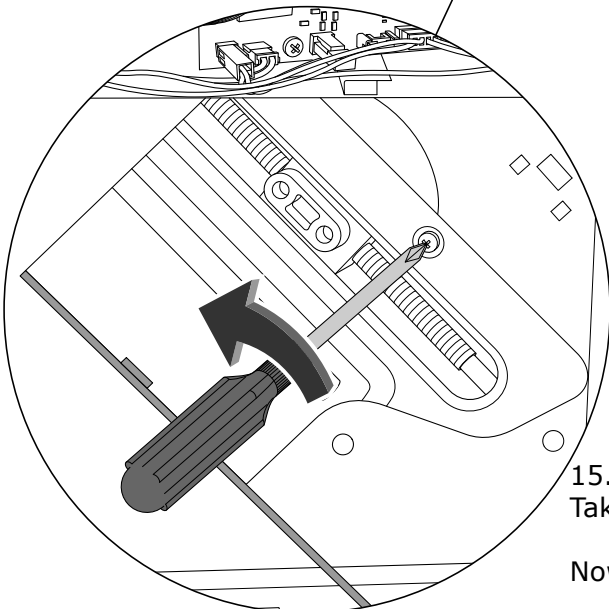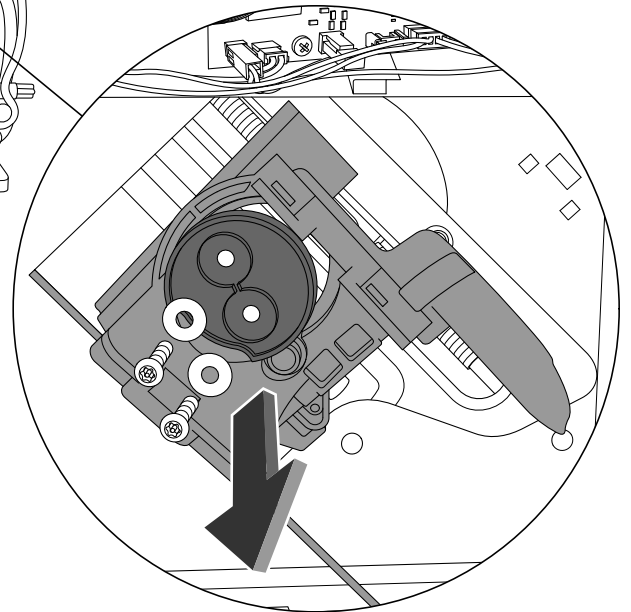


15.4
Take off the indicated screw

Now the TRASMISSION KIT is free and can be removed


15.5
To remove the Feeler Board (hall Sensor)
unscrew the 2 indicated screw to remove
the Hall sensor

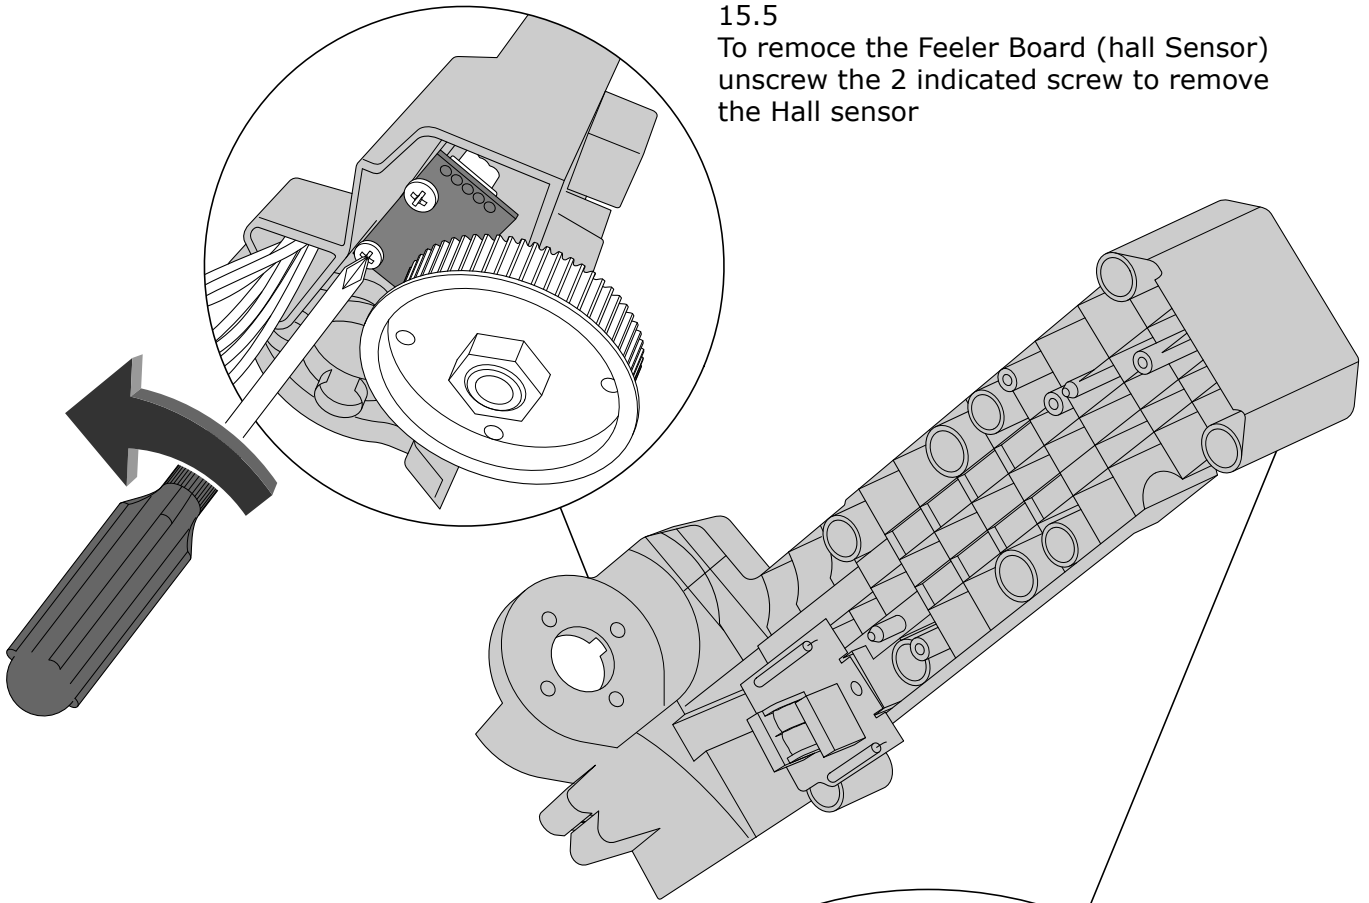

15.6
Pay attention, when you take off the
plastic component, to the 2 indicated
metal spacers
(**ATTENTION:** about metal
spacers see Technical Info
IT0181)

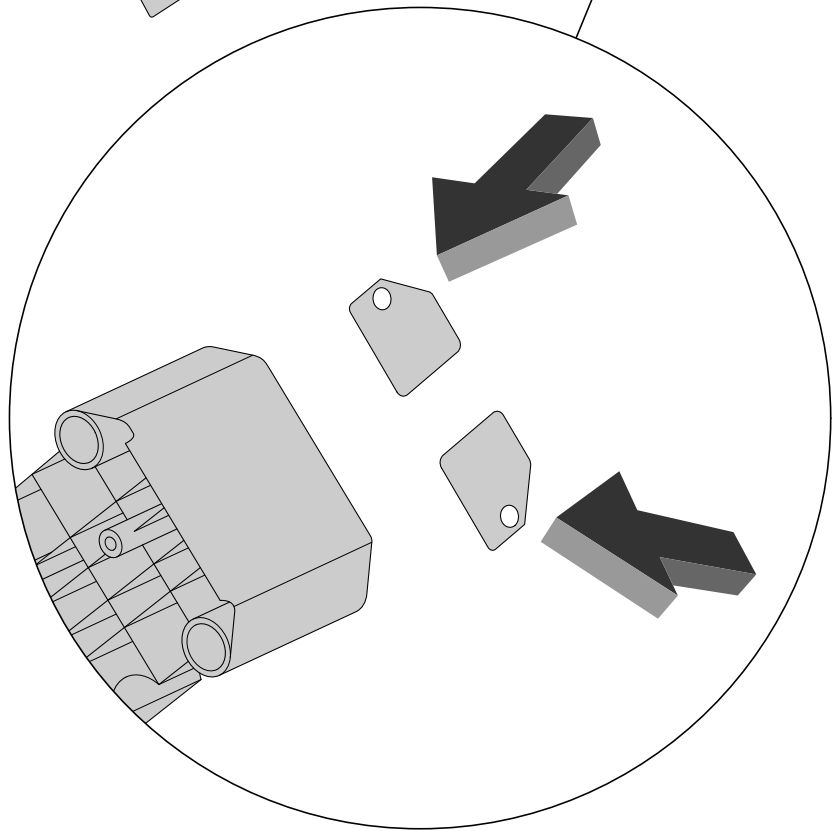

Picture 16 - **TO REMOVE COFFEE SPOUT**

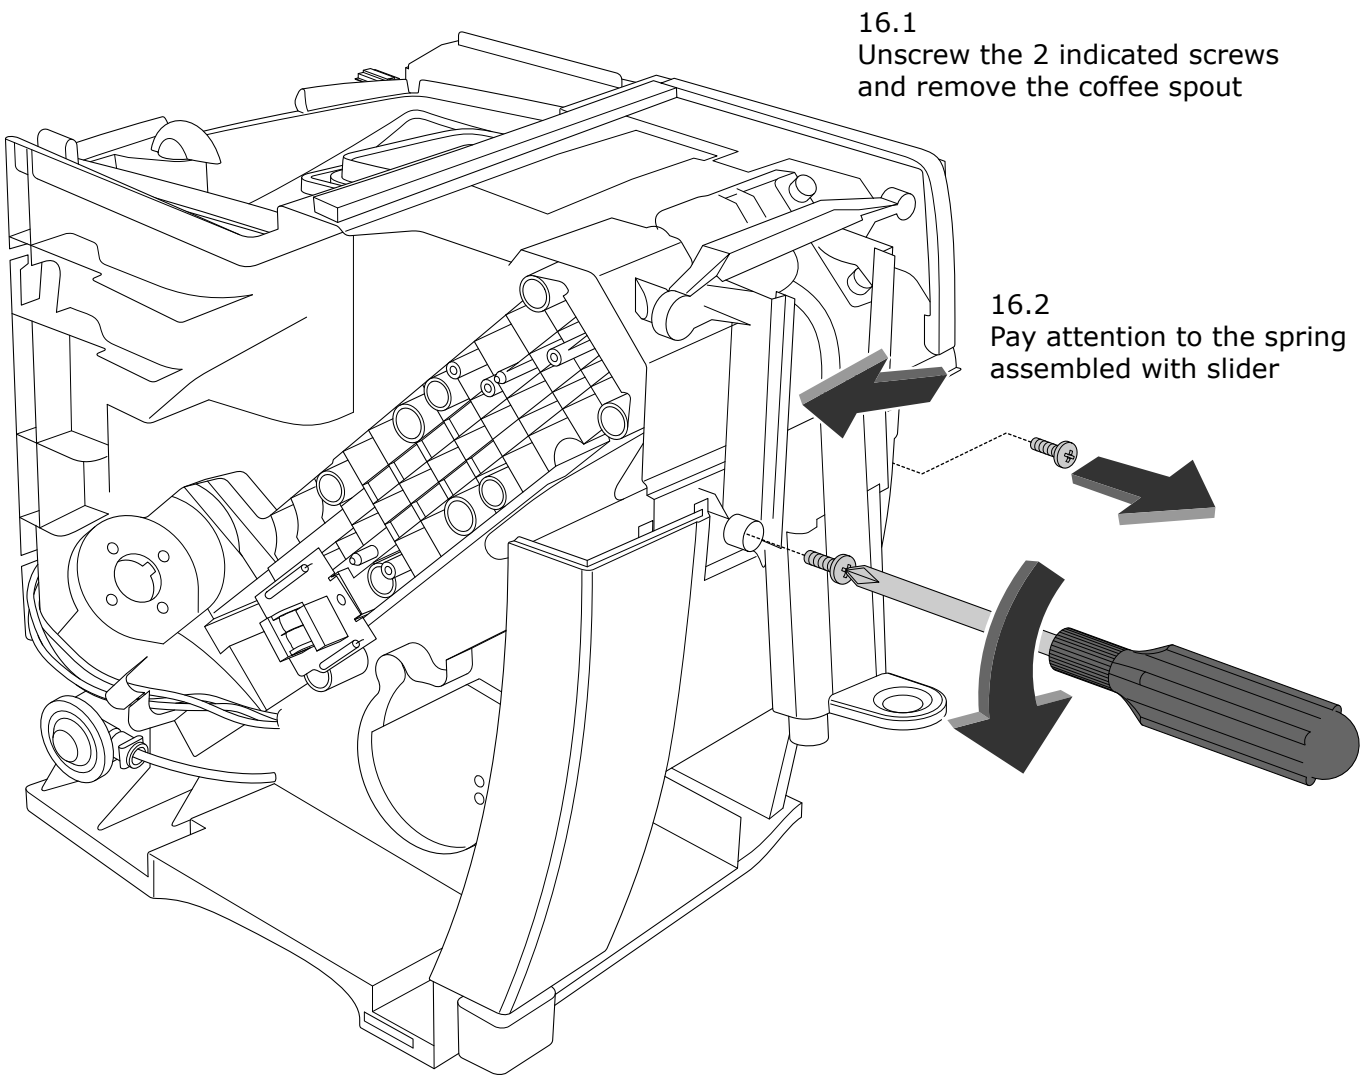

Picture 17 - TO REMOVE VALVE ASSEMBLY
(ATTENTION: see Technical Info IT0181)


17.2
Unscrew the 2 indicated screws
using an Allen key (4)

17.1
Take off the 2 springs
and then the
tubes

17.3
Take off the spring
and then the tube
which goes from
coffee spout to
infuser

17.5
Take off microswitch


17.4
Unscrew the indicated screw
to take off microswitch

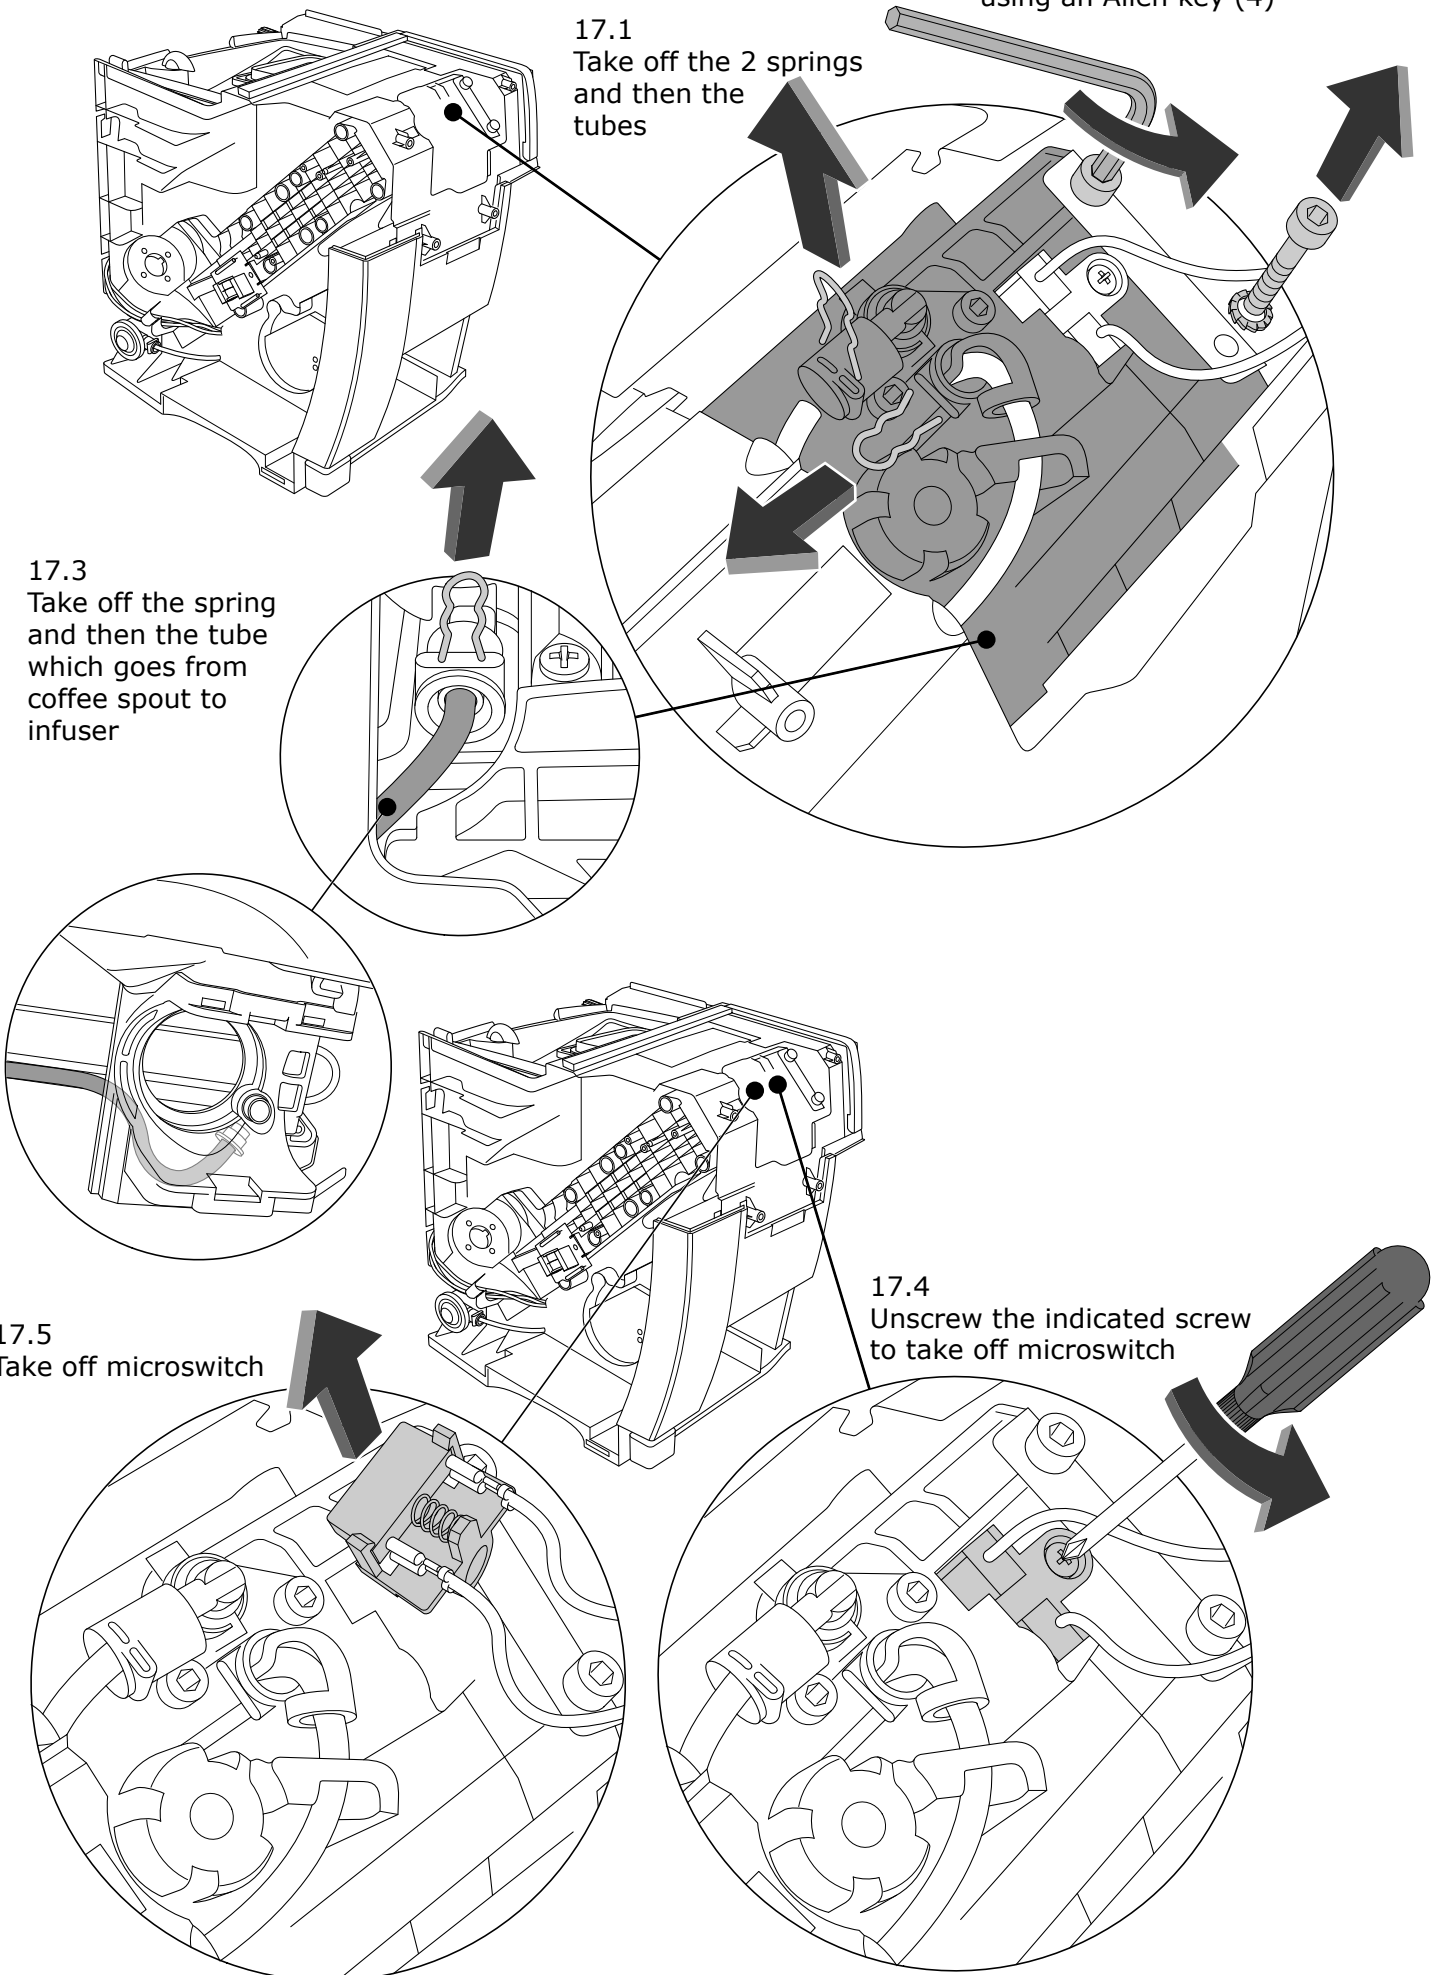

Picture 18 - HOW TO ALIGN VALVE

Lift the infuser up to touch the valve, without pushing with strength: it has only to be aligned to the valve.

Once you aligned it, fix the 2 screws (pic. 18.2) using an Allen key.


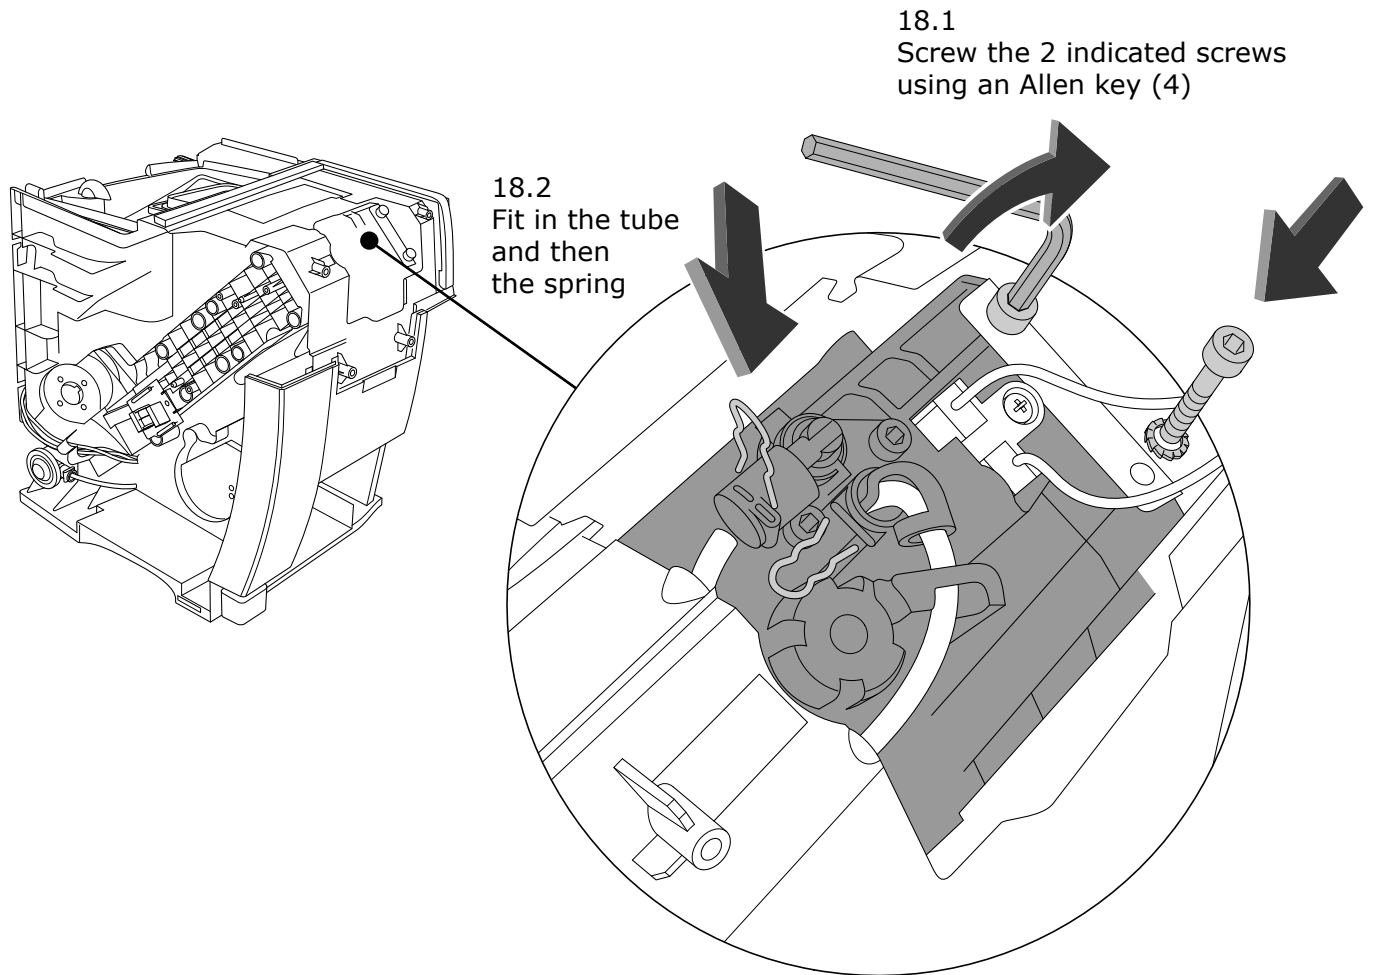


Picture 19 - **MICROSWITCH AND WATER REED POSITION**


19.1
Water Tank
microswitch

ATTENTION: please, pay attention to never bypass microswitch. If you should do it infuser motor would be on



ATTENTION: Water Tank micro, Waste container micro and Steam tap micro beep when are open

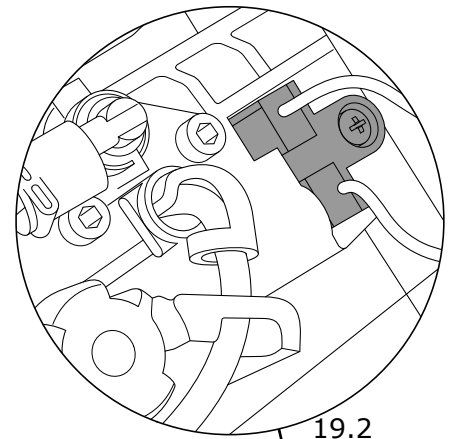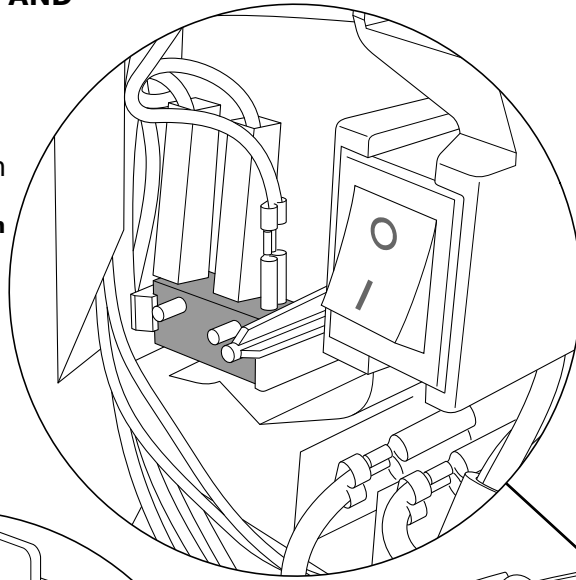


19.2
Infuser
Upper Limit
microswitch

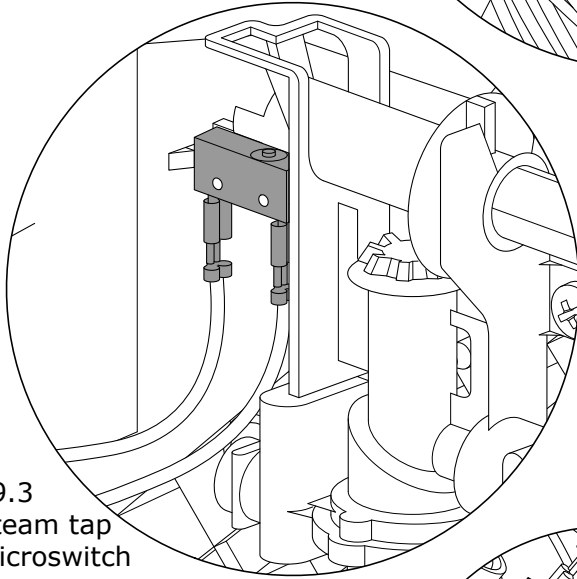



19.3
Steam tap
microswitch

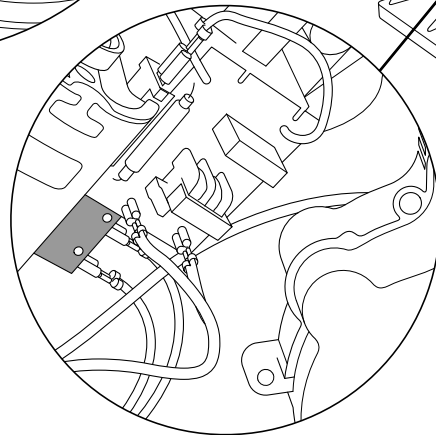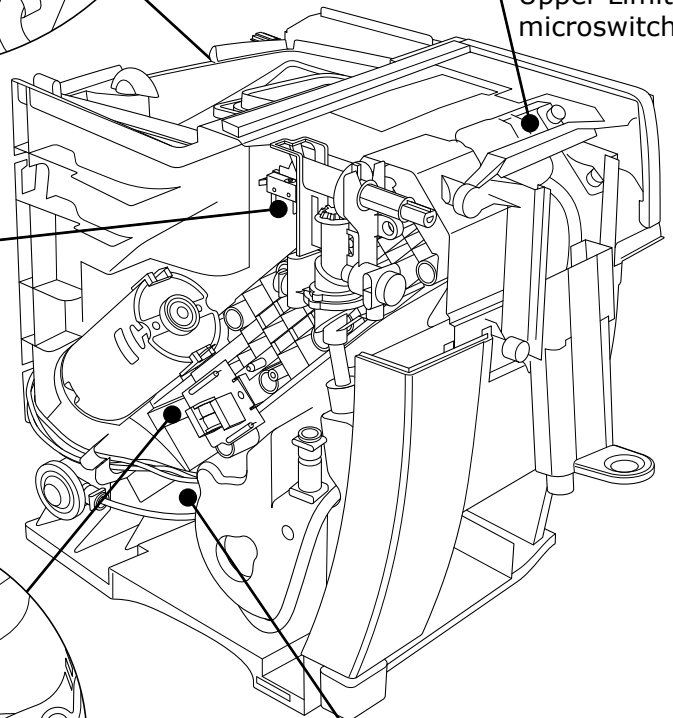

19.4
Infuser bottom limit
microswitch

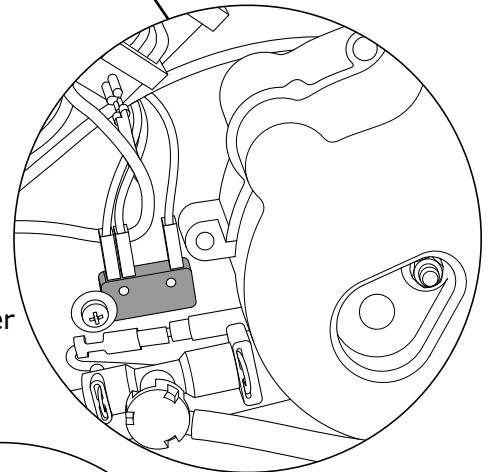


19.5
Waste container
microswitch

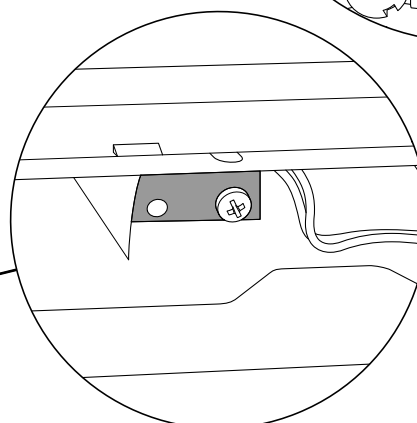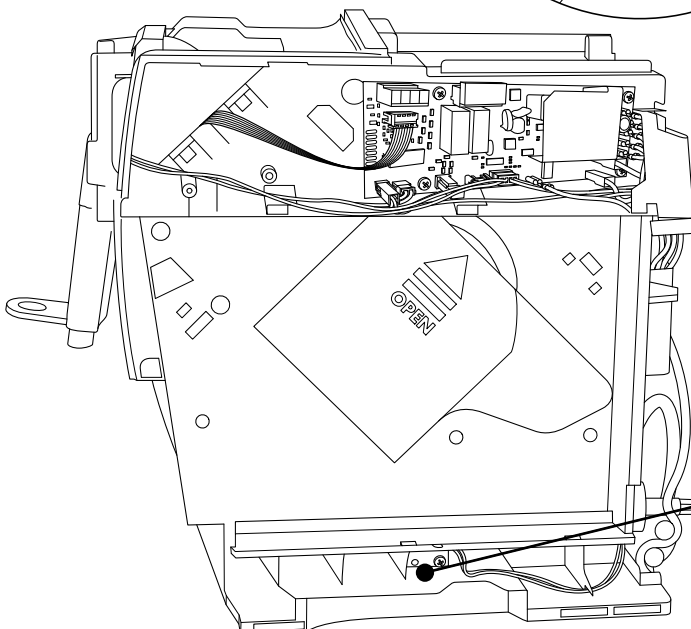

19.6
Reed switch
water tank





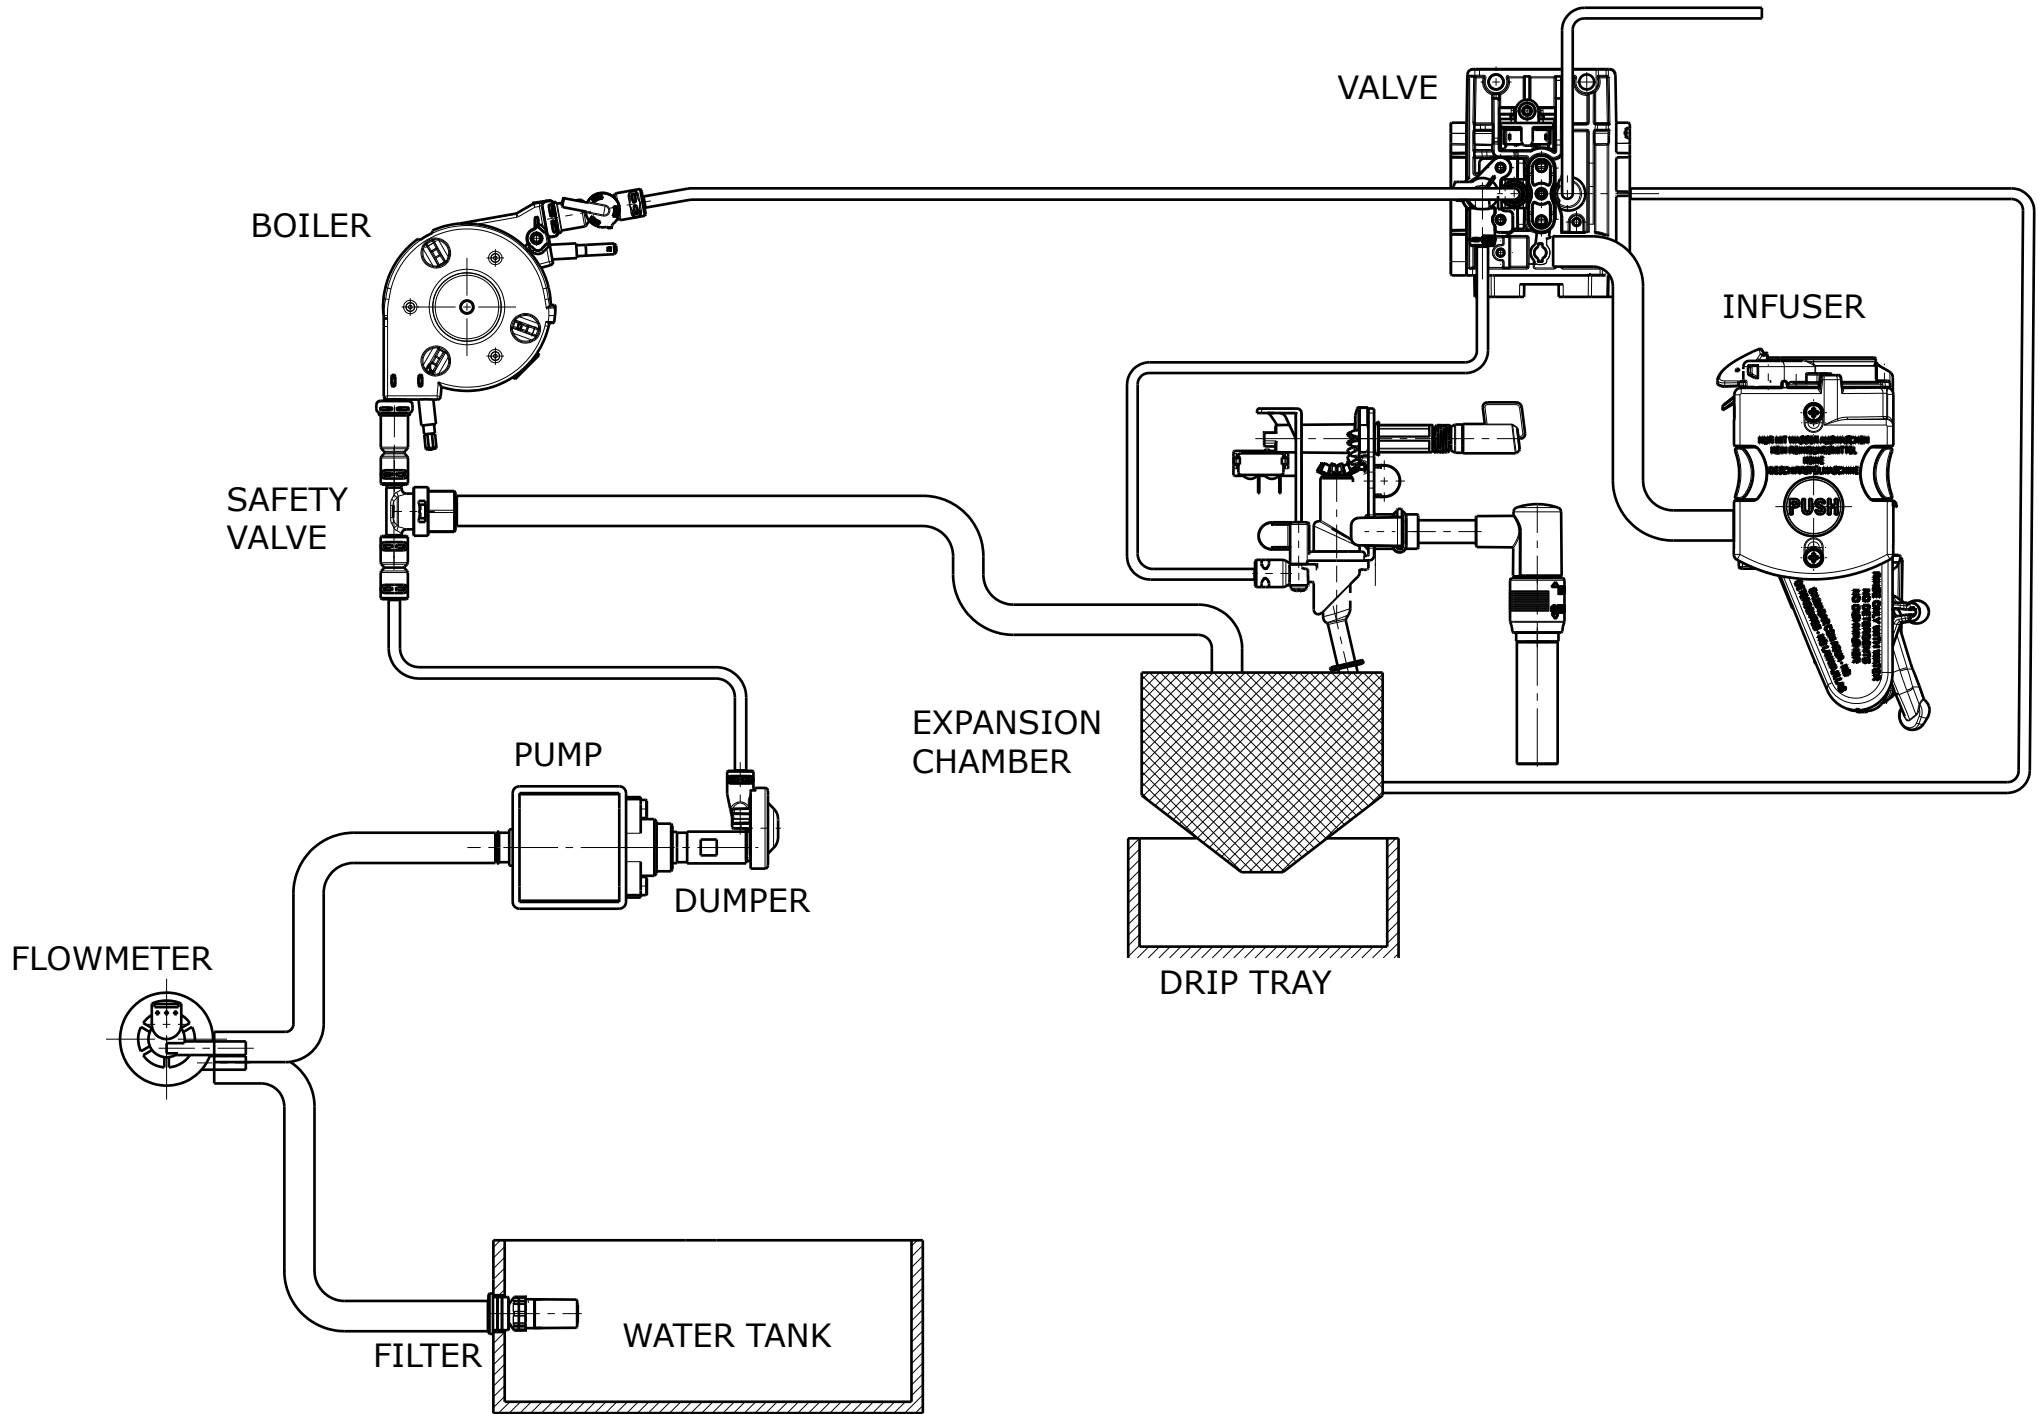

WATER CIRCUIT



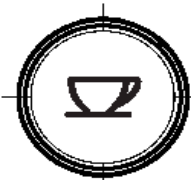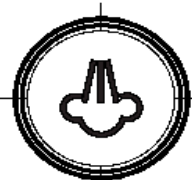

TEST PROCEDURE FOR ECAM23.420 INTENSA



TEST PROCEDURE	Pressing each icon below, we can manually check the devices:	
	icon	device
Put Steam Tap on 0. Plug the machine ON. Press and hold: 1 Coffee + Steam buttons   Press On/Off Switch (position I)		Coffe Boiler ON
		Grinder ON
		Motor UP, till "UPPER LIMIT Motor DOWN, till "BOTTOM LIMIT
		Water Pump ON
NOTE: Release bttions when motor starts moving.		










NOTE: Water Tank micro, Waste container micro and Steam tap micro beep when are open

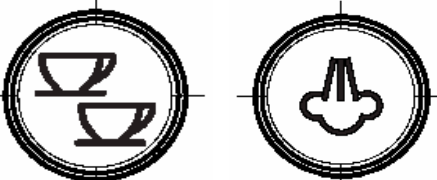To EXIT the procedure, press On/Off Swith (position 0) or unplug the machine.



DISPLAY TEST PROCEDURE FOR ECAM23.420 INTENSA



DISPLAY TEST PROCEDURE	Pressing each icon the display will show following message	
	icon	message
<p>To enter the DISPLAY test: Plug the machine ON. Press and hold: 1 Coffee + Steam buttons</p>  <p>Press On/Off Switch (position I)</p>		BUTTON 1
		BUTTON 2
		BUTTON 3
		BUTTON 4
		BUTTON 5
		BUTTON 6
		BUTTON 7
<p>Note: Release buttons after you read the message "DISPLAY TEST MODE".</p>	<p>Turning the knob, the display will show the bar increasing or decreasing.</p> 	

NOTE: After display Test performing, you need to initialize the machine.

To EXIT the procedure, press On/Off Switch (position 0) or unplug the machine. Test procedure ends automatically 1 minute after you completed it.

ACCESSIBILITA'

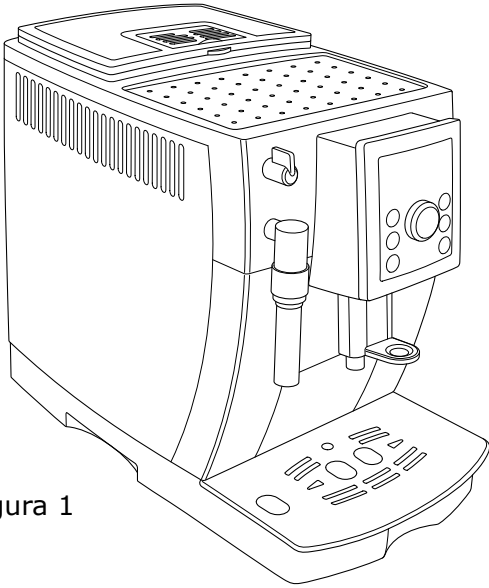


Figura 1

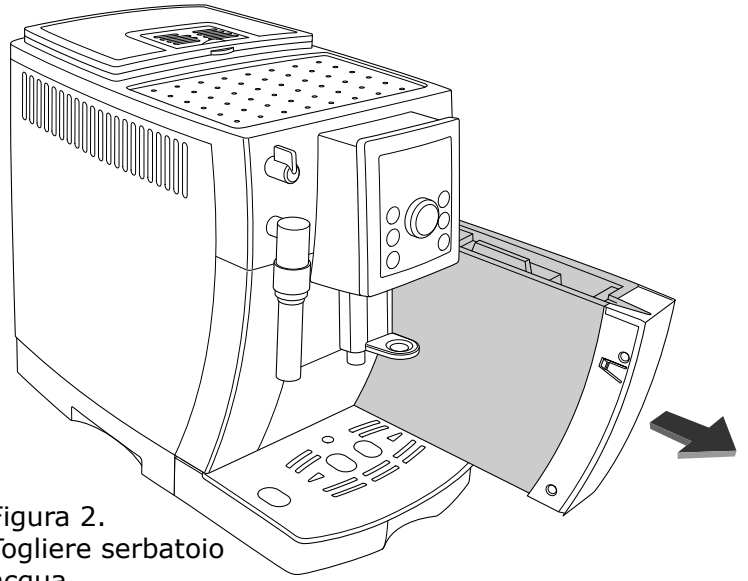


Figura 2.
Togliere serbatoio
acqua

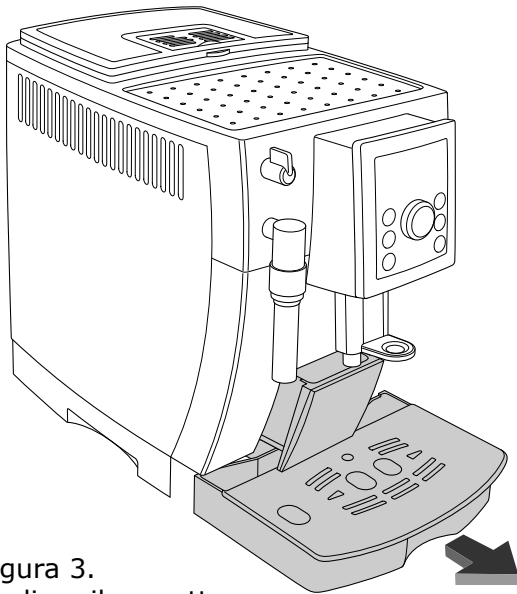


Figura 3.
Togliere il cassetto
raccolta fondi


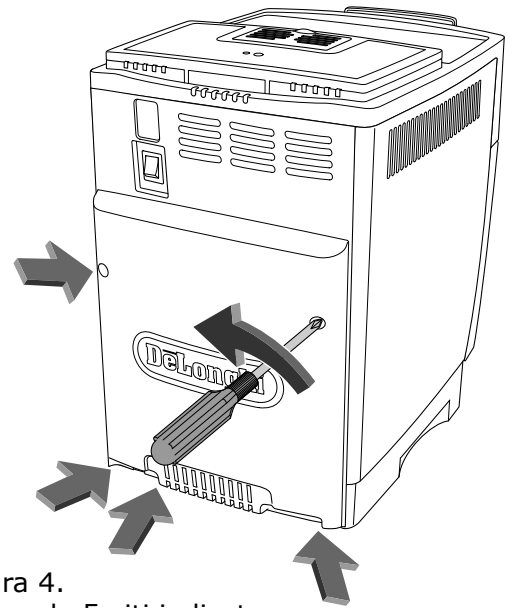


Figura 4.
Svitare le 5 viti indicate
(Torx T20)

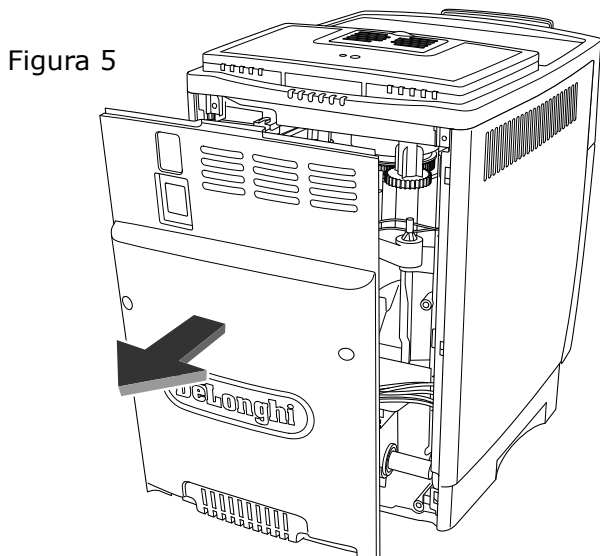

5.1 Sfilare lo schienale

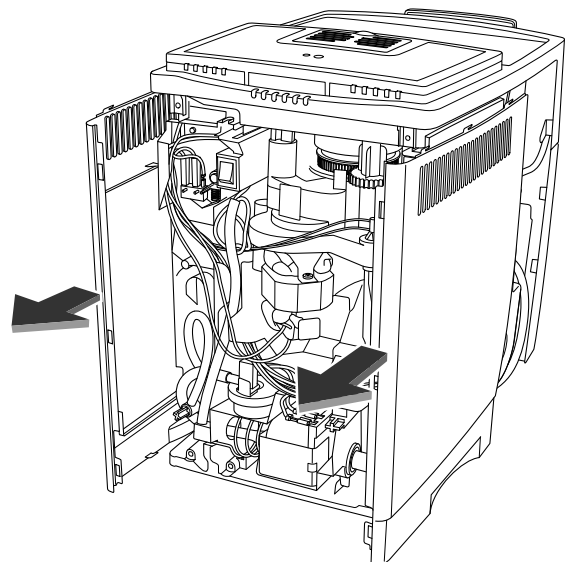


Figura 5.2 Sganciare i fianchi

Figura 6 - **SMONTAGGIO CRUSCOTTO**

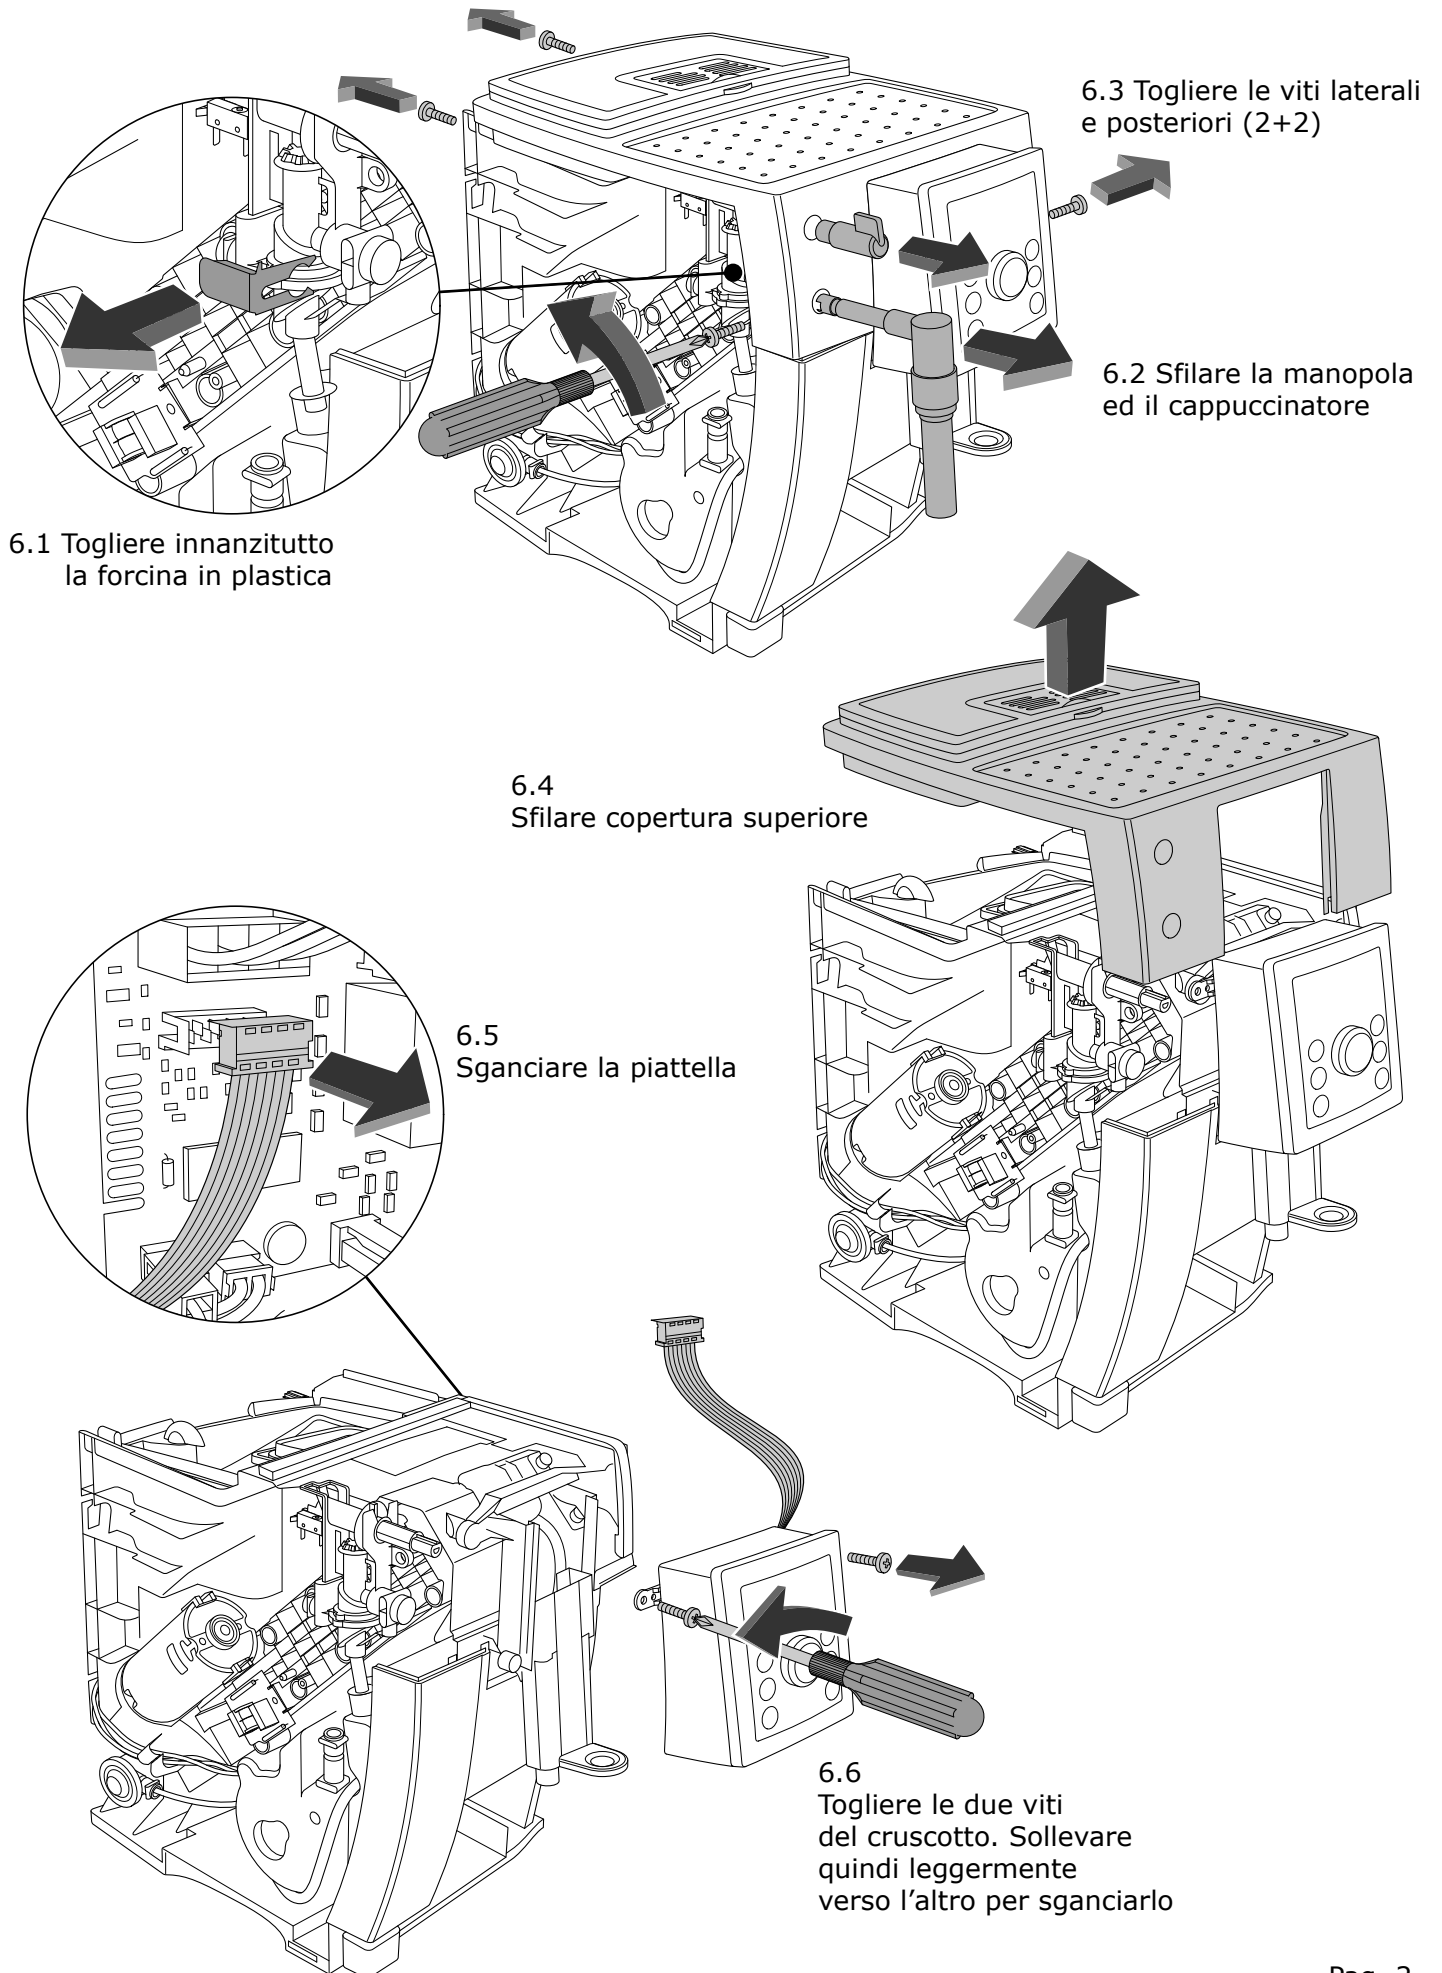


Figura 7 - **SMONTAGGIO MACININO**



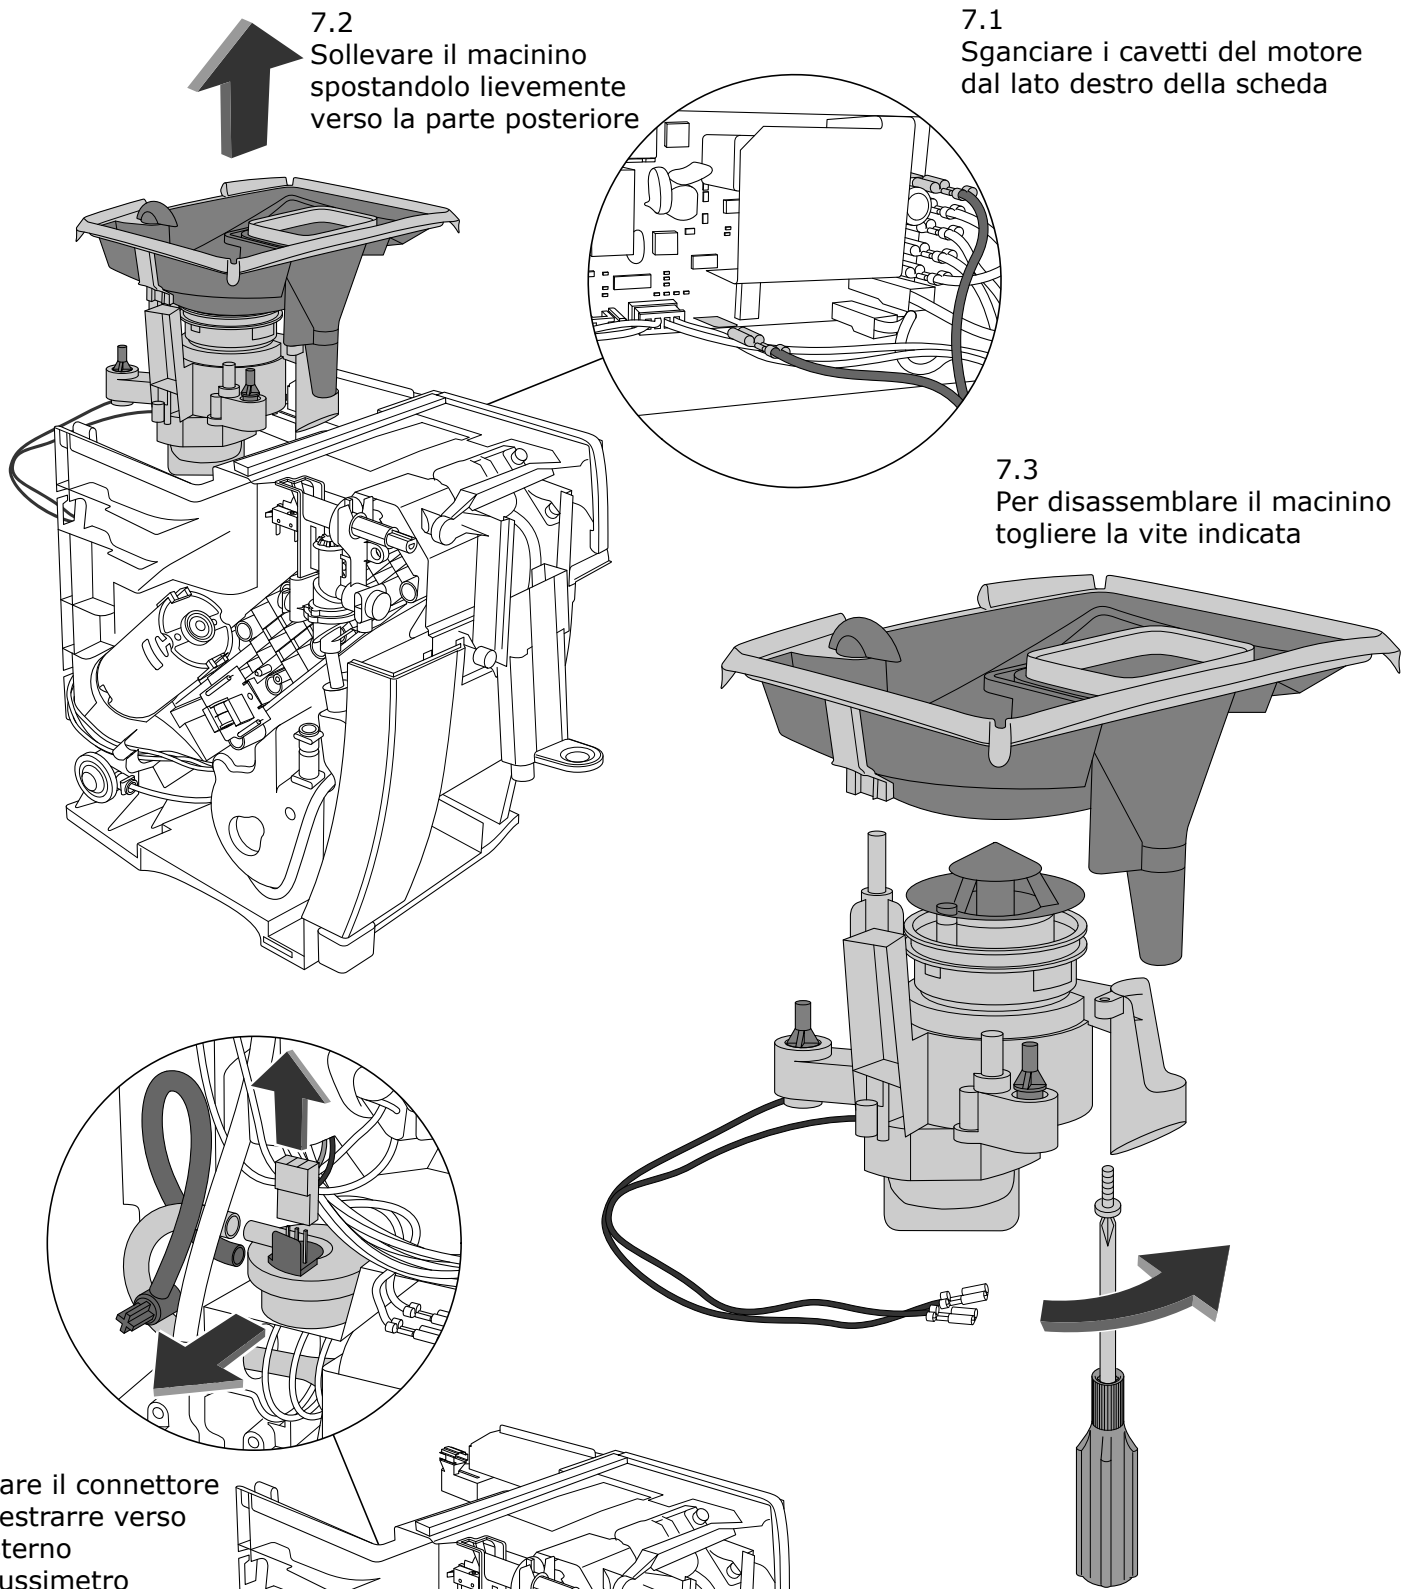


Figura 8 - **SMONTAGGIO FLUSSIMETRO**

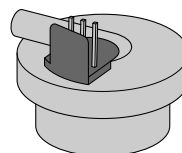

9.2
Sfilare la pompa


Figura 9 - **SMONTAGGIO POMPA**

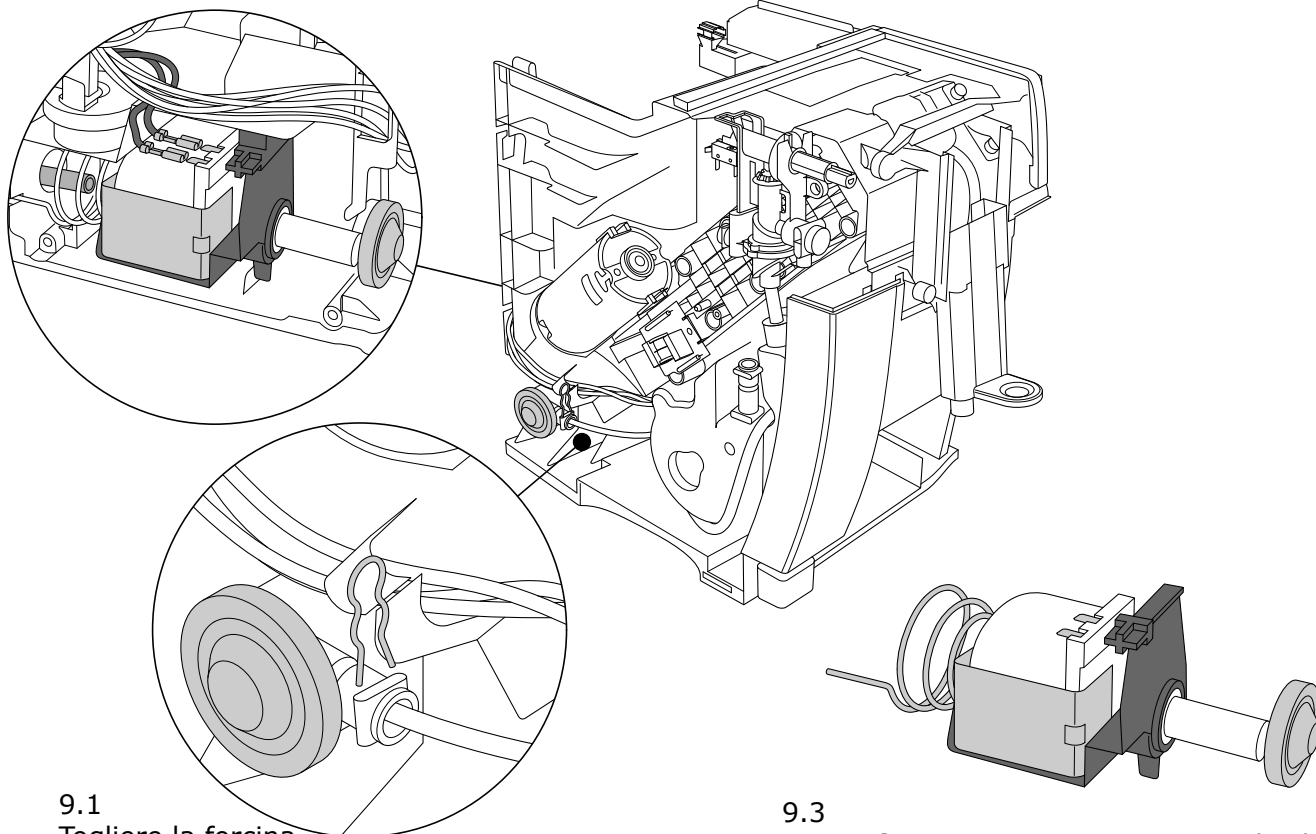

9.1
Togliere la forcina di aggancio e quindi sfilare il tubo
Attenzione: dal tubo potrebbe uscire una piccola quantità d'acqua, in quanto il circuito idraulico si svuota

9.3
Attenzione: Dopo aver sganciato il cablaggio, sfilare il klixon. Essendo incollato, esercitare una certa forza. Ricordarsi di incollarlo nuovamente


Figura 10 - **SMONTAGGIO SCHEDA**

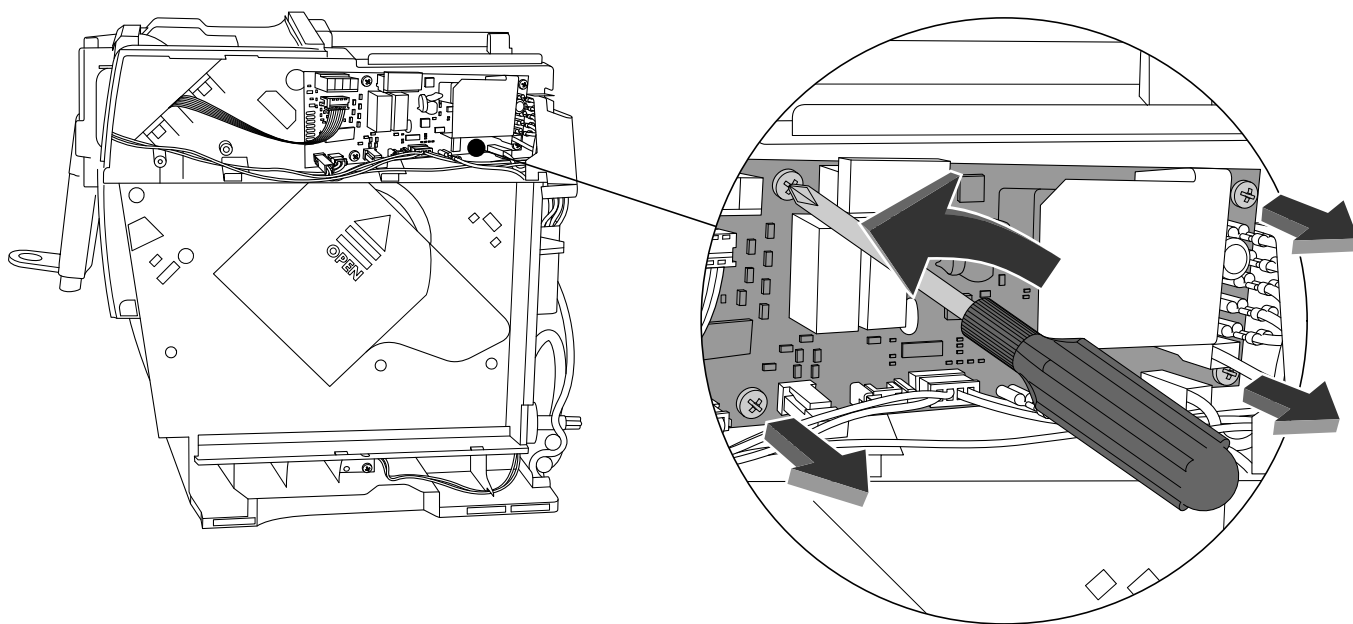

10.1
Togliere le quattro viti indicate. Dopo aver staccato i cablaggi, sfilare la scheda

11.1
Togliere le 4 viti di fissaggio del motore,
raggiungibili dalla parte posteriore

Figura 11 - **SMONTAGGIO MOTORE**

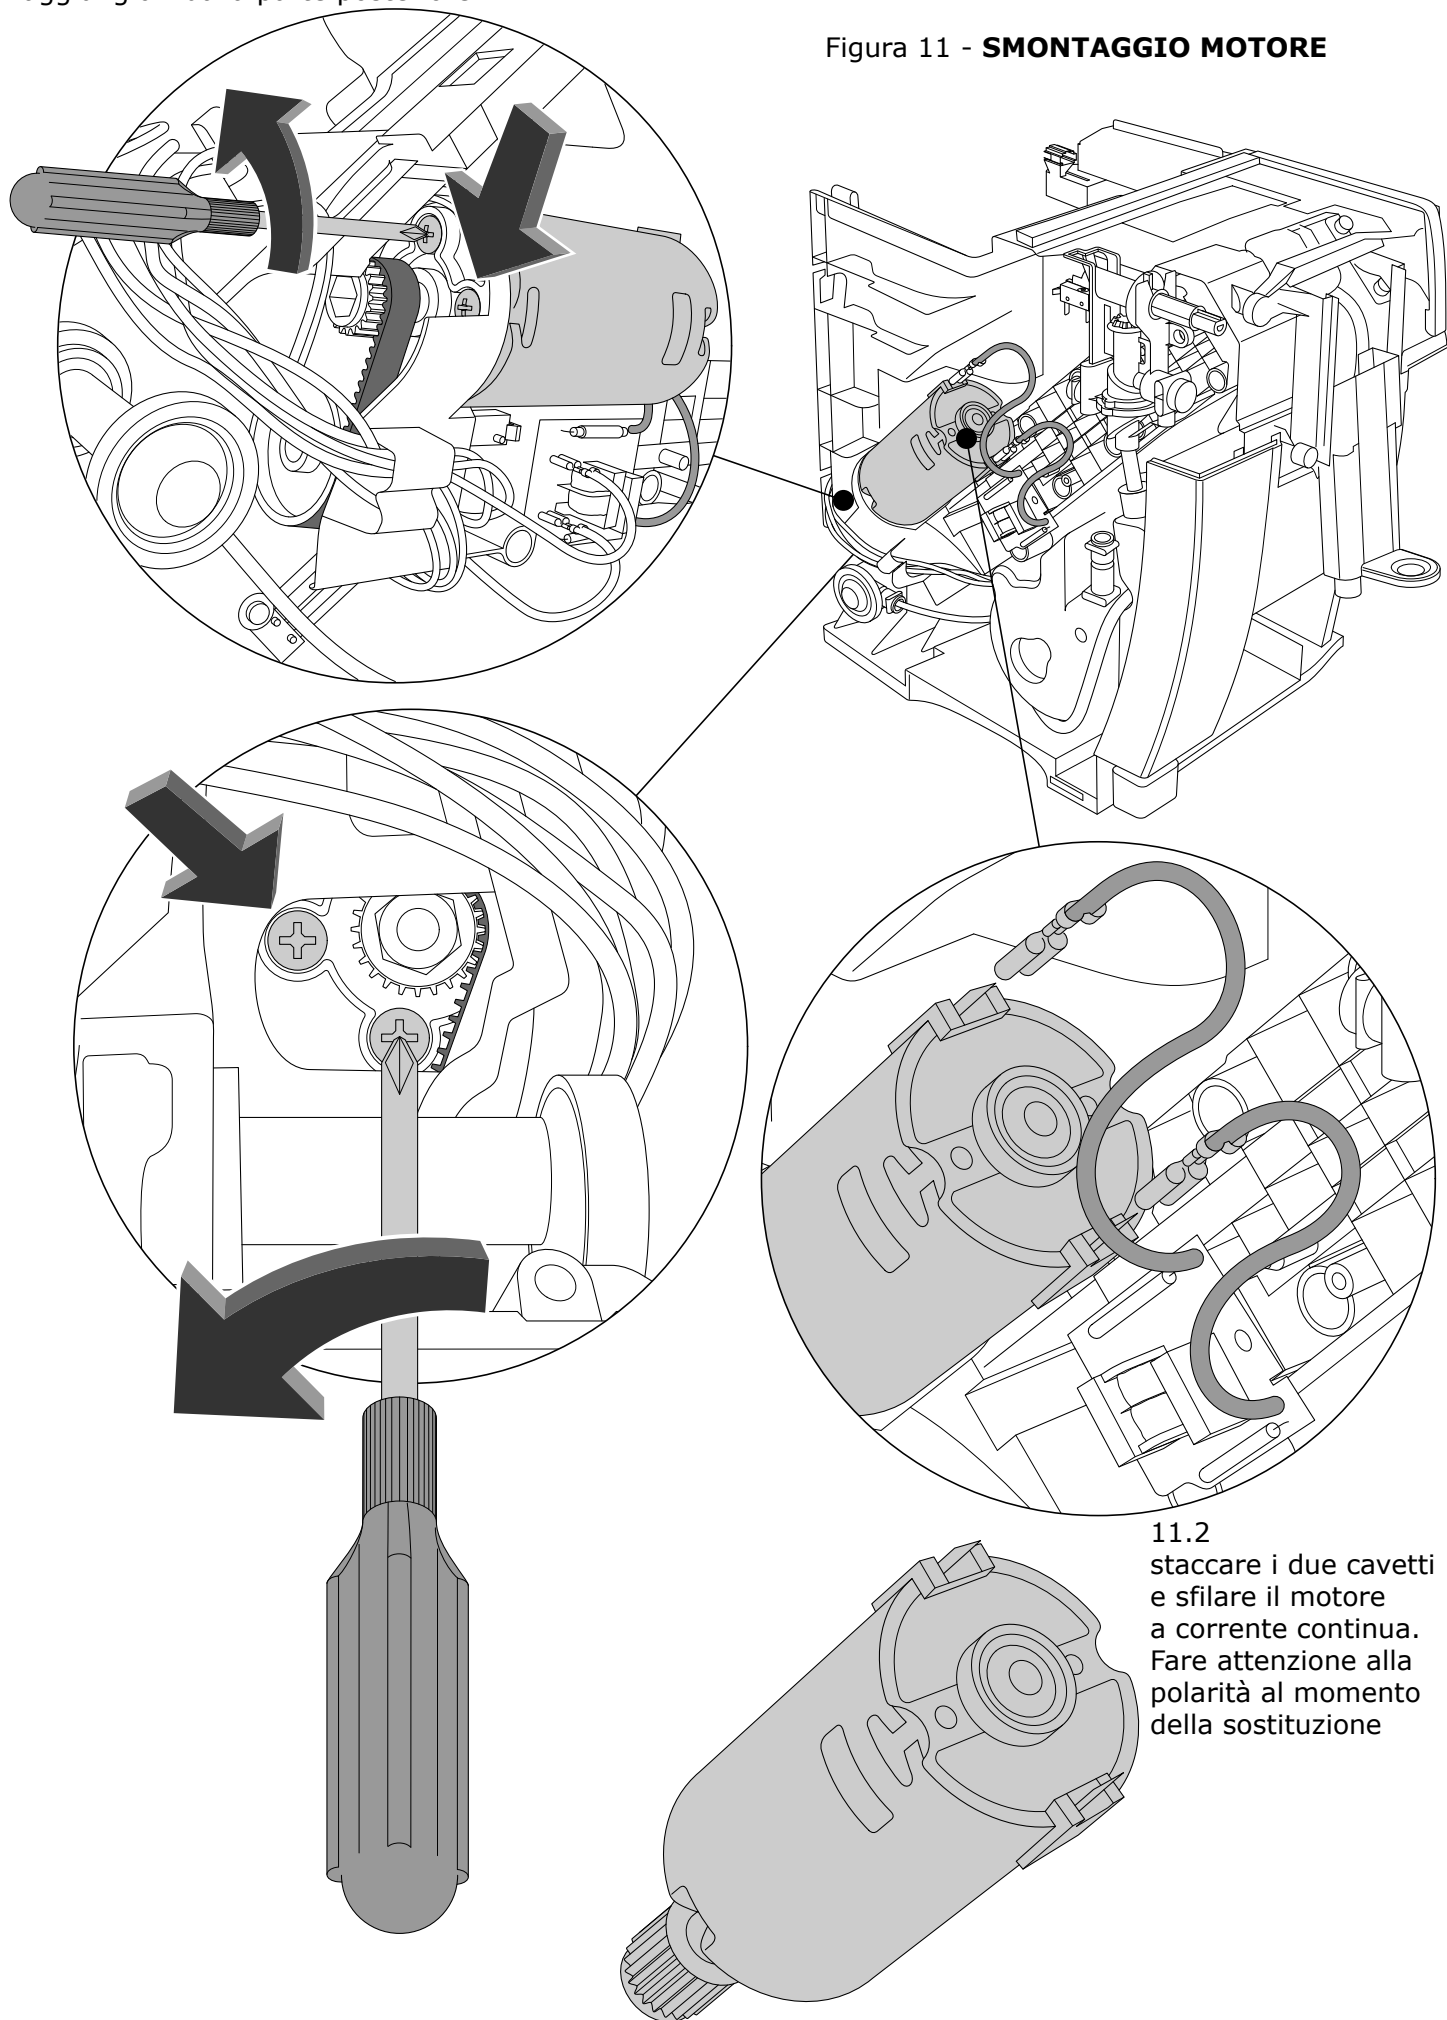

11.2
staccare i due cavetti
e sfilare il motore
a corrente continua.
Fare attenzione alla
polarità al momento
della sostituzione

12.1
Scollegare i cavi




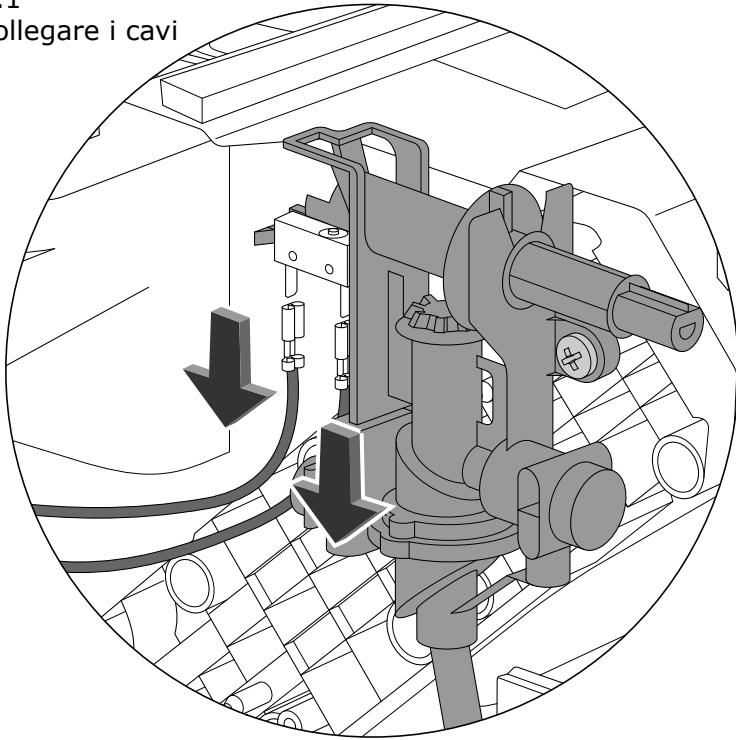



Figura 12 - **SMONTAGGIO RUBINETTO**

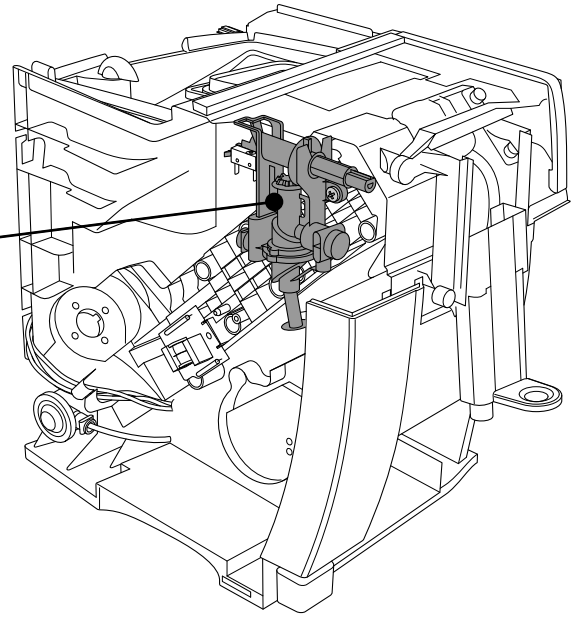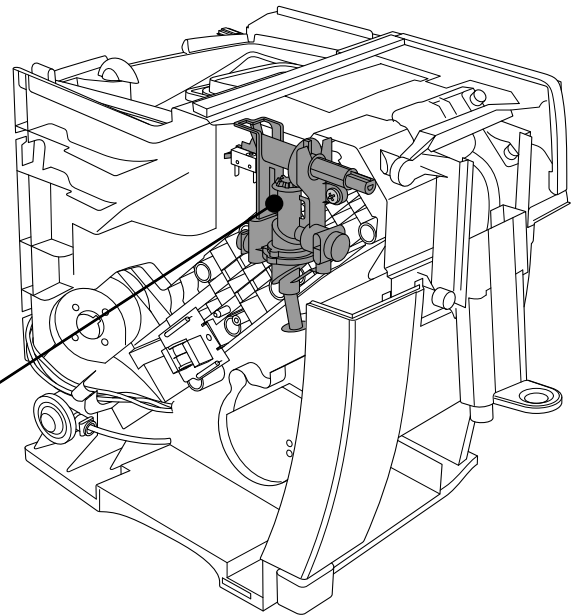

12.2
Togliere le viti indicate

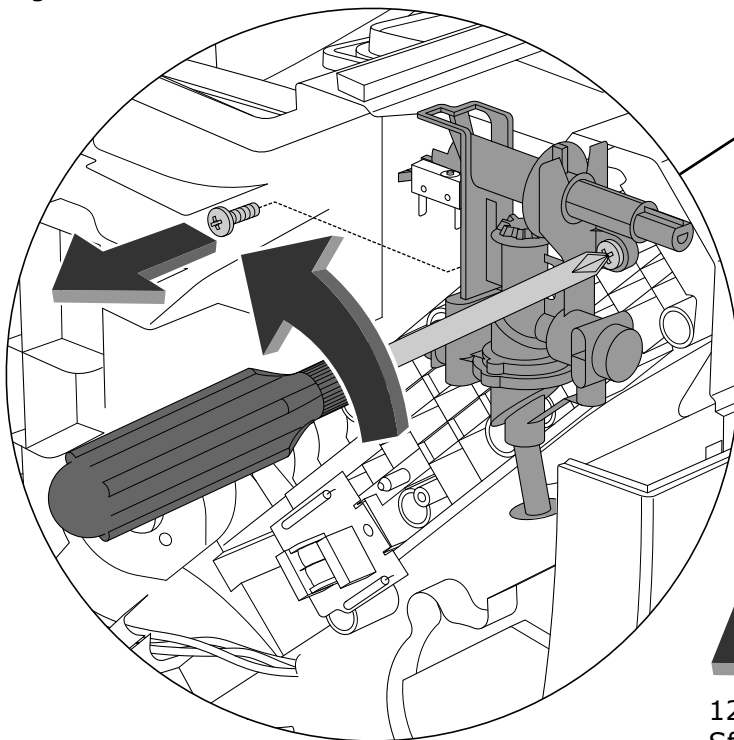

12.3
Sfilare il micro

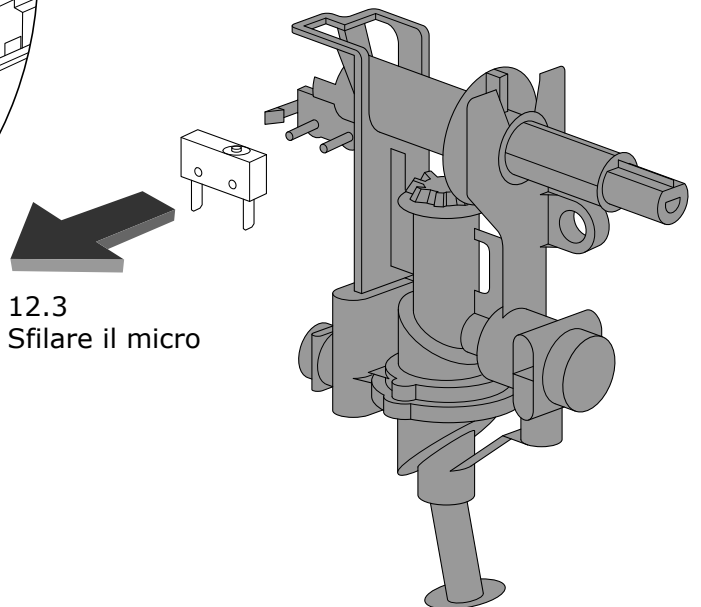

13.3
Togliere la forcina indicata
dalla freccia e sfilare il tubo




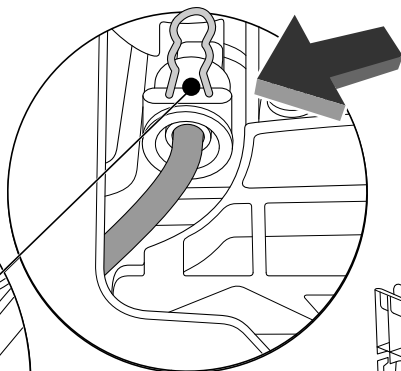



Figura 13 - **SMONTAGGIO CALDAIA**

13.2
Staccare il tubo
indicated

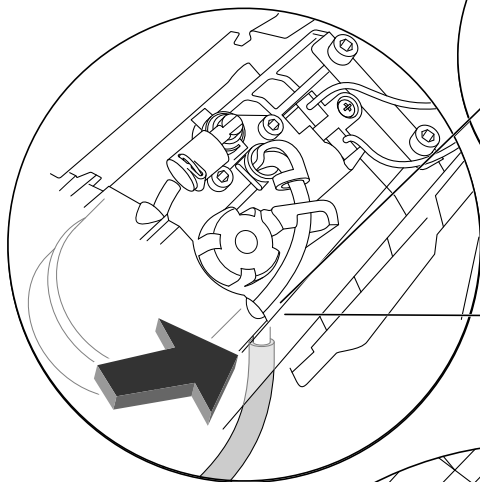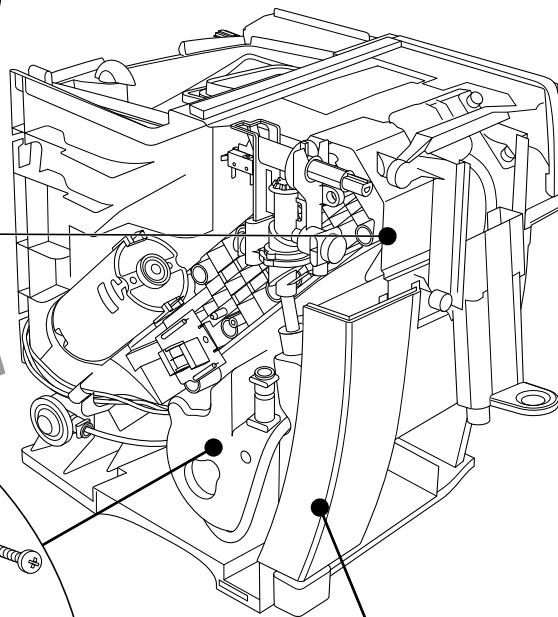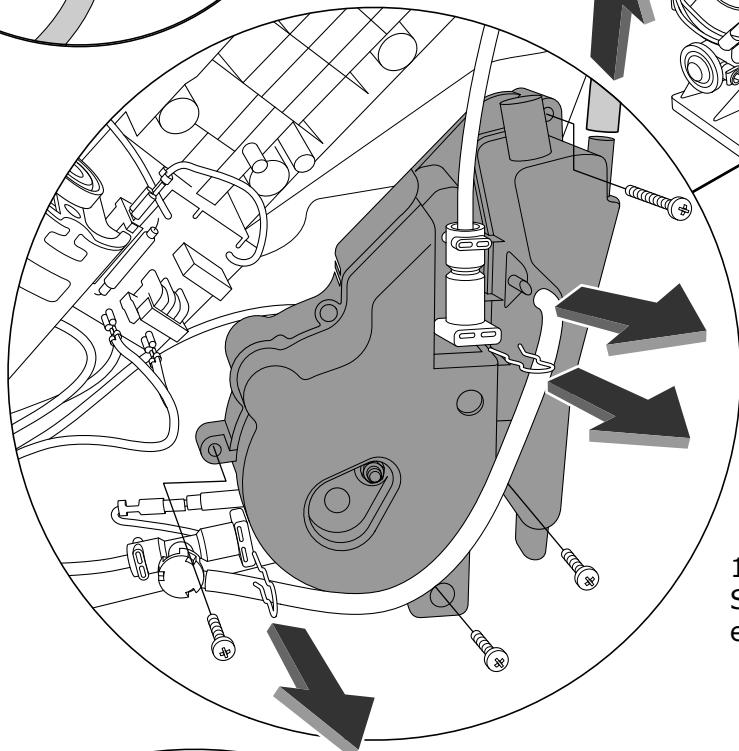

Attenzione: per togliere la
caldaia, spingere con delicatezza
il pannello in plastica

13.1
Sfilare le 2 forcine
e togliere le 4 viti

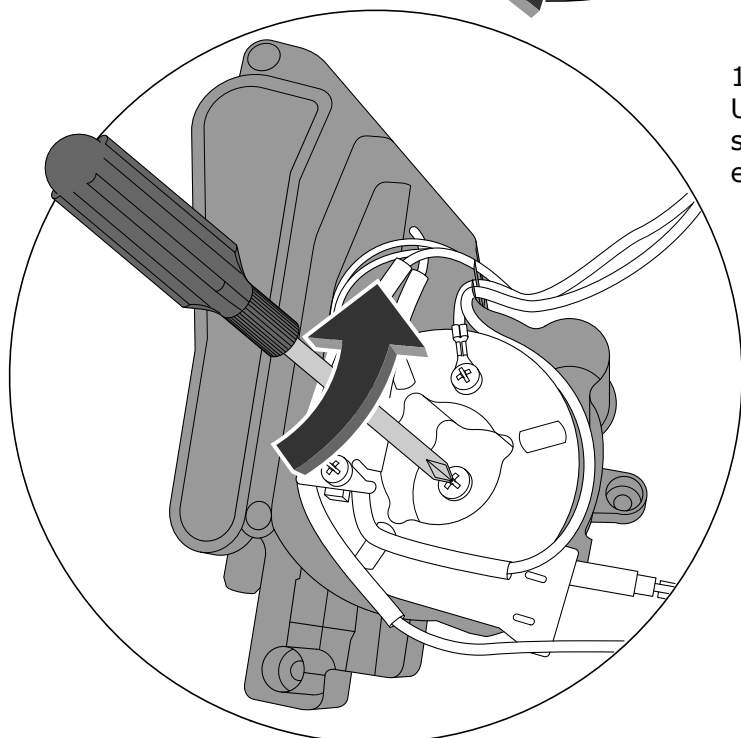

13.4
Una volta tolta la chiusura,
svitare le viti indicate per
estrarre la caldaia

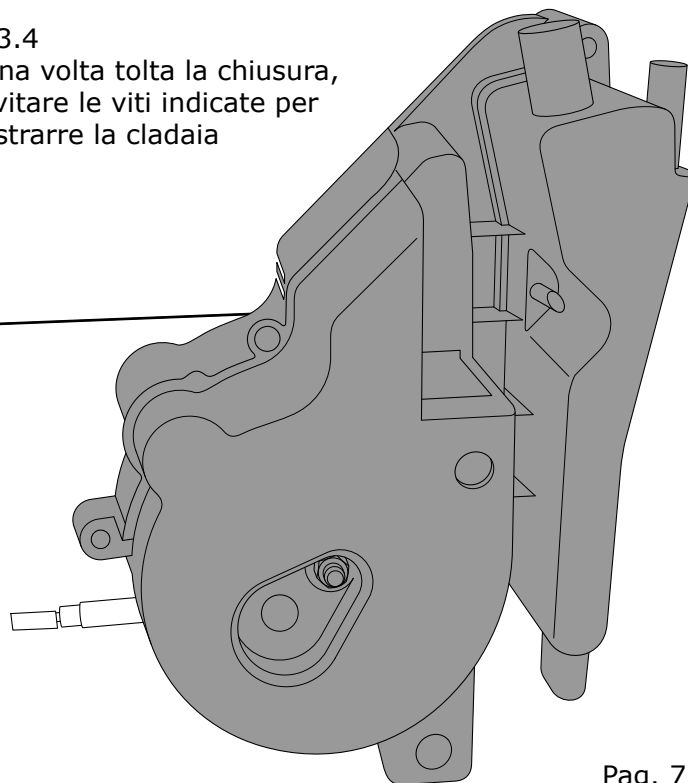


Figura 14 - **ESTRAZIONE INFUSORE**




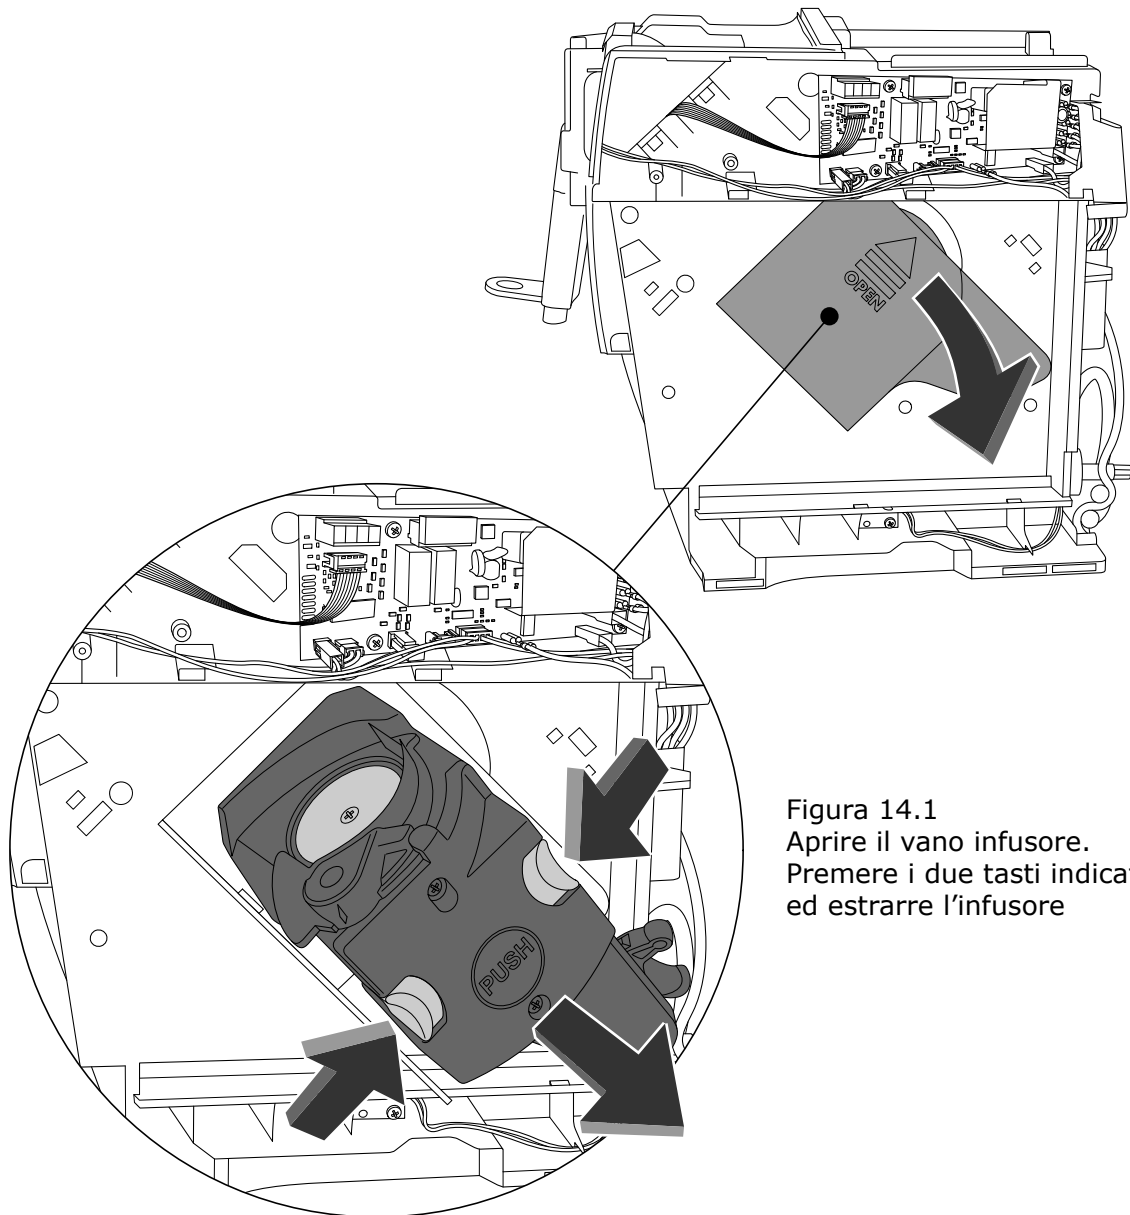


Figura 14.1
Aprire il vano infusore.
Premere i due tasti indicati
ed estrarre l'infusore

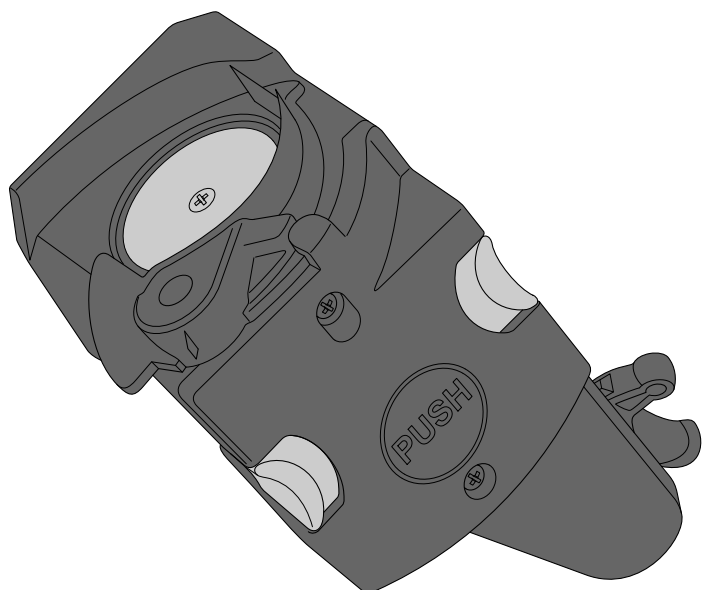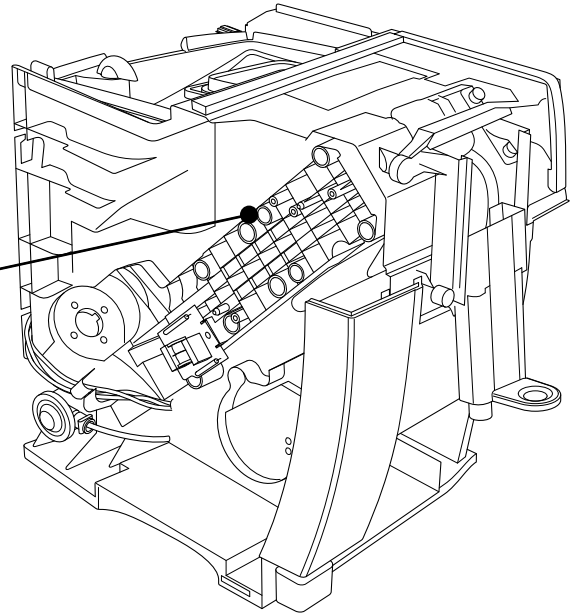


15.1
Togliere le 10 viti indicate



Figura 15 - **SMONTAGGIO GRUPPO MOVIMENTAZIONE**

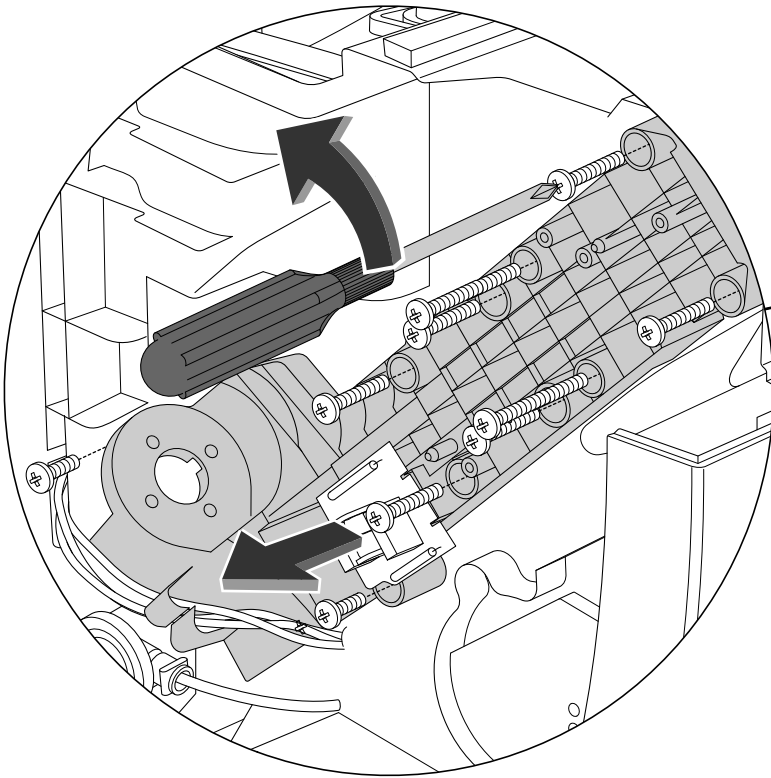

15.2
Aprire vano infusore

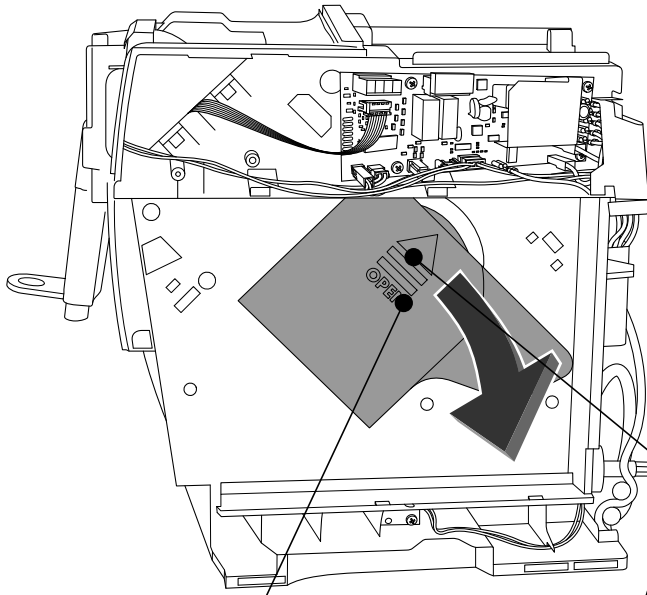


15.3
Togliere le 2 viti indicate
(Torx T20)

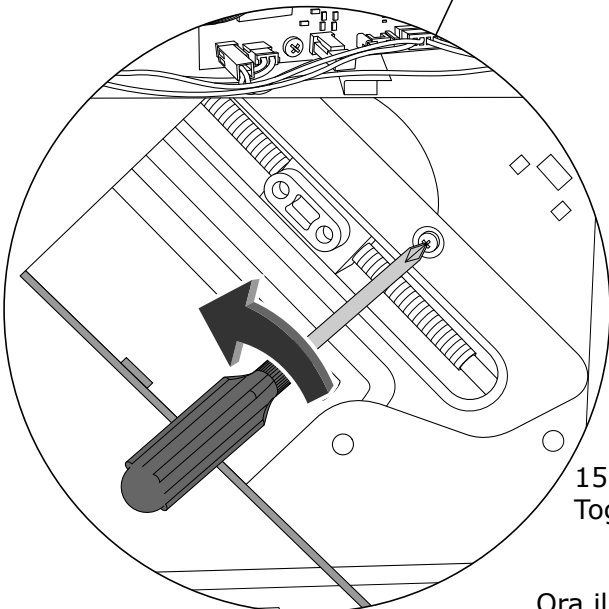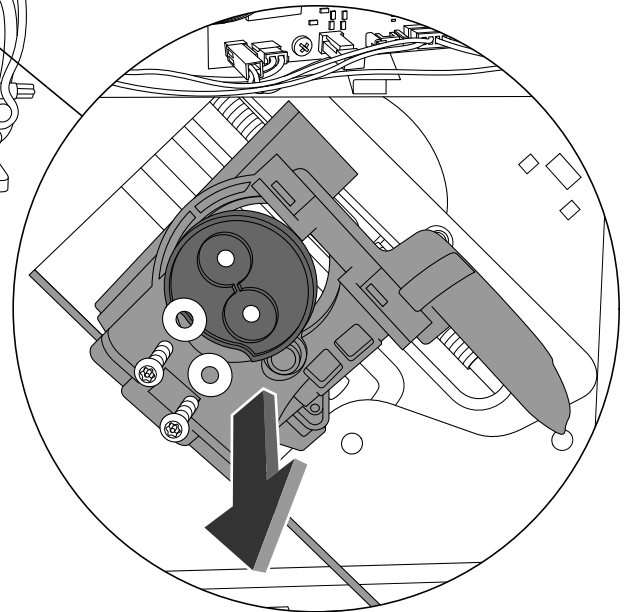

15.4
Togliere la vite di fissaggio della slitta

Ora il GRUPPO MOVIMENTAZIONE può essere estratto

15.5
Togliere le 2 viti indicate per
smontare la Scheda Sensore (cella di Hall) della
slitta

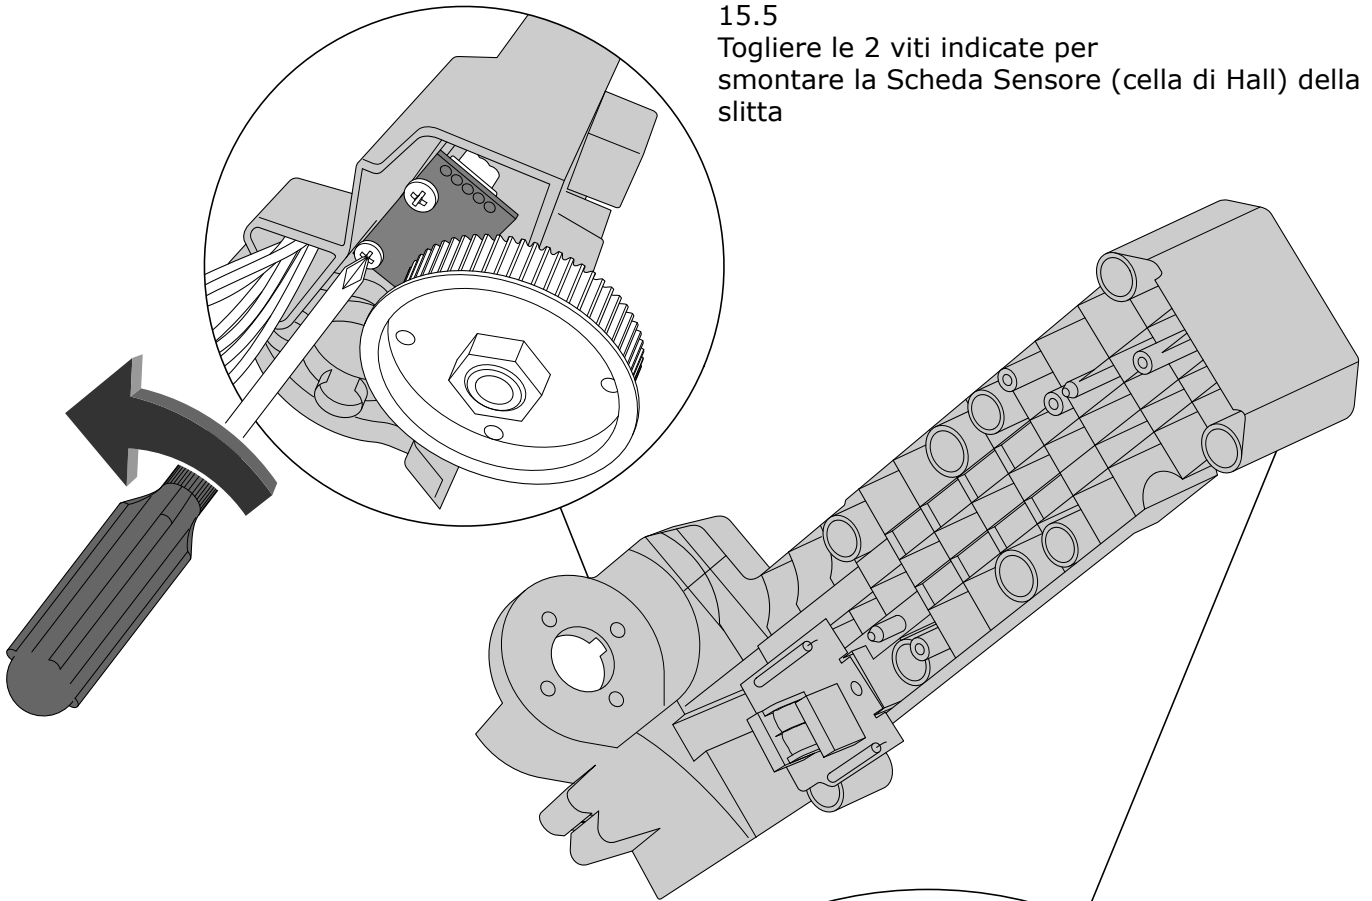

15.6
Fare attenzione, nel momento in cui
si toglie la slitta, ai 2 distanziali indicati nel
disegno
(**ATTENZIONE:** per i
distanziali vedere info
IT0181)

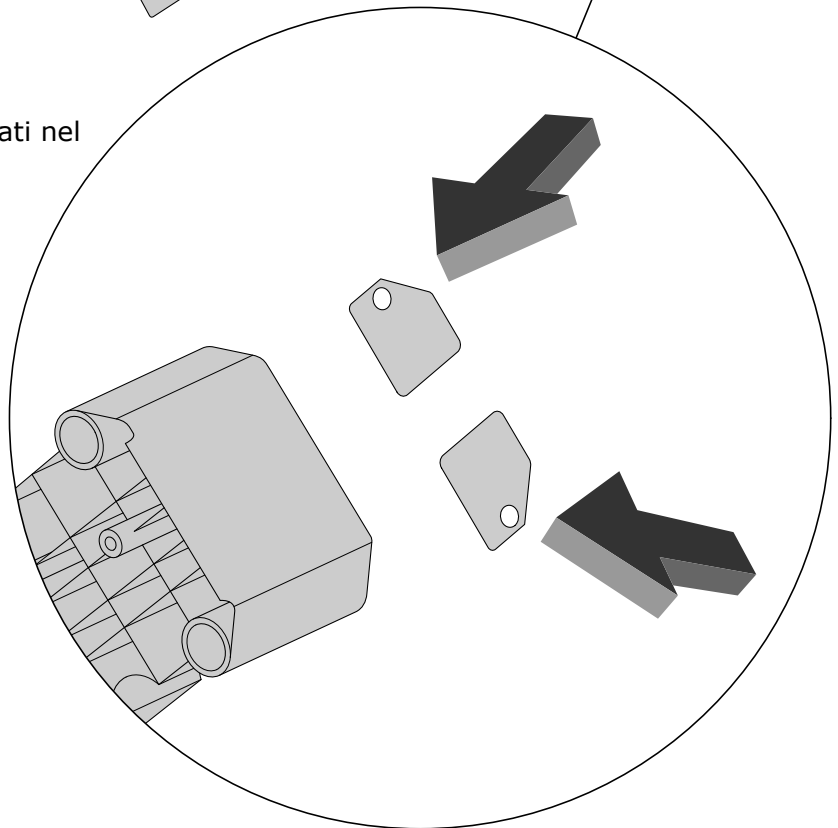


Figura 16 - **SMONTAGGIO EROGATORE CAFFE'**

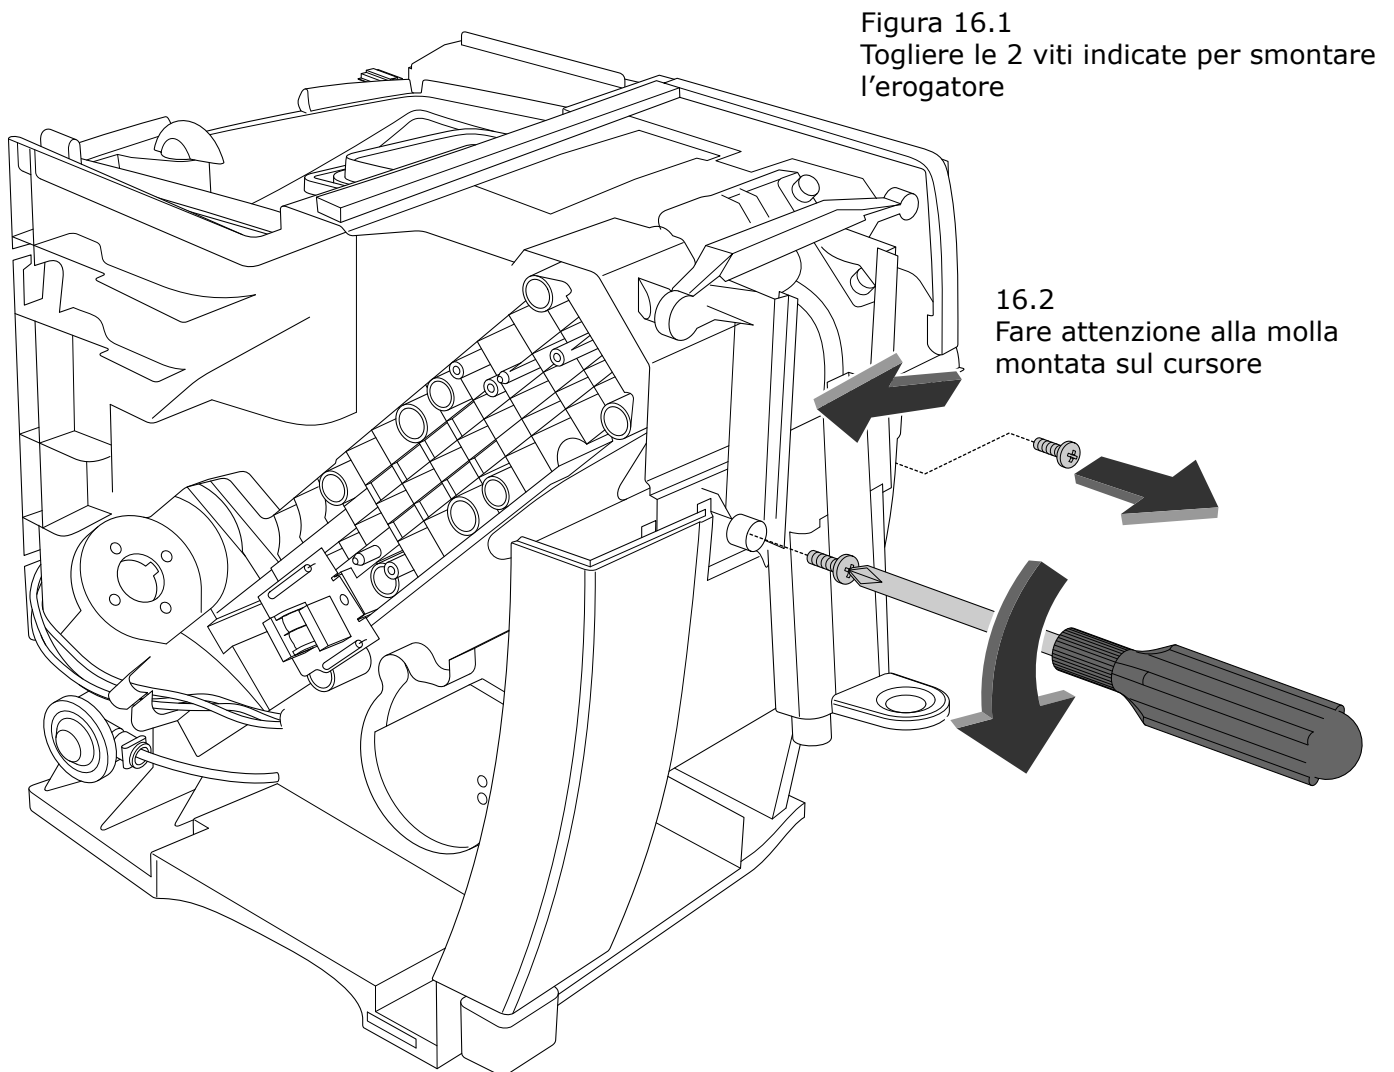


Figura 17 - SMONTAGGIO MECCANOVALVOLA
(ATTENZIONE: vedere info IT0181)

17.2
Utilizzando una chiave a brugola (4)
togliere le due viti di fissaggio della
staffa

17.1
Togliere le 2 forchine e
sfilare i tubi

17.3
Togliere la forcina e
sfilare il tubo che
dall'erogatore
arriva all'infusore

17.5
Estrarre il microint.

17.4
Per togliere il microinterruttore,
svitare la vite indicata

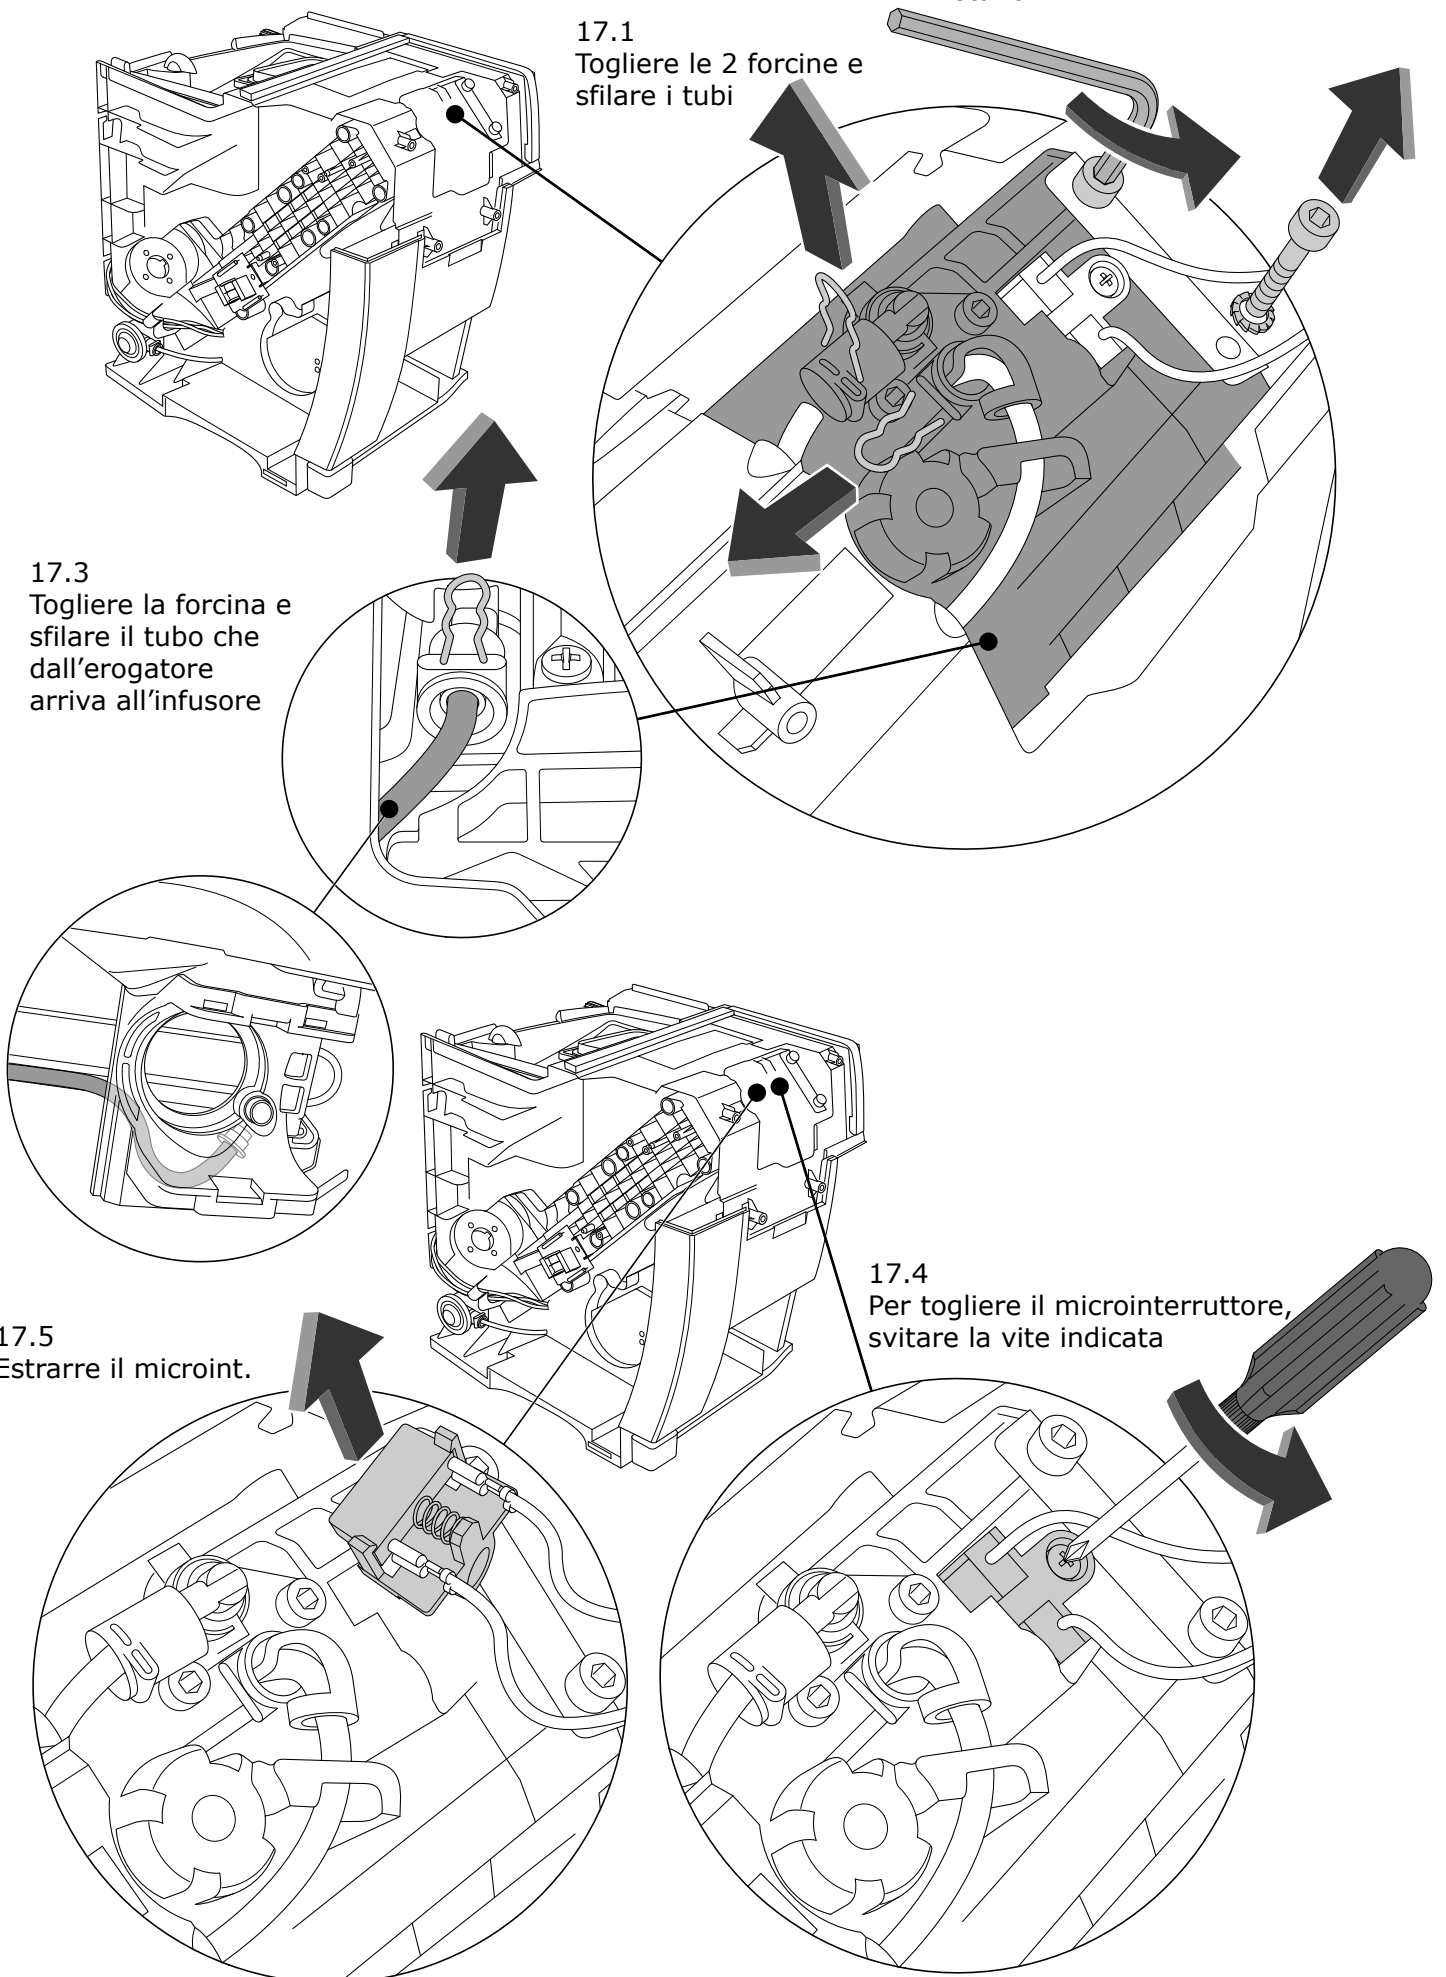


Figura 18 - ALLINEARE LA MECCANOVALVOLA

Far salire l'infusore fino a farlo arrivare a contatto della meccanovalvola, senza esercitare pressione per farli entrare in contatto: devono solo essere allineati.

Una volta completata l'operazione, fissare le due viti (fig. 18.2) con una chiave a brugola (4)


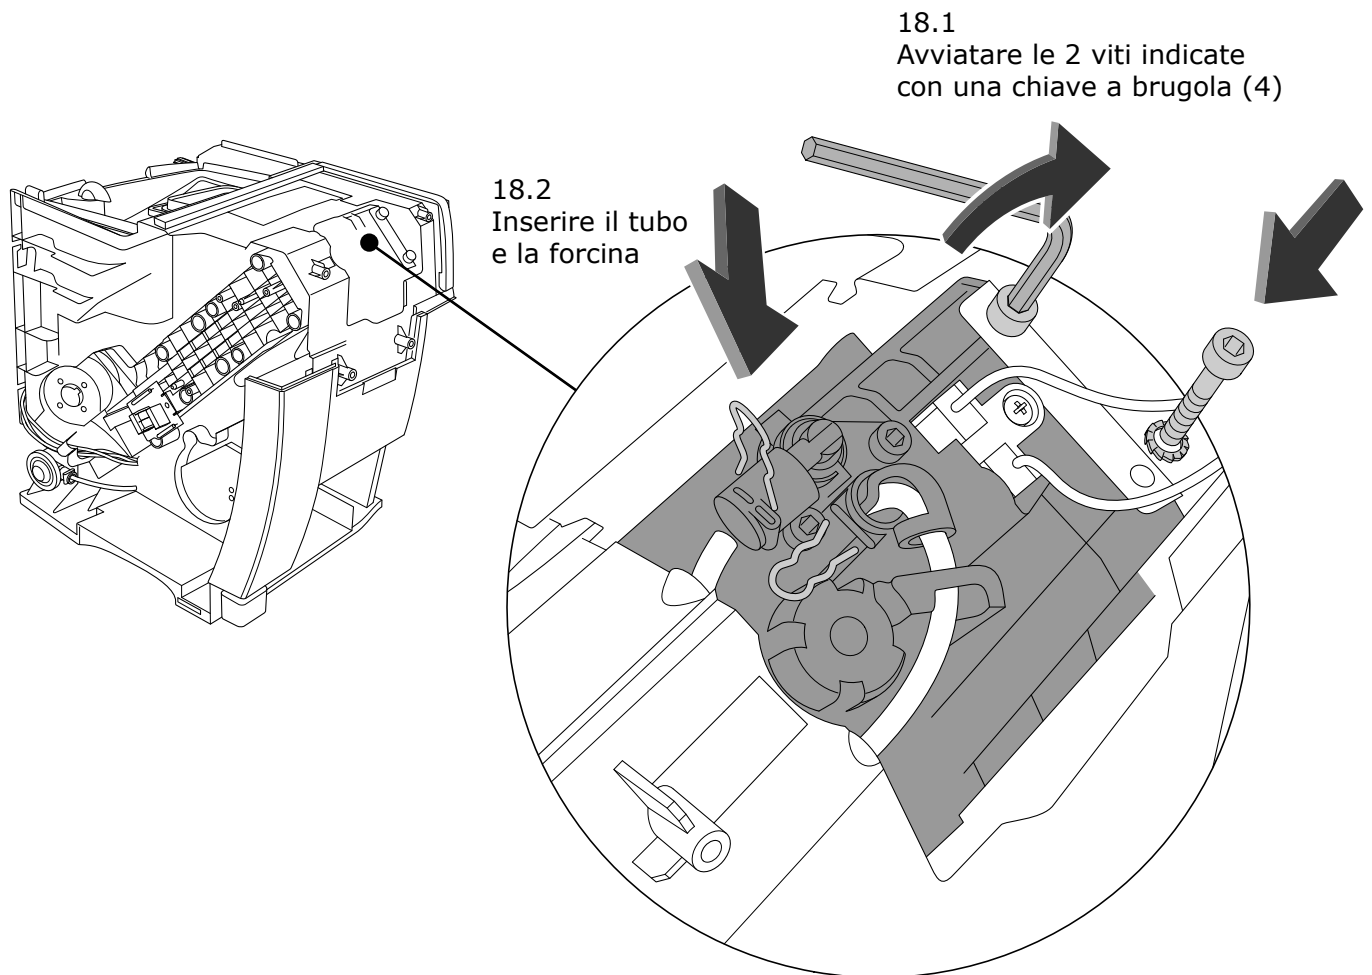


Figura 19. POSIZIONAMENTO MICROINTERRUTTORI E REED


19.1 Microinterruttore Tanica

ATTENZIONE: fate attenzione a non bypassare il micro: se doveste farlo, il motore infusore resterebbe in funzione


NOTA : I micro Tanica, Cassetto Fondi e Vapore emettono un beep quando sono aperti

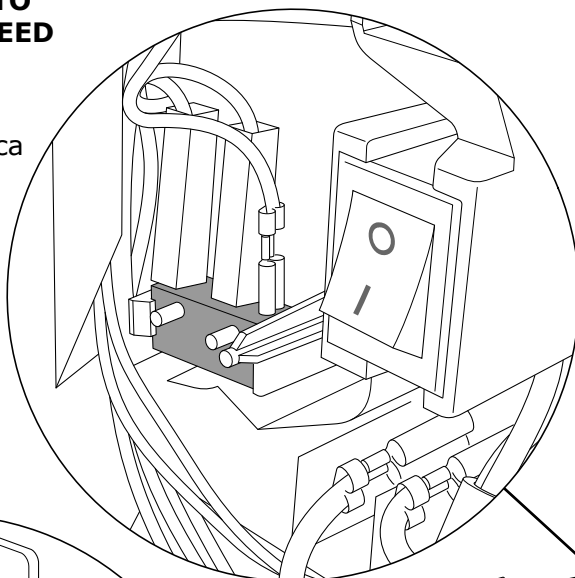

19.2 Microint. fine corsa Infusore



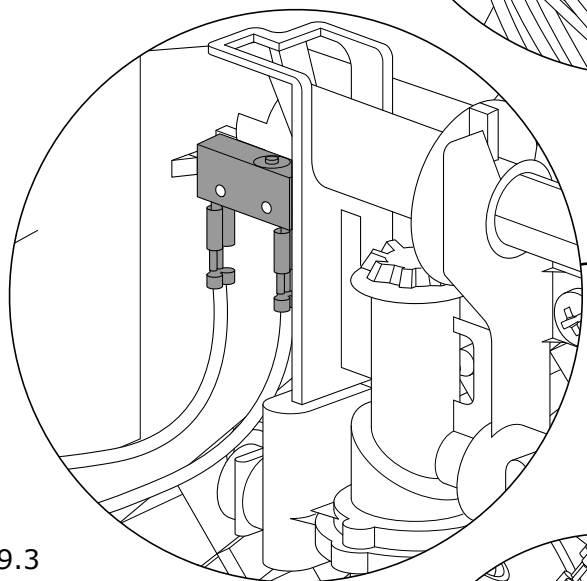


19.3 Microinterruttore Rubinetto

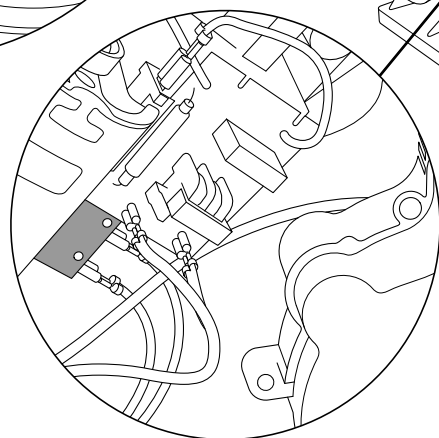


19.4 Microinterruttore inizio corsa Infusore

19.5 Microinterruttore Cassetto fondi

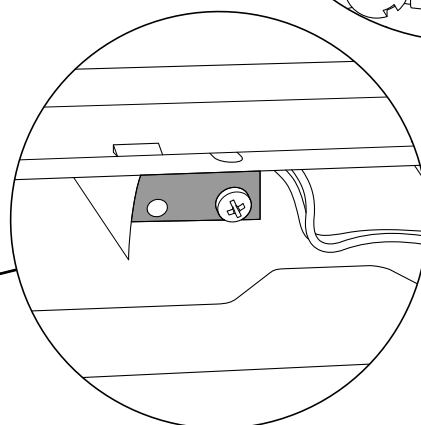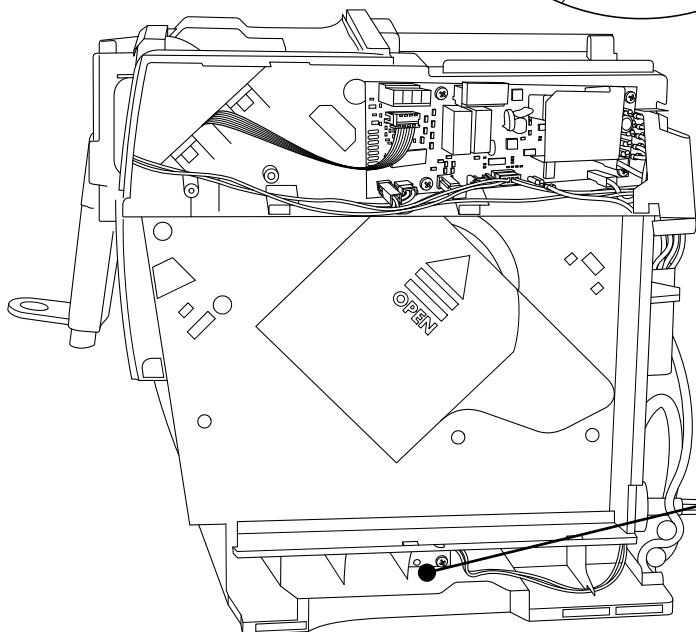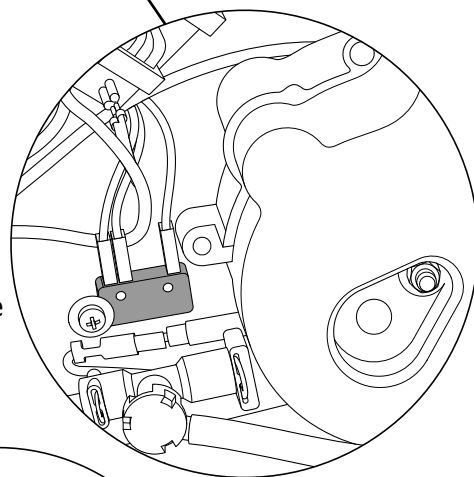



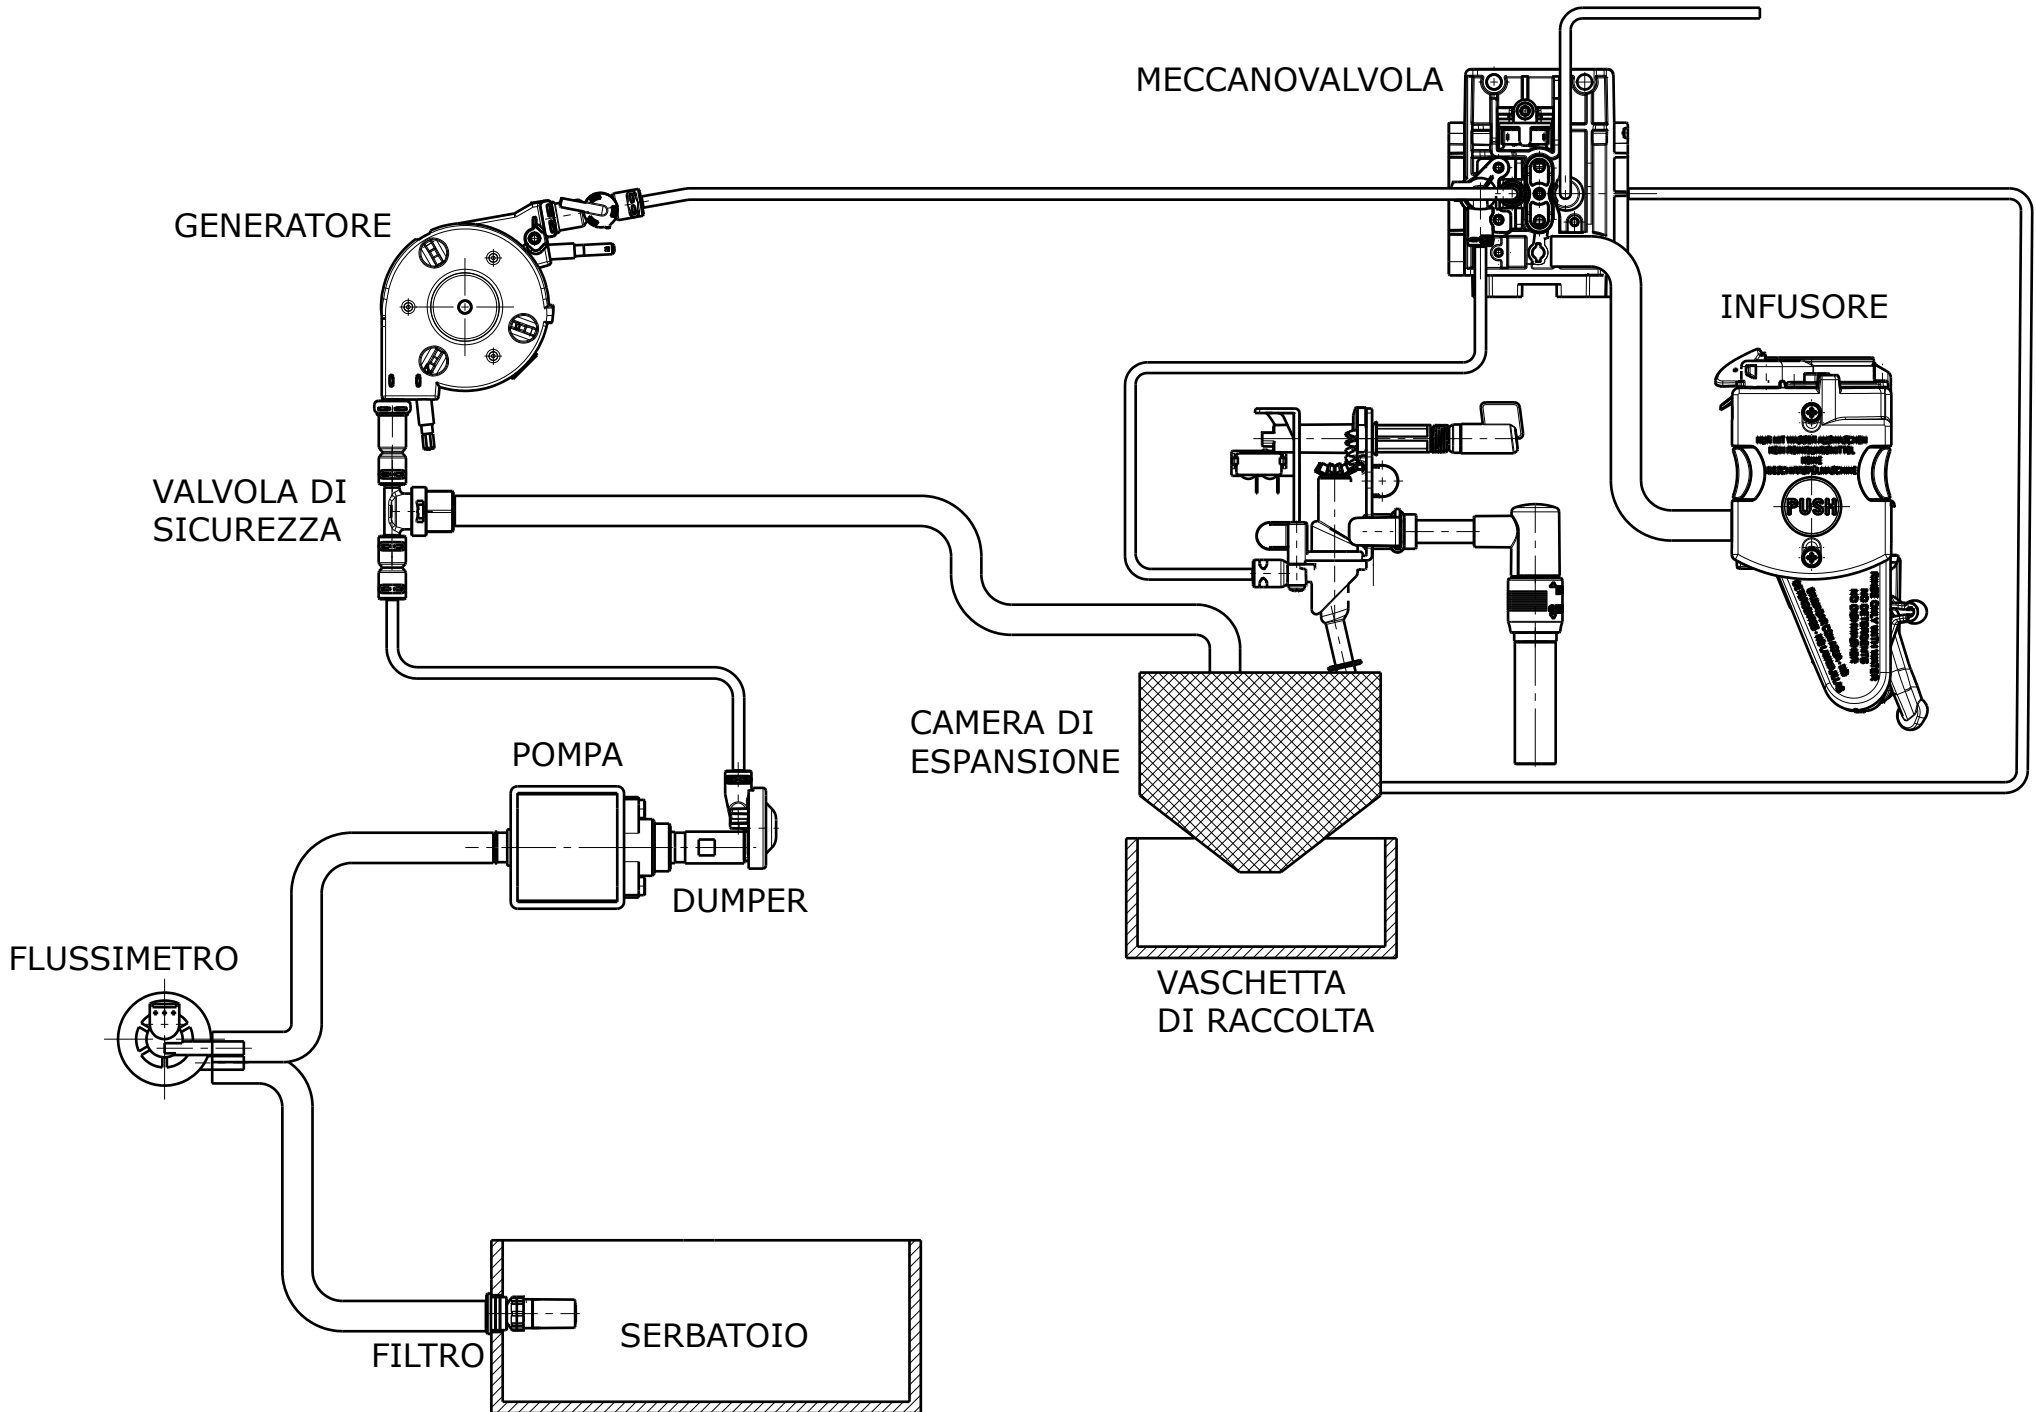



19.6 Reed tanica

SCHEMA IDRAULICO



PROCEDURA DI TEST PER LA ECAM23.420 INTENSA

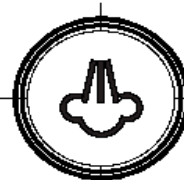











PROCEDURA	Premendo le varie icone, si alimentano i seguenti dispositivi:	
	icona	dispositivo
Chiudere il rubinetto vapore (pos. 0). Attaccare il cavo di rete. Tenere premuti i tasti: 1 Tazza + Vapore		Caldaia Caffè ON
 		Motore Macinino ON
Premere l'interruttore On/Off (pos. I)		Motore, verso l'alto "Micro fine corsa" e verso il basso "Micro inizio corsa"
NOTA: Rilasciare i tasti quando il motore quando inizia la movimentazione		Pompa Acqua ON

NOTA : I micro Tanica, Cassetto Fondi e Vapore emettono un beep quando sono aperti

Per USCIRE dalla procedura, premere l'interruttore On/Off (pos. 0) o staccare il cavo di alimentazione.

PROCEDURA DI TEST DISPLAY PER ECAM23.420 INTENSA



PROCEDURA DI TEST DISPLAY	Premendo su ciascuna icona, si visualizza il seguente messaggio	
	icona	messaggio
<p>Per entrare nella procedura di test: Attaccare il cavo di rete. Tenere premuti i tasti: 1 Tazza + Vapore</p>   <p>Premere l'interruttore On/Off (pos. 1)</p>		BUTTON 1
		BUTTON 2
		BUTTON 3
		BUTTON 4
		BUTTON 5
		BUTTON 6
		BUTTON 7
<p>Nota: Rilasciare i tasti dopo il messaggio "DISPLAY TEST MODE".</p>	<p>Girando la manopola, il Display mostrerà la barra di incremento e decremento</p> 	

NOTA: Dopo aver eseguito il test, è necessario inizializzare la macchina.

Per USCIRE dalla procedura, premere l'interruttore On/Off (pos. 0) o staccare il cavo di alimentazione.

La macchina esce automaticamente dalla procedura di test dopo 1 minuto.